

# BOND System

FULLY AUTOMATED IHC AND ISH STAINING SYSTEM

BOND 7 USER MANUAL

(NOT for use in China)



CE

Advancing Cancer Diagnostics  
Improving Lives

**Leica**  
BIOSYSTEMS

# Legal notices

This manual applies to BOND-III, BOND-MAX, BOND-PRIME, and the BOND System Controller.



Not all processing modules are available in all regions.

## Important message

Service personnel and distributors who have access to protected patients' information must treat all such information as confidential in accordance with professional ethics, accreditation standards, and legal requirements.

## Trademarks

Leica and the Leica logo are registered trademarks of Leica Microsystems IR GmbH and used under license. BOND, BOND-III, BOND-MAX, BOND-PRIME, BOND-ADVANCE, Covertile, Bond Polymer Refine Detection, Bond Polymer Refine Red Detection, Parallel Automation, Compact Polymer, and Oracle are trademarks of Leica Biosystems Melbourne Pty Ltd ACN 008 582 401. Other trademarks are the property of their owners.

## Copyright

Leica Biosystems Melbourne Pty Ltd owns the copyright on this document and any associated software. Under law, our written permission is required before either the documentation or the software is copied, reproduced, translated, or converted to electronic or other machine-readable form, in whole or in part.

Copyright © 2025 Leica Biosystems Melbourne Pty Ltd

## Product identification

Doc. 49.7556.501 A09

## Manufacturer



Leica Biosystems Melbourne Pty Ltd  
495 Blackburn Road  
Mount Waverley VIC 3149  
Australia

## Important information for all users

This manual contains important information on how to use BOND. For the latest information on Leica Biosystems products and services, visit [www.leicabiosystems.com](http://www.leicabiosystems.com).

Due to a policy of continuous improvement, Leica Biosystems reserves the right to change specifications without notice.

The following terms are used in this document:

- Leica Biosystems—refers to Leica Biosystems Melbourne Pty Ltd.
- BOND - the Leica Biosystems platform that includes the BOND-III, BOND-MAX, and BOND-PRIME
- BOND-III - a type of automated IHC and ISH staining instrument
- BOND-MAX - a type of automated IHC and ISH staining instrument
- BOND-PRIME - a type of automated IHC and ISH staining instrument
- BOND software - the software application through which users can configure and operate the BOND-III, BOND-MAX, or BOND-PRIME system

## Intended users

The intended users of a BOND System are adequately trained laboratory personnel.

Persons operating a BOND Processing Module must have received sufficient training to ensure that it is used in accordance with this document and be fully aware of any potential hazards or hazardous procedures, before operating the processing module. Only trained staff are to remove any covers or parts from the processing module, and only if instructed within this manual.

## Installation and repairs

Installation and repairs must only be carried out by qualified service personnel authorized by Leica Biosystems.

Warranty claims can be made only if the product has been used for the specified application and operated according to the instructions in this document. Damage resulting from inappropriate handling and/or misuse of the product will invalidate the warranty. Leica Biosystems cannot assume liability for any such damage.

## Serious incident reporting

The occurrence of any serious incident(s) that either has led to, or may lead to, death of a patient or user, or the temporary or permanent deterioration in the state of health of a patient or user must be reported to a local Leica Biosystems representative and the relevant local Regulatory Authority.

## Leica Biosystems protocols

The BOND system is supplied with a set of predefined Leica Biosystems protocols that cannot be edited or deleted. These predefined protocols have been validated by Leica Biosystems. However, customized protocols can be created by copying and editing the existing predefined protocols. All customized protocols must be validated in accordance with the local laboratory procedures and requirements. The ability to create and save a protocol does not indicate that it is suitable for use. Check the relevant assay Instructions For Use (IFUs) for the principles of operation and performance characteristics.

## Statement for User Data Security and Privacy

Leica Biosystems respects, and is committed to protecting, personal data security and privacy. The Leica Biosystems Privacy Notice below describes the personal data that we may collect, use and retain.

# Privacy Notice

The licensee shall comply with all applicable data protection and privacy laws in processing personal data using the BOND System, including BOND-ADVANCE, without limitation, by making all required notifications to, and obtaining all required consents from, patients and other data subjects prior to processing their personal data.

The following Personal Data is stored in the database on the BOND Controller:

- Patient Name
- Doctor Name
- Accession Number
- Doctor comments
- Patient comments
- Slide comments
- Case comments
- User account details
- Job Title
- Slide Images
- LIS Events comments
- Instrument Images

The following BOND reports could routinely contain PHI:

- Run Events
- Run Details
- Case Report
- Brief Slide History
- Data Export
- Slide Setup Summary

## Contacting Leica Biosystems

For service or support contact your local Leica Biosystems representative or see [www.LeicaBiosystems.com](http://www.LeicaBiosystems.com).

# Revision record

Rev.	Issued	Sections Affected	Detail
A09	September 2025	<p>Legal notices</p> <p>Regulatory notices</p> <p>2.6.2 BOND Universal Covertiles</p> <p>3.7 Reports</p> <p>3.12 BOND-PRIME Log Retrieval Tool</p> <p>6.5 Working with Slides</p> <p>6.9 Slide Compatibility</p> <p>7.1 Protocol Types</p> <p>7.4.3 Protocol Rules</p> <p>9.9 Export Data</p> <p>10.3.2 Information Types</p> <p>10.4.1 BDD Updates</p> <p>10.6.3 Slide Labelers</p> <p>12.13 Syringes</p> <p>18 Specifications</p>	<p>Added important message.</p> <p>Added information about leakage current limit compliance.</p> <p>Added latest Covertile design.</p> <p>Removed information about legacy reports.</p> <p>Added BOND-PRIME log retrieval instructions.</p> <p>Updated BOND-PRIME specific protocol rules.</p> <p>Updated sequential multiplex information to 4-plex throughout.</p> <p>Updated to include ZD421 printer.</p> <p>Removed syringe replacement instructions.</p> <p>Updated transport and storage specifications.</p> <p>Minor updates and corrections.</p>
A08	-	-	Not released
A07	August 2024	<p>General cautions</p> <p>13.1 Handheld Barcode Scanners</p>	<p>Added Proposition 65 caution</p> <p>Added Newland barcode scanner</p> <p>Minor corrections</p>
A06	December 2023	All	Minor corrections.
A05	-	-	Not released.
A04	January 2023	<p>8.3.1 Determining Reagent Volume</p> <p>Legal notices</p> <p>5.1.3.5 Fixing Undetected Reagents</p> <p>12.9 ID Imager</p> <p>6.6.1 Printing Labels and Applying to Slides</p>	<p>Added note to not overfill the reagent containers.</p> <p>Improved structure of information in the Legal Notices.</p> <p>Added reference to auto-identified reagents.</p> <p>Replace ID imager photo.</p> <p>Updated instructions for applying labels to slides.</p> <p>Enhanced privacy statement</p> <p>Updated network architecture diagrams</p>
A03	April 2022	<p>Important information for all users</p> <p>1.4 Running a Protocol – Workflows</p> <p>7.3 Creating New Protocols</p> <p>7.4 Editing User Protocols</p> <p>6.5.8 Dispense Volumes and Tissue Position on Slides</p> <p>9.5 Run Details Report</p> <p>9.6 Case Report</p> <p>9.10 Brief Slide History</p> <p>2.2.13 Back Cover</p> <p>14.2.3 Dewaxing and Baking</p>	<p>Updated term definitions.</p> <p>Added details about hydration.</p> <p>Improved creating and editing protocols procedures.</p> <p>Added detail about dispense volumes.</p> <p>Added BOND-PRIME Report Details, Case Report, and Brief Slide History.</p> <p>Updated Rear Panel images.</p> <p>Updated to include BOND-PRIME baking and waxing.</p> <p>Updated barcodes for Zebra DS2208 Barcode Scanner.</p>

Rev.	Issued	Sections Affected	Detail
		13.1.2.2 Zebra DS2208 Barcode Scanner	
A02	January 2022	Glossary of symbols Regulatory notices Operating Specifications Important information for all users General warnings Instrument Decommissioning and Disposal	Updated with new information to support IVDR.
A01	April 2021	All	New version for BOND systems running BOND 7 software.

# General warnings

Warnings are notifications of hazards that could lead to personal injury, or where there is the possibility of losing, damaging, or misidentifying patient samples. Follow all safety precautions to avoid personal injury, damage, loss or misidentification of patient samples, and damage to equipment.

Warnings use symbols with a black border and yellow background.

General BOND warnings appear below. Other warnings appear in the relevant sections in the manual.

## Processing module operation



To avoid contamination of reagents and slides, the processing module should be operated in a clean environment as free as possible from dust and particulate matter.



To ensure correct operation of the processing module, place each bulk reagent container into its correct station in the cavity, as indicated by the color-coded name labels. Failure to do so may compromise staining.

For further details, see [2.2.7 Bulk Containers Cavity](#)



Check bulk container levels and fill or empty, as appropriate, at the start of each day (more frequently if required – see [12.2.1 Checking Container Levels](#)). Failure to do so can result in staining runs being interrupted to remove containers, which can compromise staining.



For BOND-MAX, if a bulk container needs filling during processing always check the **Protocol status** screen and confirm that the container is not being used, or is not about to be used. Failure to do so may compromise slides being processed. Return the container immediately after filling – see [12.2.2.5 During Runs](#). To avoid this situation check bulk container levels in between each protocol – see [12.2.1 Checking Container Levels](#)).

BOND-III bulk containers do not need to be removed for filling – see [12.2.2.1 Refill Bulk Reagent – BOND-III](#). To avoid this situation check bulk container levels daily (more frequently if required – see [12.2.1 Checking Container Levels](#)).



BOND does not require network access to function and perform its intended use. To prevent malicious or unauthorized access, install BOND without any connection to your network / infrastructure.

If you would like network connection, the preferred method is to connect BOND to a firewalled Virtual Local Area Network (VLAN). Alternatively, you can implement and validate your own network security mechanisms in accordance with your standard operating procedures.

For more information, refer to the BOND Information Systems Guide.



A malware infection on a BOND controller could lead to unexpected behaviors in operation, including disabling processing modules. Please take care to ensure your USB storage devices are virus free before connecting them to the BOND controller. Further, Leica Biosystems does not pre-install an anti-virus solution; we recommend that you install your own enterprise anti-virus product.

For more information, refer to the BOND Information Systems Guide.

## Controls



Adequate laboratory control measures **MUST** be established and maintained to ensure an appropriate staining result for each slide. Leica Biosystems strongly recommends placing appropriate control tissue on the same slides as patient tissue.

## Chemical Hazards



Some of the reagents used in immunohistochemistry and in situ hybridization are hazardous. Ensure you have received adequate training for this procedure before continuing:

- Wear latex or nitrile gloves, safety glasses, and other suitable protective clothing when handling reagents or cleaning the processing module.
- Handle and dispose of reagents and condensate in accordance with all procedures and government regulations that apply at the laboratory site.



Reagent containers can tip during transit, leaving reagent residue around the cap. Always wear approved eye protection, gloves and protective clothing when opening reagent containers.



Potentially hazardous reagents can collect around the slide staining assemblies and contaminate the slide trays. Always wear approved protective clothing and gloves when handling slide trays.



Some of the reagents used on BOND Processing Modules are flammable:

- Do not place a flame or ignition source near the processing modules.
- Ensure all bulk container caps are properly sealed after refilling or emptying.



The processing modules have heaters and heated surfaces that can be ignition dangers if flammable materials are placed in close proximity:

- Do not place flammable materials on or near heaters.
- Do not place flammable materials on any hot surfaces on the processing module.
- Ensure all bulk container caps are properly sealed after refilling or emptying.

## Mechanical Hazards



Take care when closing the processing module lid, ensuring hands are kept clear to avoid injury.



During operation the main robot, the aspirating probe, syringe pumps and bulk fluid robots (BOND-III) can move without warning and with a speed that can cause injury.

- Do not attempt to open the processing module lid while a run is in progress.
- Do not attempt to by-pass the interlocks that prevent operation of the processing module when the lid is opened.
- Ensure syringe pump covers are in place during operation.



Avoid contact with slide staining assemblies and their surrounds. These may be hot and cause severe burns. Allow twenty minutes after the cessation of operation for the slide staining assemblies and their surrounds to cool.



Contact customer support to relocate the processing module over a large distance or to transport for repair or disposal. The processing module is heavy and is not designed to be moved by a single user.



Ensure that the syringe door is closed (BOND-MAX) or the syringe cover is fitted (BOND-III) during normal operation. If a syringe or a syringe fitting becomes loose, reagent under pressure can spray from the syringe.



Contact customer support immediately if the main robot and/or bulk fluid robots continue to operate for more than five seconds after the processing module lid has been opened.



Do not move the main robot arm while the processing module is switched on. The robot can become misaligned, resulting in poor staining.

If the robot has been moved: power down the processing module, wait 30 seconds and then reinitialize.



Always switch the processing module off when performing cleaning or maintenance tasks (except for automated cleaning tasks, such as cleaning the aspirating probe).



The BOND-III bulk fluid robots move along the slide staining assemblies to allow users access for cleaning. Only operators who have been warned of the potential hazards and have received adequate training should carry out this procedure.



The slide staining assemblies contain moving parts that can cause serious injury. Keep fingers clear of the slide staining assembly opening when the processing module is in operation.

Before attempting to manually unlock the slide staining assemblies: turn the processing module power switch off, turn the mains power off, and disconnect the mains power supply plug at the wall.



The syringe pump module (BOND-III) is heavy and can fall forward when released. Only operators who have been warned of the potential hazards and have received adequate training should carry out this procedure.



Do not use the two black handles on the back cover of the BOND-III to lift the processing module.

## Electrical hazards



Do not remove the processing module covers or attempt to access internal components. Dangerous voltages are present inside the BOND Processing Module and only qualified service technicians approved by Leica Biosystems should perform these tasks.



Do not change the processing module's operating voltage. Severe damage can occur if the processing module is connected to an incorrect power supply voltage. Contact customer support to have the setting changed.



The processing module must be connected to an earthed mains power outlet socket, and be positioned so that personnel are easily able to disconnect the mains power cable without having to move the processing module.



Do not bypass or short-circuit fuses.

Turn off the processing module and disconnect the power cord before changing fuses. Replace fuses only with standard parts and if fuses blow repeatedly, contact customer support.

## General cautions

Cautions are notifications of hazards that could lead to damage to the BOND equipment or other adverse consequences that do not endanger people.

Cautions use symbols with a black border and white background.

General BOND cautions appear below. Other cautions appear in relevant sections in the manual.

## Installation hazards



Do not block the ventilation openings located on the back cover of the processing module. Also, do not cover the ventilation openings located on the syringe door (BOND-MAX).

## Operational hazards



Position all parts of the slide label within all slide edges. An exposed sticky surface can cause the slide label (and slide) to stick to the Covertile or other equipment and damage the slide.



Do not remove the small liquid level sensor cap from a bulk container (BOND-MAX) as it can be damaged. Empty and refill bulk containers through the large fill/empty cap only.



Clean all removable components by hand only. To avoid damage, do not wash any component in an automatic dishwashing machine. Do not clean any part with solvents, harsh or abrasive cleaning fluids, or harsh or abrasive cloths.



Do not use Q-tips or other cotton tipped applicators to clean inside the wash block holes or the slide staining assembly wicking posts, as the cotton tip can come off and cause a blockage.



Do not force bulk containers back into position, as this can damage the container and liquid sensor.



Do not use damaged slides. Ensure all slides are correctly aligned on the slide trays, and that all Covertiles are correctly positioned (see [2.6.2 BOND Universal Covertiles](#)), before loading into the processing module.



Ensure the syringe module (BOND-III) is fully closed before starting a run or initializing the processing module (see [12.4.2 Manually Unlocking Slide Staining Assemblies](#)). Failure to do so can result in damage to the syringes during operation.



Ensure the bulk fluid robots (BOND-III) are in the home position at the rear of the processing module, and not positioned along the slide staining assemblies before cleaning or removing the top plate.



This product can expose you to chemicals including lead, which are known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, go to <https://www.P65Warnings.ca.gov>.

## Reagent hazards



Unsatisfactory staining results and potential damage to the processing module can occur if incompatible solutions are allowed to come in contact with each other. Contact Leica Biosystems to determine whether the solutions are compatible.



Do not use xylene, chloroform, acetone, strong acids (e.g. 20% HCl), strong alkalis (e.g. 20% NaOH) on BOND Processing Modules. If any of these chemicals spill on or near a BOND Processing Module, clean the spill immediately with 70% alcohol to prevent damage to the processing module covers.



Use only BOND Dewax Solution on BOND-III and BOND-MAX Processing Modules, or BOND-PRIME Dewax Solution on BOND-PRIME Processing Modules. Do not use xylene, xylene substitutes and other reagents that can degrade parts of the BOND system and cause fluid leakage.

# Regulatory notices

## Intended use



The BOND System automates clinical protocols for immunostaining of pathology specimens mounted on microscope slides. Microscope slides subsequently undergo interpretation by a qualified healthcare professional to aid diagnosis.

## FCC compliance

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

To maintain compliance use only the cables supplied with the instrument.



**WARNING:** Any changes or modifications not expressly approved by Leica Biosystems could void the user's authority to operate this equipment.

## CE marking



The CE Mark signifies compliance with the applicable EU Directives as listed on the manufacturer declaration of conformity.

## Instructions for in vitro diagnostic equipment for professional use

This IVD equipment complies with the emission and immunity requirements of IEC 61326 part 2-6 and IEC 60601 part 1-2.

This IVD equipment complies with the leakage current limit of 3.5 mA specified in IEC 61010. This limit applies to devices classified as non-patient-contact laboratory equipment.

The electromagnetic environment should be evaluated prior to operation of the device.

Do not use this device in close proximity to sources of strong electromagnetic radiation (e.g. unshielded intentional RF sources) and/or magnetic fields, as these can interfere with the proper operation.



**WARNING:** This equipment was designed and tested to CISPR 11 Class A. In a domestic environment it may cause radio interference, in which case you may need to take measures to mitigate the interference.

Computer regulatory requirements: UL Listed (UL 60950), IEC 60950 certified.



**CAUTION:** Federal Law restricts this device to sale by or on the order of a licensed healthcare practitioner.

## Classification of equipment under CISPR 11 (EN 55011)

This equipment is classified as Group 1 Class A under CISPR 11 (EN 55011). The explanation for group and class is described below.

**Group 1** - This is applicable for all equipment which is not classified as group 2 equipment.

**Group 2** - This is applicable for all ISM RF equipment in which radio - frequency energy in the frequency range 9 kHz to 400 GHz is intentionally generated and used or only used, in the form electromagnetic radiation, inductive and/ or capacitive coupling, for the treatment of material or inspection/ analysis purposes.

**Class A** - This is applicable for all equipment suitable for use in all establishments other than domestic and those directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

**Class B** - This is applicable for all equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

## Definitions

ISM: Industrial, Scientific and Medical

RF: Radio Frequency

# Glossary of symbols

This section describes the regulatory and safety symbols used in the product labeling.

## Regulatory symbols

Explanation of the regulatory symbols used for BOND.



This glossary provides images of the symbols as presented in the relevant standards, however, some of the symbols may vary in color.

The following is a list of symbols used on the product labeling and their meaning.

### ISO 15223-1

Medical devices – symbols to be used with medical device labels, labeling and information to be supplied – Part 1: General requirements.

Symbol	Standard/ Regulation	Reference	Description
	ISO 15223-1	5.1.1	<b>Manufacturer</b> Indicates the medical device manufacturer.
	ISO 15223-1	5.1.2	<b>Authorized representative in the European community</b> Indicates the Authorized representative in the European Community.
	ISO 15223-1	5.1.3	<b>Date of manufacture</b> Indicates the date when the medical device was manufactured.
	ISO 15223-1	5.1.4	<b>Use by (expiration date)</b> Indicates the date after which the medical device is not to be used.
	ISO 15223-1	5.1.5	<b>Batch code</b> Indicates the manufacturer's batch code so that the batch or lot can be identified.
	ISO 15223-1	5.1.6	<b>Catalog number / Reference number</b> Indicates the manufacturer's catalog number so that the medical device can be identified.
	ISO 15223-1	5.1.7	<b>Serial number</b> Indicates the manufacturer's serial number so that a specific medical device can be identified.

Symbol	Standard/ Regulation	Reference	Description
	ISO 15223-1	5.1.8	<b>Importer</b> Indicates the entity importing the medical device into the European Union.
	ISO 15223-1	5.1.9	<b>Distributor</b> Indicates the entity distributing the medical device into the locale.
	ISO 15223-1	5.3.1	<b>Fragile: handle with care</b> Indicates a medical device that can be broken or damaged if not handled carefully.
	ISO 15223-1	5.3.4	<b>Keep away from rain</b> Indicates that the transport package shall be kept away from rain and in dry conditions.
	ISO 15223-1	5.3.7	<b>Temperature limit</b> Indicates the temperature limits to which the medical device can be safely exposed.
	ISO 15223-1	5.4.2	<b>Do not re-use</b> Indicates a medical device that is intended for one use, or for use on a single patient during a single procedure.
	ISO 15223-1	5.4.3	<b>Consult instructions for use</b> Indicates the need for the user to consult the instructions for use.
	ISO 15223-1	5.4.4	<b>Caution</b> Indicates the need for the user to consult the instructions for use for important cautionary information such as warnings and precautions that cannot, for a variety of reasons, be presented on the medical device itself.
	ISO 15223-1	5.5.1	<b>In Vitro Diagnostic medical device</b> Indicates a medical device that is intended to be used as an in vitro diagnostic medical device.

## ISO 7000




Graphical symbols for use on equipment – Registered symbols.


Symbol	Standard/ Regulation	Reference	Description
	ISO 7000	1135	<b>Recycle</b> Indicates that the marked item or its material is part of a recovery or recycling process.

Symbol	Standard/ Regulation	Reference	Description
	ISO 7000	1640	<b>Technical manual: manual for service</b> Identifies the location where the handbook is stored or to identify information that relates to the servicing instructions for the equipment. To indicate that the service manual or handbook should be considered when servicing the device close to where the symbol is placed.
	ISO 7000	2594	<b>Ventilation open</b> Identifies the control that allows outside air into interior environment.
	ISO 7000	3650	<b>USB</b> Identifies a port or plug as meeting the generic requirements of the Universal Serial Bus (USB). To indicate that the device is plugged into a USB port or is compatible with a USB port.

## IEC 60417

Graphical symbols for use on equipment.

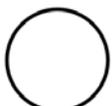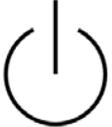
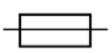
Symbol	Standard/ Regulation	Reference	Description
	IEC 60417	5007	<b>On</b> Indicates connection to the mains, at least for mains switches or their positions, and all those cases where safety is involved
	IEC 60417	5008	<b>Off</b> Indicates disconnection from the mains, at least for mains switches or their positions, and all those cases where safety is involved
	IEC 60417	5009	<b>Stand-by</b> Identifies the switch or switch position by means of which part of the equipment is switched on in order to bring it into the standby condition
	IEC 60417	5016	<b>Fuse</b> Identifies fuse boxes or their location.
	IEC 60417	5019	<b>Protective earth: protective ground</b> A terminal that is intended for connection to an external conductor for protection against electric shock in case of a fault, or the terminal of a protective earth (ground) electrode.
	IEC 60417	5032	<b>Single phase alternating current</b> Indicates on the rating plate that the equipment is suitable for alternating current only; to identify relevant terminals.

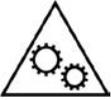Symbol	Standard/ Regulation	Reference	Description
	IEC 60417	5134	<b>Electrostatic Sensitive Devices</b> Packages containing electrostatic sensitive devices, or a device or a connector that has not been tested for immunity to electrostatic discharge.
	IEC 60417	5988	<b>Computer network</b> Identifies the computer network itself or to indicate the connecting terminals of the computer network.
	IEC 60417	6040	<b>Warning: Ultraviolet radiation</b> Alert for the presence of UV light within the product's enclosure that may be of sufficient magnitude to constitute a risk to the operator. Turn off the UV lamp before opening. Use UV radiation eye and skin protection during servicing.
	IEC 60417	6057	<b>Caution: moving parts</b> An instructional safeguard to keep away from moving parts.
	IEC 60417	6222	<b>Information: general</b> Identifies the control to examine the status of the equipment, e.g. multifunctional copying machines

## Other symbols and markings

Symbol	Standard/ Regulation	Description
	21 CFR 801.15(c)(1) (i)F	<b>Prescription only</b> Recognized by the US FDA as an alternate to "Caution: Federal law restricts this device to sale by or on the order of a licensed practitioner."
	The instrument Declaration of Conformity lists the Directives with which the system complies	<b>European Conformity</b> The instrument Declaration of Conformity lists the Directives with which the system complies.

Symbol	Standard/ Regulation	Description
	Directive 2012/19/EC EU: waste electrical and electronic equipment (WEEE)	<p><b>Waste Electrical and Electronic Equipment (WEEE) Directive</b> The electronic product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling.</p> <p>The presence of this label indicates that:</p> <ul style="list-style-type: none"> <li>• The device was put on the European Market after August 13, 2005.</li> <li>• The device is not to be disposed of via the municipal waste collection system of any member state of the European Union.</li> </ul> <p>Customers must understand and follow all laws regarding the correct decontamination and safe disposal of electrical equipment.</p>
	AS/NZS 4417.1	<p><b>Regulatory Compliance Mark (RCM)</b> Indicates compliance with the Australian Communications Media Authority (ACMA) requirements (safety and EMC) for Australia and New Zealand.</p>
	People's Republic of China Electronic Industry Standard SJ/T11364	<p><b>Restriction of Hazardous Substances (RoHS 2)</b> Indicates that this electronic information product contains certain toxic or hazardous elements, and can be used safely during its environmental protection use period. The number in the middle of the logo indicates the environmental protection use period (in years) for the product. The outer circle indicates that the product can be recycled. The logo also signifies that the product should be recycled immediately after its environmental protection use period has expired. The date on the label indicates the date of manufacture.</p>
	People's Republic of China Electronic Industry Standard SJ/T11364	<p><b>Restriction of Hazardous Substances (RoHS 2)</b> Indicates that this electronic information product does not contain any hazardous substances, or they do not exceed the concentration limits specified in GB/T 26572. It is a green environmentally friendly product that can be recycled.</p>
	Title 47 United States Code of Federal Regulations Part 15	<p><b>Federal Communications Commission (FCC)</b> This product has been tested and found to comply with the limits pursuant to part 15 of the FCC Rules.</p>
	N/A	<p><b>Underwriters Laboratory (UL) certification mark</b> Underwriter Laboratories have certified that the listed products comply with both US and Canadian safety requirements.</p>

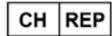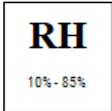Symbol	Standard/ Regulation	Description
	CSA International	<b>Listed device with CSA Group testing agency</b> CSA Group have certified that the listed products comply with both US and Canadian safety requirements.
	N/A	<b>Listed device with Intertek testing agency</b> Intertek Testing Agency have certified that the listed products comply with both US and Canadian safety requirements.
	Ordinance on In Vitro Diagnostic Medical Devices (IvDO) of 4 May 2022.	<b>Swiss Authorised Representative</b> Indicates the Swiss Authorised representative.
	N/A	<b>Relative humidity range</b> Indicate the acceptable upper and lower limits of relative humidity for transport and storage. This symbol is accompanied by the applicable relative humidity limits.
	N/A	<b>Unconnected port</b> This product has an unconnected port on the syringe pump.

## Safety symbols

Explanation of the safety symbols used for BOND.

### ISO 7010

Graphical symbols – Safety colors and safety signs – Registered safety signs.

Symbol	Standard/ Regulation	Reference	Description
	ISO 7010	W001	<b>General warning</b> Indicates the need for the user to consult the instructions for use for important cautionary information such as warnings and precautions that cannot, for a variety of reasons, be presented on the medical device itself.
	ISO 7010	W004	<b>Warning: laser beam</b> Laser hazard. Potential for severe eye damage. Avoid direct eye contact with laser beams.
	ISO 7010	W009	<b>Warning: biological hazard</b> Biological hazard. Potential exposure to a biological hazard. Follow directions in the accompanying documentation to avoid exposure.

Symbol	Standard/ Regulation	Reference	Description
	ISO 7010	W012	<b>Caution: risk of electric shock</b> Electrical hazard. Potential risk of electric shock. Follow directions in the accompanying documentation to avoid damage to persons or equipment.
	ISO 7010	W016	<b>Warning: toxic material</b> Toxic hazard. Potential danger of severe health impacts if proper chemical handling procedures are not followed. Use gloves and protective eye wear when handling reagents.
	ISO 7010	W017	<b>Warning: hot surface</b> Heat hazard. Hot surfaces will cause burns if touched. Avoid touching parts identified with this symbol.
	ISO 7010	W020	<b>Warning: Overhead obstacle</b> Overhead obstacle. Take care to avoid being struck by or walking into an overhead obstacle.
	ISO 7010	W021	<b>Warning: flammable material</b> Flammable hazard. Flammable materials may ignite if proper precautions are not followed.
	ISO 7010	W022	<b>Warning: Sharp element</b> Sharp element. Take care to avoid injury from sharp elements (e.g. needles, blades).
	ISO 7010	W023	<b>Warning: corrosive substance</b> Chemical hazard from a corrosive substance. There is a danger of severe health impacts if proper precautions are not followed. Always wear protective clothing and gloves. Immediately clean up spills using standard laboratory practice.
	ISO 7010	W024	<b>Warning: crushing of hands</b> Crush hazard. Hands or body parts can be crushed by a closing motion of mechanical parts of equipment.
	ISO 7010	W072	<b>Warning: Environmental hazard</b> Environmental hazard. Substance or mixture that can cause an environmental hazard.

# Table of contents

<b>1</b>	<b>Introduction</b> .....	<b>29</b>
1.1	System Overview .....	29
1.2	Getting Help .....	30
1.3	First Steps .....	31
1.4	Running a Protocol – Workflows .....	32
1.4.1	BOND-III and BOND-MAX .....	32
1.4.2	BOND-PRIME .....	34
<b>2</b>	<b>Hardware</b> .....	<b>35</b>
2.1	The BOND System .....	36
2.1.1	BOND Ancillary Products .....	37
2.2	BOND-III and BOND-MAX Processing Modules .....	38
2.2.1	Main Components .....	38
2.2.2	Processing Module Initialization .....	44
2.2.3	Lid .....	44
2.2.4	Main Robot and ID Imager .....	45
2.2.5	Slide Staining Assemblies .....	46
2.2.6	Front Cover .....	47
2.2.7	Bulk Containers Cavity .....	50
2.2.8	Aspirating Probe .....	56
2.2.9	Wash Block and Mixing Station .....	56
2.2.10	Bulk Fluid Robots (BOND-III only) .....	57
2.2.11	Syringes .....	59
2.2.12	Power Switch .....	60
2.2.13	Back Cover .....	61
2.3	BOND Controller and Terminals .....	63
2.4	Handheld Barcode Scanner .....	64
2.4.1	Using the Handheld Barcode Scanner .....	64
2.5	Slide Labeler .....	65
2.6	Ancillary Equipment .....	66
2.6.1	Slides .....	66
2.6.2	BOND Universal Covertiles .....	67
2.6.3	Slide trays .....	68

---

2.6.4	Reagent trays .....	68
2.6.5	Reagent Systems and Containers .....	69
2.7	Relocating a Processing Module .....	70
2.8	Instrument Decommissioning and Disposal .....	70
<b>3</b>	<b>Software Overview (on BOND Controller) .....</b>	<b>71</b>
3.1	System Architecture .....	72
3.1.1	Single-Seat Configuration .....	72
3.1.2	BOND-ADVANCE .....	73
3.2	Starting and Shutting Down the BOND Software .....	75
3.2.1	Start the BOND software .....	75
3.2.2	Set or change your BOND-PRIME Processing Module PIN .....	76
3.2.3	Desktop Backgrounds .....	77
3.2.4	Shut down the BOND software .....	78
3.3	User Roles .....	78
3.4	Clinical Client Interface Overview .....	79
3.4.1	Function Bar .....	79
3.4.2	Processing Module Tabs .....	81
3.4.3	Sorting Tables .....	81
3.4.4	Date Format .....	81
3.5	BOND-ADVANCE Dashboard .....	82
3.5.1	Dashboard icons .....	83
3.5.2	Slide Staining Assembly Status .....	83
3.6	Notifications, Warnings, and Alarms .....	84
3.7	Reports .....	85
3.8	Help .....	86
3.9	About BOND .....	87
3.9.1	Service Log .....	88
3.10	BOND Data Definitions .....	88
3.10.1	Data Definitions Updates .....	88
3.11	Software Updates .....	88
3.12	BOND-PRIME Log Retrieval Tool .....	89
3.12.1	Retrieve BOND-PRIME logs .....	89
3.12.2	Delete retrieved logs .....	92

<b>4</b>	<b>Quick Start</b> .....	<b>93</b>
4.1	BOND-III and BOND-MAX .....	93
4.1.1	Preliminary Checks and Startup .....	94
4.1.2	Protocol and Reagent Checks .....	94
4.1.3	Setting Up Slides .....	95
4.1.4	Loading the Reagents .....	100
4.1.5	Running the Protocol .....	103
4.1.6	Finishing .....	104
4.2	BOND-PRIME .....	105
4.2.1	Preliminary Checks and Startup .....	105
4.2.2	Protocol and Reagent Checks .....	105
4.2.3	Setting Up Slides .....	105
4.2.4	On the BOND-PRIME Processing Module .....	105
<b>5</b>	<b>BOND-III and BOND-MAX Status Screens (on BOND Controller)</b> .....	<b>106</b>
5.1	System Status Screen .....	107
5.1.1	Processing Module Tabs .....	108
5.1.2	Hardware Status .....	109
5.1.3	Reagent Status .....	111
5.1.4	Slide Information .....	119
5.1.5	On-Board Slide Identification .....	122
5.1.6	Run Progress Indicator .....	125
5.1.7	Starting or Stopping a Run .....	129
5.1.8	Delayed Start .....	130
5.2	Protocol Status Screen .....	131
5.3	Maintenance Screen .....	132
5.3.1	Maintenance Report .....	133
<b>6</b>	<b>Slide Setup (on BOND Controller)</b> .....	<b>135</b>
6.1	Slide Setup Screen .....	136
6.2	Working with Controls .....	137
6.2.1	Control Tissue .....	137
6.2.2	Control Reagent .....	138
6.3	Working with Cases .....	138
6.3.1	Case Controls and Active Case Information .....	138

6.3.2	Case Identification .....	139
6.3.3	Adding a Case .....	140
6.3.4	Case Duplication, Resurrection and Expiration .....	141
6.3.5	Editing a Case .....	142
6.3.6	Deleting a Case .....	142
6.3.7	Copying a Case .....	142
6.3.8	Daily Case Option .....	143
6.3.9	Case Report .....	143
6.4	Manage Doctors .....	144
6.5	Working with Slides .....	144
6.5.1	Description of Slide Fields and Controls .....	145
6.5.2	Creating a Slide .....	146
6.5.3	Copying a Slide .....	148
6.5.4	Editing a Slide .....	149
6.5.5	Deleting a Slide .....	149
6.5.6	Manually Identifying a Slide .....	149
6.5.7	Adding a Panel of Slides .....	149
6.5.8	Dispense Volumes and Tissue Position on Slides .....	150
6.6	Slide Labeling .....	152
6.6.1	Printing Labels and Applying to Slides .....	152
6.6.2	Slide IDs and Label IDs .....	154
6.7	Slide Setup Summary Report .....	155
6.8	Impromptu Slide and Case Creation .....	156
6.8.1	Creating New Cases and/or Slides After Imaging .....	156
6.8.2	On-Board Slide Identification Options .....	158
6.9	Slide Compatibility .....	160
6.9.1	Protocol Compatibility .....	160
<b>7</b>	<b>Protocols (on BOND Controller) .....</b>	<b>163</b>
7.1	Protocol Types .....	164
7.1.1	Staining Modes .....	164
7.1.2	Protocol Sequences .....	166
7.2	Protocol Setup Screen .....	168
7.2.1	Protocol Details .....	169
7.3	Creating New Protocols .....	171

7.4	Editing User Protocols .....	172
7.4.1	Editing Protocol Steps .....	172
7.4.2	Adding and Removing Protocol Steps .....	174
7.4.3	Protocol Rules .....	180
7.4.4	Multiple Processing Module Types and Protocol Versions .....	186
7.4.5	Deleting Protocols .....	189
7.5	Protocol Reports .....	190
7.6	Predefined Protocols .....	191
7.6.1	Staining Protocols .....	191
7.6.2	Prestaining Protocols .....	192
<b>8</b>	<b>Reagent Management (on BOND Controller) .....</b>	<b>194</b>
8.1	Reagent Management Overview .....	195
8.1.1	General Information .....	196
8.2	Reagent Setup Screen .....	199
8.2.1	Adding or Editing a Reagent .....	201
8.2.2	Deleting a Reagent .....	203
8.3	Reagent Inventory Screen .....	203
8.3.1	Determining Reagent Volume .....	205
8.3.2	Reagent or Reagent System Details .....	206
8.3.3	Registering Reagents and Reagent Systems .....	208
8.3.4	Inventory Details Report .....	212
8.3.5	Reagent Usage Report .....	213
8.4	Reagent Panels Screen .....	214
8.4.1	Creating a Panel .....	214
8.4.2	Viewing or Editing Panel Details .....	215
8.4.3	Removing a Panel .....	215
<b>9</b>	<b>Slide History (on BOND Controller) .....</b>	<b>216</b>
9.1	Slide History Screen .....	217
9.2	Slide Selection .....	218
9.3	Slide Properties and Slide Rerun .....	219
9.3.1	Rerunning Slides .....	219
9.4	Run Events Report .....	220
9.5	Run Details Report .....	220

---

9.6	Case Report .....	222
9.7	Protocol Report .....	223
9.8	Slides Summary .....	224
9.9	Export Data .....	224
9.10	Brief Slide History .....	226
<b>10</b>	<b>Administration Client (on BOND Controller) .....</b>	<b>227</b>
10.1	Users .....	228
10.2	LIS .....	230
10.3	Labels .....	232
10.3.1	Create, Edit, and Activate Label Templates .....	235
10.3.2	Information Types .....	236
10.4	BDD .....	239
10.4.1	BDD Updates .....	240
10.4.2	Audit Trail .....	241
10.5	Settings .....	241
10.5.1	Laboratory Settings .....	242
10.5.2	Case and Slide Settings .....	243
10.5.3	Database Backups .....	244
10.6	Hardware .....	245
10.6.1	Processing Modules .....	245
10.6.2	Pods .....	248
10.6.3	Slide Labelers .....	250
<b>11</b>	<b>LIS Integration Package (on BOND Controller) .....</b>	<b>263</b>
11.1	LIS Terminology .....	264
11.2	Additional Software Features .....	264
11.2.1	LIS Status Icon .....	265
11.2.2	LIS Cases .....	265
11.2.3	LIS Slides .....	266
11.2.4	Public Marker Names .....	266
11.2.5	Priority Slides .....	267
11.2.6	LIS Slide Data Fields .....	267
11.3	LIS Connection and Initialization .....	268
11.4	LIS Notifications .....	268

---

11.5	Case and Slide Data Requirements .....	270
11.5.1	Case Data .....	270
11.5.2	Slide Data .....	271
11.6	Sending Slide Data back to the LIS .....	272
11.7	Slide Labels .....	272
11.8	Workflows .....	272
<b>12</b>	<b>Cleaning and Maintenance (BOND-III and BOND-MAX only) .....</b>	<b>274</b>
12.1	Cleaning and Maintenance Schedule .....	276
12.1.1	Cleaning and Maintenance Checklists .....	277
12.2	Bulk Containers .....	279
12.2.1	Checking Container Levels .....	279
12.2.2	Replenishing or Emptying Bulk Containers .....	280
12.2.3	Cleaning Bulk Containers .....	284
12.2.4	External Waste Container (BOND-MAX only) .....	285
12.3	Covertiles .....	286
12.3.1	Remove DAB Residue (Optional) .....	286
12.3.2	Standard Cleaning (Mandatory) .....	286
12.4	Slide Staining Assembly .....	287
12.4.1	Standard Cleaning .....	287
12.4.2	Manually Unlocking Slide Staining Assemblies .....	290
12.5	Restart Processing Module .....	292
12.6	Aspirating Probe .....	293
12.6.1	Cleaning the Aspirating Probe .....	293
12.6.2	Running an Aspirating Probe Clean .....	294
12.7	Wash Block and Mixing Station .....	295
12.7.1	Cleaning the Mixing Station .....	295
12.7.2	Cleaning the Wash Block .....	295
12.8	Covers, Doors and Lid .....	296
12.9	ID Imager .....	296
12.10	Drip Trays .....	296
12.10.1	BOND-III Bulk Container Drip Trays .....	297
12.10.2	BOND-III Processing Module Drip Tray .....	298
12.10.3	BOND-MAX Bulk Container Drip Tray .....	298
12.11	Slide Trays .....	299

12.12 Bulk Fluid Robot Probes (BOND-III only) .....	299
12.12.1 Cleaning the Bulk Fluid Robot Probes .....	299
12.13 Syringes .....	300
12.14 Power Supply Fuses .....	300
<b>13 Cleaning and Maintenance (Miscellaneous) .....</b>	<b>302</b>
13.1 Handheld Barcode Scanners .....	302
13.1.1 Cleaning the handheld barcode scanner .....	302
13.1.2 Configuring the handheld barcode scanner .....	303
13.2 Slide Labeler .....	310
<b>14 Using BOND Reagents .....</b>	<b>311</b>
14.1 Principle of the Procedure .....	311
14.1.1 BOND Detection Systems .....	312
14.2 Specimen Preparation .....	314
14.2.1 Materials Required .....	314
14.2.2 Tissue Preparation .....	316
14.2.3 Dewaxing and Baking .....	316
14.2.4 Epitope Retrieval .....	316
14.3 Quality Control .....	317
14.3.1 Assay Verification .....	318
14.3.2 Tissue Controls .....	318
14.3.3 Negative Reagent Control for IHC .....	319
14.3.4 Reagent Controls for ISH .....	319
14.3.5 The Benefits of Quality Control .....	321
14.4 Interpretation of Staining .....	322
14.4.1 Positive Tissue Control .....	322
14.4.2 Negative Tissue Control .....	322
14.4.3 Patient Tissue .....	322
14.5 General Limitations .....	323
14.6 References .....	325
<b>15 System Management (on BOND Controller) .....</b>	<b>326</b>
15.1 BOND System Manager .....	326
15.1.1 Overview .....	326
15.1.2 BOND System Manager Window .....	327

---

15.1.3	Stopping Services .....	328
15.1.4	Starting Services .....	328
15.2	Hard Disk Redundancy .....	329
<b>16</b>	<b>BOND-ADVANCE Operations .....</b>	<b>330</b>
16.1	Restarting the BOND-ADVANCE System .....	330
16.2	Switching to the Secondary Controller .....	331
<b>17</b>	<b>Slide Label Printer Replacement .....</b>	<b>335</b>
17.1	Replace a Cognitive Cxi Printer on a Single Seat System .....	335
17.2	Replace a Cognitive Cxi Printer on BOND-ADVANCE System .....	336
17.3	Replace a Zebra Printer with a Cognitive Cxi Printer on a Single-seat System .....	340
<b>18</b>	<b>Specifications .....</b>	<b>341</b>
18.1	System Specifications .....	341
18.2	Physical Specifications .....	342
18.3	Electrical Power and UPS Requirements .....	342
18.4	Environmental Specifications .....	343
18.5	Operating Specifications .....	343
18.6	Microscope Slides .....	344
18.7	Transport and Storage .....	345
<b>Index</b>	.....	<b>346</b>

# 1

# Introduction

## 1.1 System Overview

Congratulations on obtaining your BOND fully automated immunohistochemistry (IHC) and in situ hybridization (ISH) staining system. We are confident that it will provide you with the staining quality, throughput, and ease of use that you need in your laboratory. The intended users of the BOND system are adequately trained laboratory personnel.

The BOND system can include multiple processing modules, coordinated through the BOND controller.

There are three processing module (PM) types:

- BOND-III and BOND-MAX – each with a 30-slide capacity. Three runs of up to ten slides each can be processed simultaneously, using different staining protocols if required, with each run started separately to provide continuous processing. One or more of the runs may be set up for multiplex staining, while another may be processing a DAB or Red single stain.
- BOND-PRIME – 24 independent staining protocols and continuous processing with a 72-slide capacity.

The BOND software makes setting up and staining slides easy. Use rigorously tested protocols supplied with the system, or create your own. Select from a wide range of BOND ready-to-use reagents, or use any other antibodies or probes, pairing these with a range of high quality BOND detection systems. After you create your virtual slides in the software – or import them from a Laboratory Information System (LIS) – print the labels (or use the LIS-printed labels), attach them to the slides, and then load the slides onto the processing module. The BOND system does the rest, consistently and reliably producing high-quality stains.



Protocols and reagent products supplied by Leica Biosystems will be displayed in the software as being provided by Leica Microsystems.

BOND system features include:

- High throughput
- Flexibility
- Safety
- Automated IHC staining and counterstaining
- Automated ISH staining and counterstaining
- Automated baking, dewaxing, and retrieval
- Automated multiplex staining

We trust that you will find the BOND system a valuable addition to your laboratory.

See sections:


- [1.2 Getting Help](#)
- [1.3 First Steps](#)
- [1.4 Running a Protocol – Workflows](#)

## 1.2 Getting Help

The BOND user manual (this manual) is installed in PDF format on all controllers (single-seat) and terminals (BOND-ADVANCE). It is also on a USB supplied with the system.

You can view this user manual by clicking the **Help** icon on the function bar in both BOND software clients, or alternatively opening it from the desktop icon.

For problems with the BOND system, contact your local Leica Biosystems representative or see [www.leicabiosystems.com](http://www.leicabiosystems.com).

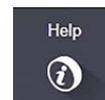

## 1.3 First Steps

For users new to the BOND system, this section describes where to find information in the user manual in order to get a full working knowledge of the product.

Step	Description	Manual Section
1	<b>Installation and Commissioning</b> Hardware set up, software installed, system checked. Performed by representatives of Leica Biosystems or authorized distributor.	–
2	<b>Read the Safety Section</b> Become familiar with the safety requirements for the BOND system.	General warnings and General cautions
3	<b>Know Your Hardware</b> Become familiar with the names and uses of the BOND hardware.	2 Hardware
4	<b>Know Your Software</b> Gain a general understanding of the software and how to use it.	3 Software Overview (on BOND Controller)
5	<b>Check Protocols and Reagents</b> Reagents and protocols may have been set up during installation: <ul style="list-style-type: none"> <li>• Check that the protocols you want to run have been set up.</li> <li>• Check that reagents required at your site have been set up.</li> </ul>	7 Protocols (on BOND Controller) 8 Reagent Management (on BOND Controller)
6	<b>Running a Protocol</b> For a very brief overview. For a more detailed overview.	1.4 Running a Protocol – Workflows 4 Quick Start
7	<b>Advanced</b> As required, gain a more in-depth understanding of the software.	5 BOND-III and BOND-MAX Status Screens (on BOND Controller) to 9 Slide History (on BOND Controller)
8	<b>Working with an LIS</b> An optional package allows connection to a laboratory information system.	11 LIS Integration Package (on BOND Controller)
9	<b>Looking After Your BOND System</b>	12 Cleaning and Maintenance (BOND-III and BOND-MAX only)

## 1.4 Running a Protocol – Workflows

### 1.4.1 BOND-III and BOND-MAX



**WARNING:** To avoid contamination of reagents and slides, the processing module should be operated in a clean environment as free as possible from dust and particulate matter.

The following is an overview of the standard steps involved in staining a tray of slides. With different option settings other workflows are possible.

#### 1.4.1.1 Initial Checks and Startup

- 1 Ensure that the processing module is clean and that all maintenance tasks are up to date ([12.1 Cleaning and Maintenance Schedule](#)). Daily prerun tasks are:
  - a Check bulk waste containers are no more than half full.
  - b Check bulk reagent containers. Refill if required.
- 2 Check wash blocks and mixing station – clean or replace if necessary.
- 3 Check that the slide labeler has labels and print ribbon, and is turned on.
- 4 Turn on the processing module, controller (and terminal for BOND-ADVANCE) and open the BOND clinical client.

#### 1.4.1.2 Configure Reagents

- 1 Create reagents in the system if required ([8.2.1 Adding or Editing a Reagent](#)).
- 2 Register reagent containers ([8.3.3 Registering Reagents and Reagent Systems](#)).

#### 1.4.1.3 Configure Protocols

- 1 Create new protocols if required ([7.3 Creating New Protocols](#)).

#### 1.4.1.4 Configure Slides

- 1 Create cases in the software ([6.3.3 Adding a Case](#)).
- 2 Create slides in the software ([6.5.2 Creating a Slide](#)).
- 3 Print slide labels and apply to the slides ([6.6.1 Printing Labels and Applying to Slides](#)).
- 4 Place slides and Covertiles on slide trays ([4.1.3 Setting Up Slides](#)).

### 1.4.1.5 Load the Processing Module and Start Run

- 1 Insert the slide trays into the processing module ([4.1.3.5 Loading Slides](#)).
- 2 Load the detection system and reagent trays into the processing module ([4.1.4 Loading the Reagents](#)).
- 3 Press the Load/Unload buttons on the processing module to lock the slide trays.
- 4 On the **System status** screen check that all slides have been identified – manually identify slides that were not automatically identified ([5.1.5.2 On-Board Manual Slide Identification](#)).
- 5 View and rectify any alert indications on the **System status** screen.
- 6 Click the  button to start the run.

### 1.4.1.6 Monitor Run

- 1 Monitor run progress on the **System status** screen ([5.1 System Status Screen](#)) or BOND dashboard ([3.5 BOND-ADVANCE Dashboard](#)). View and rectify any notifications.

### 1.4.1.7 Unload Slides and Reagents

- 1 When the run is finished, remove the detection system and reagent trays and store the reagents ([4.1.6 Finishing](#)).



When a processing module is not being used, remove the ER1 and ER2 bulk containers and store at +2 to +8 °C (+36 to +46 °F). Also see [2.2.7 Bulk Containers Cavity](#).

- 2 Press the Load/Unload buttons on the processing module to unlock the slide trays, and remove the trays.
- 3 Remove Covertiles and clean ([12.3 Covertiles](#)).



Do not leave slides sitting in the trays while cleaning the Covertiles.

- 4 Remove the slides.
- 5 Clean any spills or marks on the slide staining assemblies ([12.4 Slide Staining Assembly](#)), on other parts of the processing module, or on slide or reagent trays.

### 1.4.1.8 Hydration on the BOND-MAX and BOND-III System

On completion of the staining process, slides will be hydrated until you remove them. On BOND-MAX and BOND-III, the slides within the Slide Tray will be periodically hydrated with the specified hydration fluid until the Slide Trays are raised. Make sure you remove trays promptly from the processing module after raising the Slide Tray.

## 1.4.2 BOND-PRIME

For full details, refer to the separate BOND-PRIME user manual.

### 1.4.2.1 Initial Checks and Startup

- 1 Turn on the controller (and terminal for BOND-ADVANCE) and open the BOND clinical client.
- 2 Check that the slide labeler has labels and print ribbon, and is turned on.
- 3 Initialize the BOND-PRIME Processing Module and log in.
- 4 Complete any Action Queue tasks that show action is required "Soon" or "Now".

### 1.4.2.2 Configure Reagents

- 1 Create reagents in the system if required ([8.2.1 Adding or Editing a Reagent](#)).
- 2 Register reagent containers ([8.3.3 Registering Reagents and Reagent Systems](#)).

### 1.4.2.3 Configure Protocols

- 1 Create new protocols if required ([7.3 Creating New Protocols](#)).

### 1.4.2.4 Configure Slides

- 1 Create cases in the software ([6.3.3 Adding a Case](#)).
- 2 Create slides in the software ([6.5.2 Creating a Slide](#)).
- 3 Print slide labels and apply to the slides ([6.6.1 Printing Labels and Applying to Slides](#)).

### 1.4.2.5 On the BOND-PRIME Processing Module:

- 1 Load the reagent tray and Detection System tray.
- 2 Load the slides into the Preload drawer.
- 3 The slides are then scanned, moved from the drawer and automatically processed.

### 1.4.2.6 Hydration on the BOND-PRIME System

On completion of the staining process, slides will be hydrated until you remove them. On BOND-PRIME, the slides are transferred to the Unload Drawer, where they will be hydrated within the drawer with DI Water until the slides are retrieved.

# 2

## Hardware



For hardware information about the BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual.

This section is designed to tell you:

- Names of the pieces of equipment in the BOND system
- Functions of these items, and how they relate to the system as a whole
- Where to find further information, for example, operational procedures and maintenance procedures related to the equipment.

Details of how to set up and connect components are not included with the hardware descriptions, as the system should be set up and tested for you. If you need to replace or re-connect components, details are included in [12 Cleaning and Maintenance \(BOND-III and BOND-MAX only\)](#).

Where appropriate, information about the BOND-III and BOND-MAX Processing Modules is divided into separate sections to find relevant information faster.

See sections:

- [2.1 The BOND System](#)
- [2.2 BOND-III and BOND-MAX Processing Modules](#)
- [2.3 BOND Controller and Terminals](#)
- [2.4 Handheld Barcode Scanner](#)
- [2.5 Slide Labeler](#)
- [2.6 Ancillary Equipment](#)
- [2.7 Relocating a Processing Module](#)
- [2.8 Instrument Decommissioning and Disposal](#)

## 2.1 The BOND System

The BOND system consists of the following major components:

- One or more processing modules (see [2.2 BOND-III and BOND-MAX Processing Modules](#))  
For information about the BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual.
- A BOND controller or a BOND-ADVANCE controller (see [2.3 BOND Controller and Terminals](#))  
BOND-ADVANCE installations have terminals as well as the controller, and may include a secondary (backup) controller
- One or more handheld barcode scanners (see [2.4 Handheld Barcode Scanner](#))
- One or more slide label printers (see [2.5 Slide Labeler](#))

Each new BOND-III or BOND-MAX Processing Module is supplied with:

- 4 slide trays (see [2.6.3 Slide trays](#))
- 4 reagent trays (see [2.6.4 Reagent trays](#))
- 1 mixing station (see [2.2.9 Wash Block and Mixing Station](#))
- 1 hex key for syringe pump replacement
- 1 Ethernet cable

For BOND-III or BOND-MAX Processing Modules, you will also need:

- Covertiles (see [2.6.2 BOND Universal Covertiles](#))
- BOND detection systems, and BOND ready-to-use reagents or concentrates and/or open reagent containers (see [2.6.5 Reagent Systems and Containers](#))

For information about what the BOND-PRIME Processing Module is supplied with, refer to the separate BOND-PRIME user manual.

Refer to [www.leicabiosystems.com](http://www.leicabiosystems.com) for a complete and up-to-date list of consumable items and spare parts.

See also [3.1 System Architecture](#).

## 2.1.1 BOND Ancillary Products

BOND ancillary products are designed specifically for the BOND system and their use helps ensure optimal staining results. Using BOND ancillary products also helps to maintain the processing module in top condition and prevent damage.



The following products should *always* be used on the BOND system, and *never* substituted with other products:

### Ancillary Reagents

- BOND Wash Solution or BOND-PRIME Wash Concentrate Solution
- BOND or BOND-PRIME Epitope Retrieval Solution (1 & 2)
- BOND or BOND-PRIME Dewax Solution

### BOND-III or BOND-MAX Consumables

- BOND Plus slides and Apex BOND slides (or glass slides conforming to the specifications listed in [2.6.1 Slides](#))
- BOND Universal Covertiles
- BOND Open Containers (7 mL and 30 mL)
- BOND Titration Containers and Inserts (6 mL)
- BOND Mixing Vial
- BOND Slide Label and Print Ribbon Kit

### BOND-PRIME Consumables

- BOND Plus slides and Apex BOND slides (or glass slides conforming to the specifications listed in [2.6.1 Slides](#))
- BOND Open Containers (7 mL and 30 mL)
- BOND Titration Containers and Inserts (6 mL)
- BOND-PRIME Suction Cups
- BOND Slide Label and Print Ribbon Kit
- BOND-PRIME ARC Refresh Kit (includes ARC Covertiles and Mixing Well Plate)

## 2.2 BOND-III and BOND-MAX Processing Modules

The processing module (PM) is the BOND system's staining platform. A single-seat BOND system can have up to 5 processing modules, and a BOND-ADVANCE system can have up to 30, in any mix of processing module types.



**WARNING:** The processing module must be connected to an earthed mains power outlet socket, and be positioned so that personnel are easily able to disconnect the mains power cable without having to move the processing module.

- [2.2.1 Main Components](#)
- [2.2.2 Processing Module Initialization](#)
- [2.2.3 Lid](#)
- [2.2.4 Main Robot and ID Imager](#)
- [2.2.5 Slide Staining Assemblies](#)
- [2.2.6 Front Cover](#)
- [2.2.7 Bulk Containers Cavity](#)
- [2.2.8 Aspirating Probe](#)
- [2.2.9 Wash Block and Mixing Station](#)
- [2.2.10 Bulk Fluid Robots \(BOND-III only\)](#)
- [2.2.11 Syringes](#)
- [2.2.12 Power Switch](#)
- [2.2.13 Back Cover](#)

### 2.2.1 Main Components

See the main components for BOND-III and BOND-MAX:


- [2.2.1.1 BOND-III](#)
- [2.2.1.2 BOND-MAX](#)

## 2.2.1.1 BOND-III

The following photos show the main processing module components for the BOND-III. The current model is shown – earlier models differ in appearance, however the main components are the same.

A description of the back cover is given at [2.2.13 Back Cover](#).

**Figure 2-1:** Front view of the previous (left) and current (right) BOND-III Processing Module

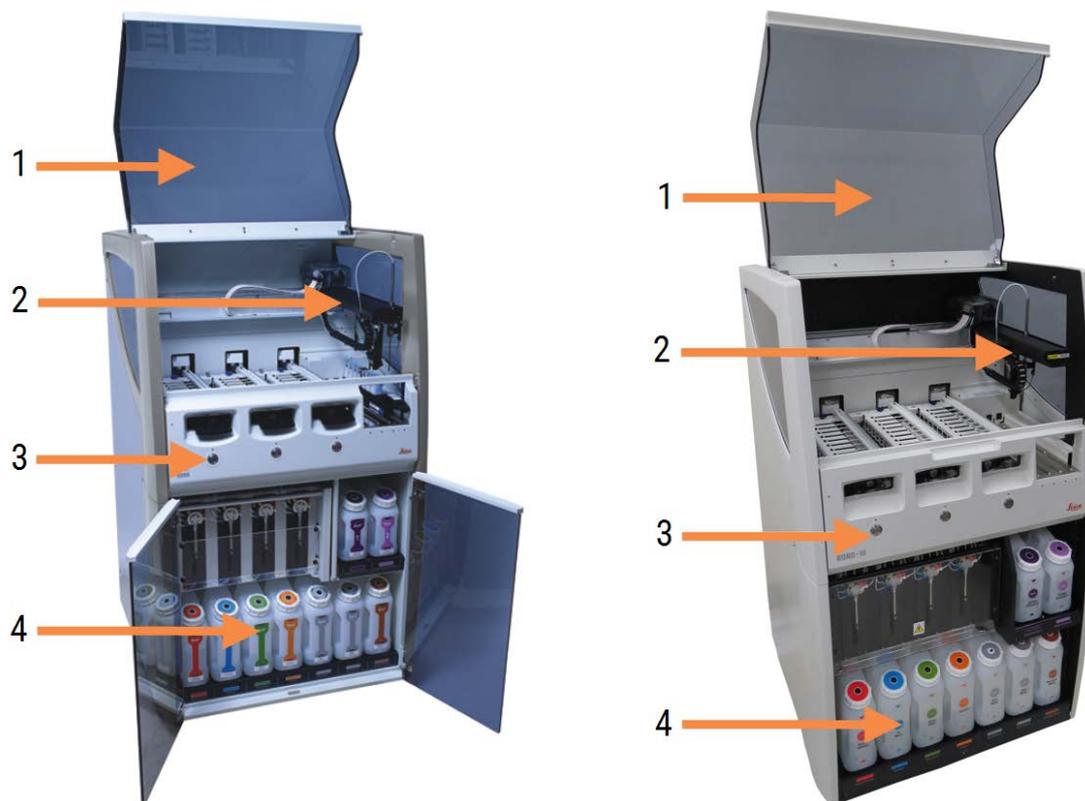

### Legend

- |  |  |
|--|--|
| 1 Lid<br><a href="#">2.2.3 Lid</a>                                 | 3 Front Cover<br><a href="#">2.2.6 Front Cover</a>                       |
| 2 Main Robot Arm<br><a href="#">2.2.4 Main Robot and ID Imager</a> | 4 Bulk Containers Cavity<br><a href="#">2.2.7 Bulk Containers Cavity</a> |

Figure 2-2: The front of the BOND-III Processing Module



### Legend

- |   |  |
|---|--|
| 5 Bulk Fluid Robots<br>2.2.10 Bulk Fluid Robots (BOND-III only) | 7 Syringes<br>2.2.11 Syringes                  |
| 6 Slide Staining Assemblies<br>2.2.5 Slide Staining Assemblies  | 8 Reagent Platform<br>2.2.6.5 Reagent Platform |

Figure 2-3: The BOND-III processing module viewed from the right side



### Legend

- |  |   |
|--|---|
| 9 Aspirating Probe<br>2.2.8 Aspirating Probe | 11 Wash Block and Mixing Station<br>2.2.9 Wash Block and Mixing Station |
| 10 Power Switch<br>2.2.12 Power Switch       |   |

## 2.2.1.2 BOND-MAX

The following photos show the main components of the BOND-MAX Processing Module. The current model is shown – earlier models differ in appearance, however the main components are the same.


**Figure 2-4:** Front view of the BOND-MAX Processing Module



### Legend

- |  |  |
|--|--|
| 1 Lid<br>2.2.3 Lid   | 4 Front Cover<br>2.2.6 Front Cover                       |
| 2 Robot Arm<br>2.2.4 Main Robot and ID Imager                  | 5 Bulk Containers Cavity<br>2.2.7 Bulk Containers Cavity |
| 3 Slide Staining Assemblies<br>2.2.5 Slide Staining Assemblies |  |

**Figure 2-5:** The BOND-MAX Processing Module viewed from the right side

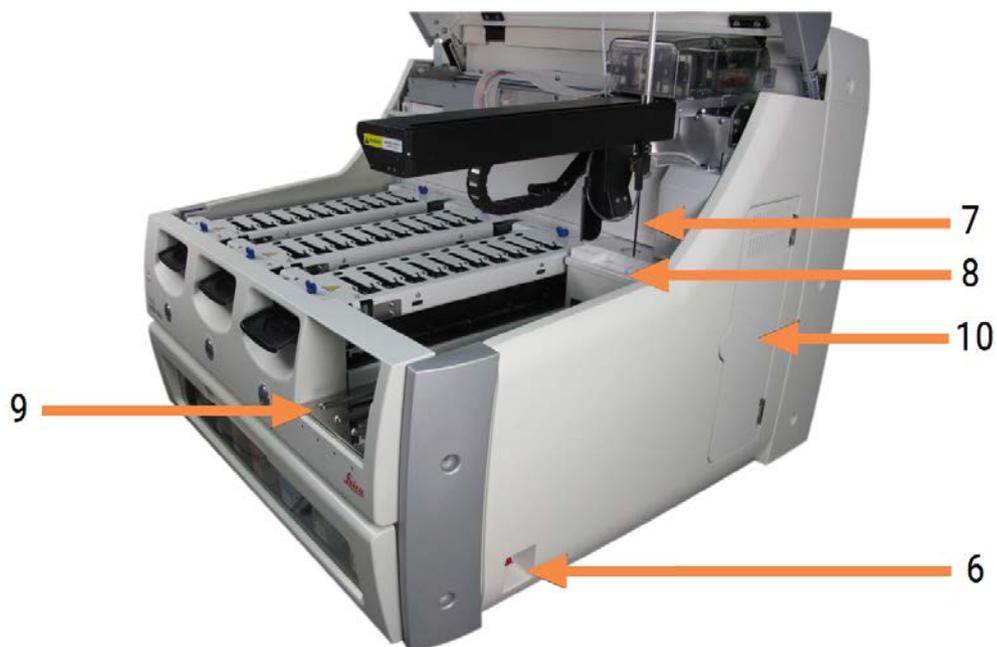

### Legend

6	Power Switch <a href="#">2.2.12 Power Switch</a>	9	Reagent Platform <a href="#">2.2.6.5 Reagent Platform</a>
7	Aspirating Probe <a href="#">2.2.8 Aspirating Probe</a>	10	Syringe (see below) <a href="#">2.2.11 Syringes</a>
8	Wash Block & Mixing Station <a href="#">2.2.9 Wash Block and Mixing Station</a>		

A description of the back cover is given at [2.2.13 Back Cover](#).

**Figure 2-6:** Syringe behind hinged door



## 2.2.2 Processing Module Initialization

When you turn the processing module on, the BOND system performs internal checks, primes the fluidics system and moves the robots to their home positions. The main robot moves to the back left corner of the processing module and the three bulk fluid robots (BOND-III only) move to the rear of the processing module.

The slide staining assemblies initialize and return to their unlocked position. The initialization process halts if a fault is found or if the module is in a state unsuitable for processing.

Before attempting to initialize a processing module, check the following items:

- The lid is closed
- The front door is closed (BOND-MAX only)
- The bulk waste containers are less than half full
- The bulk reagent containers have adequate reagent
- The mixing station is in place
- The mixing station vials are empty and clean
- The top plates of the slide staining assemblies (SSAs) are in the closed position.

The power LED on the front of the processing module turns green and the BOND software indicates that the module is connected. When initialization is complete an icon of the three slide trays appears on the processing module tab (see [5.1.1 Processing Module Tabs](#)). Do not attempt to use a processing module until it is fully initialized.

## 2.2.3 Lid

The lid is designed to be closed during operation, and is protected with interlocks.



**WARNING:** Take care when closing the processing module lid, ensuring hands are kept clear to avoid injury.



**WARNING:** During operation the main robot, the aspirating probe and bulk fluid robots (BOND-III only) can move without warning and with a speed that can cause injury.

Do not attempt to open the processing module lid while a run is in progress.

Do not attempt to by-pass the interlocks that prevent operation of the processing module when the lid is opened.



**WARNING:** Contact customer support immediately if the main robot and/or bulk fluid robots continue to operate for more than approximately 5 seconds after the processing module lid has been opened.

## 2.2.4 Main Robot and ID Imager

The main robot positions the aspirating probe to aspirate and dispense reagents. The robot arm holds the ID imager, which is used to identify the slides and reagents loaded in the processing module.

**Figure 2-7:** Photo of the main robot with the ID imager indicated by the arrow



**WARNING:** Do not move the main robot arm while the processing module is switched on. The robot can become misaligned, resulting in poor staining.

If the robot has been moved: power down the processing module, wait 30 seconds and then reinitialize.

For slides, the BOND system scans each slide label for identification purposes (see [5.1.5.1 Automatic Slide Identification](#)).

- The ID imager window should be periodically cleaned.  
See [12.9 ID Imager](#) for instructions.
- If the aspirating probe is broken or bent, contact Customer Support.

## 2.2.5 Slide Staining Assemblies



**WARNING:** Avoid contact with slide staining assemblies and their surrounds. These may be very hot and cause severe burns. Allow twenty minutes after the cessation of operation for the slide staining assemblies and their surrounds to cool.



**WARNING:** Potentially hazardous reagents can collect around the slide staining assemblies and contaminate the slide trays. Always wear approved protective clothing and gloves when handling slide trays.

Slides are processed in the slide staining assemblies. Each processing module contains three slide staining assemblies. To begin a run, an operator inserts a slide tray through the front cover (described in [2.2.6 Front Cover](#)), then presses the load button. The BOND system will capture images of the slides. If the slides are compatible (refer to [6.9 Slide Compatibility](#)) and all reagents are present, the user can then start the run. For more information about entering slide details and loading slides, see [6 Slide Setup \(on BOND Controller\)](#).

Before processing begins, the BOND system locks the slides into the slide staining assembly. If you need to remove a slide tray while the BOND system is processing its slides, you must first abandon the run. Click  below the tray on the **System status** screen (see [5.1.7 Starting or Stopping a Run](#)) and then unlock the slide staining assembly.

For cleaning and routine maintenance of the slide staining assembly, see [12.4 Slide Staining Assembly](#).

## Slide Staining Assembly Heaters



**WARNING:** Heaters and heated surfaces on the processing module can be ignition dangers:

- Do not place flammable materials on or near the heaters.
- Do not place flammable materials on any hot surfaces on the processing module.
- Ensure all bulk container caps are properly sealed after refilling or emptying.




**WARNING:** Some of the reagents used on BOND-III and BOND-MAX processing modules are flammable:

- Do not place a flame or ignition source near the processing modules.
- Ensure all bulk container caps are properly sealed after refilling or emptying.

The BOND-III and BOND-MAX Processing Modules have a heating element at each slide position. Each of these elements is independently monitored and is marked as faulty if a temperature error occurs (see [Figure 2-8](#)). Contact customer support if a faulty heater is indicated.


**Figure 2-8:** Individual heater error

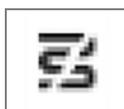

You should not attempt to run a slide that requires heating at a position marked as faulty. If a heater malfunctions during a run then the slide at that position may not have processed correctly.

If the heater malfunction is a potential safety risk, the processing module turns off all slide heaters, including the heater of any temperature-controlled slide currently being processed.

**Figure 2-9:** Gray heater symbols at each position indicate a complete heating shutdown

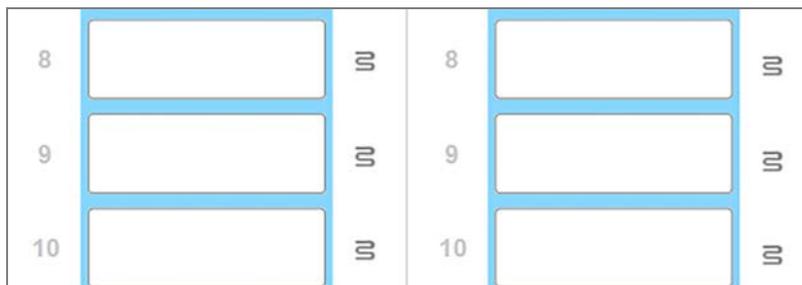

Once slide heating is shut down, you must turn off then restart the processing module to clear the heater lock. You can continue to use slide positions with faulty heaters so long as the slides processed there do not require heating.

## 2.2.6 Front Cover

The figures below show the front covers of the BOND-III and BOND-MAX.

**Figure 2-10:** BOND-III front cover



### Legend

- |  |  |
|--|--|
| 1 Front Cover<br>2.2.6.1 Power LED         | 4 Reagent Platform<br>2.2.6.5 Reagent Platform       |
| 2 Slide Tray Bay<br>2.2.6.2 Slide Tray Bay | 5 Reagent Tray LED<br>2.2.6.6 Reagent Tray LED       |
| 3 Slide Tray LED<br>2.2.6.3 Slide Tray LED | 6 Load / Unload Button<br>2.2.6.4 Load/Unload Button |

Figure 2-11: BOND-MAX front cover



### Legend


1 Front Cover 2.2.6.1 Power LED	4 Reagent Platform 2.2.6.5 Reagent Platform
2 Slide Tray Bay 2.2.6.2 Slide Tray Bay	5 Reagent Tray LED 2.2.6.6 Reagent Tray LED
3 Slide Tray LED 2.2.6.3 Slide Tray LED	6 Load / Unload Button 2.2.6.4 Load/Unload Button

## 2.2.6.1 Power LED

This operates as follows:

- **Off** – no power
- **Blue** (current model) or **Orange** (previous models) – power on, but processing module software has not yet started
- **Green** – power on, system operating.

Figure 2-12: Power LED colors (blue, green) on BOND-MAX Processing Module

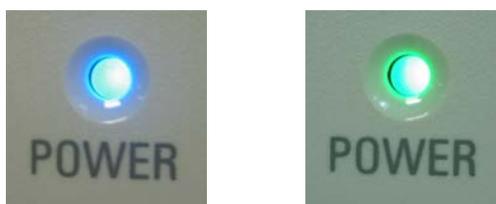

## 2.2.6.2 Slide Tray Bay

There are three bays (one for each slide staining assembly) where slide trays are inserted. When a slide tray is inserted, press the Load/Unload button to lock it into the slide staining assembly. After a tray is locked, the robot arm moves the ID imager over the slides in the tray to automatically identify the slides.

## 2.2.6.3 Slide Tray LED

Multi-color LEDs on the front cover under each slide staining assembly indicate the state of the slide tray. On BOND-MAX Processing Modules, the slide tray LEDs are incorporated into the Load/Unload buttons. On these processing modules the LED turns blue for a few seconds when you press it.

Slide staining assembly LED color indicators are as follows:

- **Off** – there is no slide tray present, or the slide tray is unlocked.
- **Steady orange** – the tray is loaded and locked but processing has not commenced.  
The tray can be safely unlocked and removed with the Load/Unload button.
- **Steady red** – the slides in the tray are being processed.  
The tray is locked and cannot be unlocked with the Load/Unload button. To unload you need to first abandon the run in the software.
- **Flashing green** – processing has finished without notifications. Unlock with the Load/Unload button.
- **Flashing red** – the run has been rejected, or processing has completed with notifications. Unlock with the Load/Unload button.

**Figure 2-13:** Slide tray LED colors (orange, red, green) on BOND-MAX Processing Module



## 2.2.6.4 Load/Unload Button

Pressing a Load/Unload button does the following:

- If a tray is not loaded, nothing will happen.
- If a tray is loaded and not locked, the BOND-III or BOND-MAX will lock the tray and, when the robot arm is available, the ID imager will identify the slide IDs.
- If a tray is locked and the run has not started, the BOND-III or BOND-MAX will unlock the tray.
- If a tray is locked and the run is finished, the BOND-III or BOND-MAX will unlock the tray.
- If a tray is locked and a run is in progress, the Load/Unload button has no effect. You cannot unlock a tray until a run using that tray is finished or abandoned.

If a slide staining assembly is hot you cannot lock or unlock a tray – wait until the assembly has cooled.

## 2.2.6.5 Reagent Platform

This is where reagent trays are placed, containing detection systems, 7 mL and 30 mL reagent containers, and/or 6 mL titration containers. Each tray can hold up to nine reagents, and the reagent platform can hold four reagent trays.

To load a reagent tray, slide the tray onto the platform and into the locking mechanism (see [4.1.4 Loading the Reagents](#)). When the robot arm is available the BOND system will identify the reagents in each reagent position.

## 2.2.6.6 Reagent Tray LED

Below each tray position there is a bi-color LED that functions as follows:

- **Off** – a tray has not been detected.  
If a tray is inserted and the LED is off, check that the tray is inserted correctly.
- **Steady red** – a reagent on the tray is required within the next two minutes.  
The tray is locked and cannot be removed.
- **Steady green** – none of the reagents on this tray are required within the next two minutes.  
The tray is unlocked and may be temporarily removed.

**Figure 2-14:** Reagent tray LED colors (red, green) on BOND-MAX Processing Module



## 2.2.7 Bulk Containers Cavity

Bulk reagent and waste containers are located below the front cover in both the BOND-III and BOND-MAX. The BOND-MAX also has an external container for standard waste.

See [12.2 Bulk Containers](#) for bulk container filling, emptying, and maintenance instructions.



**WARNING:** To ensure correct processing module operation, place each bulk reagent container into its correct station in the cavity, as indicated by the color-coded name labels.

For BOND-III, see [Figure 2-15](#); for BOND-MAX, see [Figure 2-17](#).

Failure to do so may compromise staining.



**WARNING:** Some of the reagents used on BOND-III and BOND-MAX Processing Modules are flammable:

- Do not place a flame or ignition source near the processing modules.
- Ensure all bulk container caps are properly sealed after refilling or emptying.

- [2.2.7.1 BOND-III](#)
- [2.2.7.2 BOND-MAX](#)

## 2.2.7.1 BOND-III

The previous BOND-III has two transparent cabinet doors that allow easy access to all bulk containers. Hold the railing at the top of the doors when opening.

All waste from the slide staining assemblies is sent to the hazardous waste container. Waste from the wash block is sent to the standard or hazardous waste containers depending on the status of reagent in the waste (you must set reagents that you create to be hazardous if appropriate – see [8.2.1 Adding or Editing a Reagent](#)).

Weight sensors for each bulk reagent and waste container warn the user when the reagent level is low or the waste level is too high. Each bulk container's status is visually indicated by the [Bulk Container Lighting System \(BOND-III\)](#) (on page 52). Note that this system is not fitted to the previous BOND-III; you can instead use the on-screen icons (see [5.1.3.6 Bulk Container Status](#)).

The BOND-III has space for the following containers, in the shelves indicated in [Figure 2-15](#), moving from left to right:

Station	Container	Position	Size (L)	Color	Reagent
8	ER1	Upper shelf	2	Purple	BOND Epitope Retrieval Solution 1*
9	ER2		2	Light Purple	BOND Epitope Retrieval Solution 2*
1	Dewax Solution	Lower shelf	5	Red	BOND Dewax Solution*
2	Deionized Water		5	Blue	Deionized Water
3	Wash Buffer		5	Green	BOND Wash Solution*
4	Alcohol		5	Orange	Alcohol (reagent grade)
5	Bulk Waste		5	Gray	Standard Waste
6	Bulk Waste		5	Gray	Standard Waste
7	Hazardous Waste		5	Brown	Hazardous Waste

\* Use only BOND reagents – do not substitute with alternative products.

If your laboratory does not use the epitope retrieval and/or dewax reagent containers, these can be disabled in the administration client – see [10.6.1.1 Disabling Bulk Reagent Containers](#).

Figure 2-15: BOND-III bulk reagent containers in position



### Bulk Container Lighting System (BOND-III)

BOND-III Processing Modules are fitted with a bulk container lighting system, as shown in Figure 2-16 below.

Figure 2-16: Bulk container lighting system



The bulk container lighting system helps you to see the liquid level in each container, and the lights are a static white color during normal operation.

The lights also indicate the current status of each bulk container:

- When a bulk supply container is almost empty, or a waste container is almost full, its white lighting pulses.
- When a bulk supply container is empty or a waste container is full, and this affects the current run, its lighting pulses red.
- When a bulk container is removed, its backlight switches off and its label lighting on the processing module cavity pulses white.



The bulk container lighting system will operate only with BOND 6.0 or later software.

Also refer to [5.1.3.6 Bulk Container Status](#) for details of how the bulk containers are shown on the **System status** screen.

## 2.2.7.2 BOND-MAX

BOND-MAX has a single downwards-opening door for access to bulk containers. The door has a transparent panel allowing you to view reagent levels in the bulk containers (which are also translucent).

The door is held by magnetic latches. To open the door on previous processing modules (without a handle), pull at the top of each side of the door.



The bulk container cavity door must remain closed during staining runs. If the door is opened, an alert indication will appear on the system status screen (see [5.1.2 Hardware Status](#)) and any current runs may pause.

Waste from the processing module is sent to the standard or hazardous waste containers depending on the status of reagent in the waste (you must set reagents that you create to be hazardous if appropriate – see [8.2.1 Adding or Editing a Reagent](#)).

BOND-MAX bulk reagent containers have liquid level sensors to warn when the reagent level is low; waste containers also have liquid level sensors to warn when the waste level is too high. See [12.2 Bulk Containers](#) for refilling and emptying directions.

BOND-MAX has space for the following containers, in order from left to right:

Station	Container	Size (L)	Color	Reagent
1	Hazardous Waste	2	Brown	Hazardous Waste
2	ER1	1	Purple	BOND Epitope Retrieval Solution 1*
3	ER2	1	Light Purple	BOND Epitope Retrieval Solution 2*
4	Dewax Solution	2	Red	BOND Dewax Solution*
5	Deionized Water	2	Blue	Deionized Water
6	Wash Buffer	2	Green	BOND Wash Solution*
7	Alcohol	2	Orange	Alcohol (reagent grade)

\*Use only BOND reagents – do not substitute with alternative products.

The epitope retrieval and/or dewaxing reagent containers can be removed from the processing module if not used – see [10.6.1.1 Disabling Bulk Reagent Containers](#).

Figure 2-17: BOND-MAX bulk reagents in position



Ensure that each bulk container's label color and printed description match the label on the processing module cavity, immediately below the container.

## External Waste Container

A nine-liter external standard waste container is included with the BOND-MAX. Containers supplied with processing modules before the current model have fluid and level sensor connections in a single container cap, which is used to empty the container. Containers supplied with the current-model BOND-MAX have two caps – one for the connectors and a second for emptying the waste. Never remove the connector cap on these containers.

**Figure 2-18:** BOND-MAX external waste container



### Legend

- |   |                                |
|---|--------------------------------|
| 1 | Sensor connector               |
| 2 | Fluid connector                |
| 3 | Opening for emptying container |

The fluid line connects to a push-fit connector at the bottom right of the processing module back cover. The liquid level sensor connects to a three-pin connector at the upper left of the rear cover (see [Figure 2-26](#)).

See [12.2.4 External Waste Container \(BOND-MAX only\)](#) for emptying and maintenance instructions for the external container.



**CAUTION:** Always disconnect the sensor and fluid connectors (in this order) before emptying an external waste container. Do not attempt to pour fluid from a container while the cable and tube are still attached.



**WARNING:** Some of the reagents used in immunohistochemistry and in situ hybridization are hazardous. Ensure you have received adequate training for this procedure before continuing:

- 1 Wear latex or nitrile gloves, safety glasses, and other suitable protective clothing when handling reagents or cleaning the processing module.
- 2 Handle and dispose of reagents and condensate in accordance with all relevant procedures and government regulations that apply at the laboratory site.




**WARNING:** Some of the reagents used on BOND-III and BOND-MAX Processing Modules are flammable:

- Do not place a flame or ignition source near the processing modules.
- Ensure all bulk container caps are properly sealed after refilling or emptying.

## 2.2.8 Aspirating Probe

The aspirating probe aspirates reagents from containers, delivers reagents to the slides in the slide staining assemblies, and mixes chromogens in the mixing station. It contains a liquid level sensor to detect reagent level (refer to [8.3.1 Determining Reagent Volume](#)).


**Figure 2-19:** Aspirating probe in the robot arm

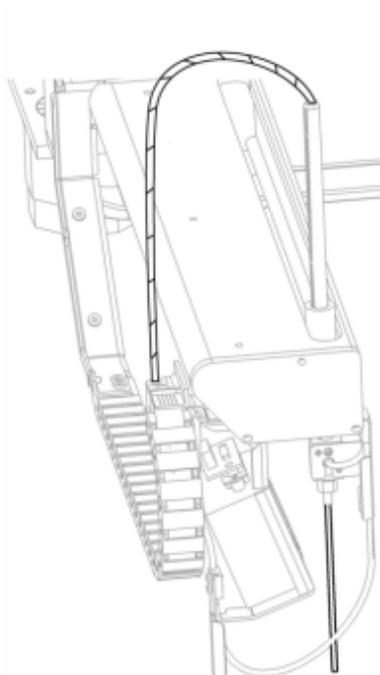

There is a residual volume in each container that the probe is unable to reach. This volume is referred to as the “dead volume”. Dead volume is different for each type of container (see [18.5 Operating Specifications](#) for dead volume values). See [12.6 Aspirating Probe](#) for maintenance instructions for the aspirating probe.

## 2.2.9 Wash Block and Mixing Station

**Figure 2-20:** Wash block with mixing station inserted

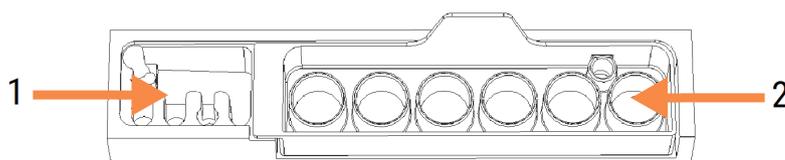

### Legend

- |   |                |
|---|----------------|
| 1 | Wash area      |
| 2 | Mixing station |

The left-hand wash area includes small holes for washing the aspirating probe.

The right-hand part of the wash block holds the mixing station, which consists of six cavities. These are mixing vials for short-life reagents that must be mixed just before use. The mixing of reagents is determined by the software, depending on the reagent type.



The BOND software tracks the state of the mixing station and does not initialize the BOND-III or BOND-MAX if the station's tracked state is other than clean and empty (see [5.1.2 Hardware Status](#)). If notified during initialization that the mixing station is dirty or has liquid in it, ensure that the station is clean and empty before clicking **OK** in the notification dialog. If you continue with a dirty and/or non-empty mixing station, reagents could be contaminated or the mixing vials could overflow.




During initialization the BOND system scans a label on the mixing station to check that it is present. If the BOND software cannot detect this ID, then a message will prompt you to confirm that a mixing station is present.

See [12.7 Wash Block and Mixing Station](#) for mixing station maintenance instructions.

## 2.2.10 Bulk Fluid Robots (BOND-III only)

**Figure 2-21:** The BOND-III bulk fluid robot (1) moves along a guide rail (2) on each slide staining assembly

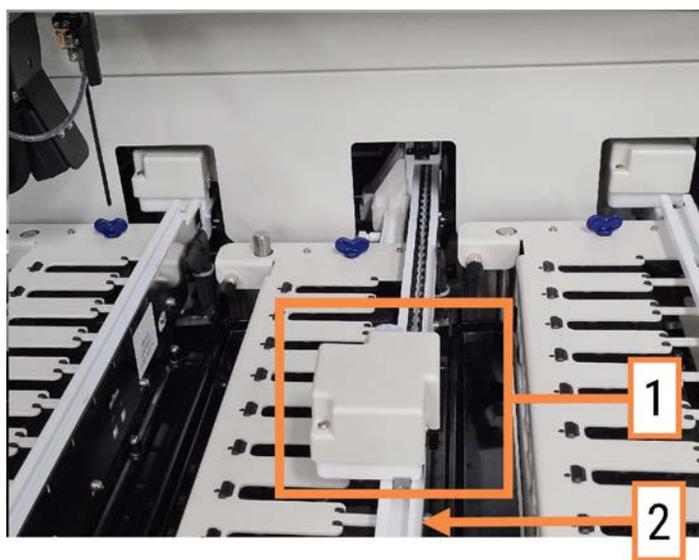

**WARNING:** Contact customer support immediately if the main robot and/or bulk fluid robots continue to operate for more than 5 seconds after the processing module lid has been opened.

The BOND-III Processing Module has three bulk fluid robots that move along a guide rail on each slide staining assembly and dispense reagents to all slides present. The robots deliver only bulk reagents, while the aspirating probe delivers reagents from containers in the reagent platform and some bulk reagents. Each bulk fluid robot has a wash block to rinse and clean its dispensing probe.


## 2.2.10.1 Manually Returning a Bulk Fluid Robot to the Home Position

If a bulk fluid robot stops working and is positioned along the slide staining assembly, press the Load/Unload button to return it to its home position. If it remains on the slide staining assembly complete the following steps to manually return it to the home position and retrieve any slides in the slide staining assembly.

- 1 Ensure that the processing module is idle with no runs scheduled or processing, then turn it off.
- 2 Gently lift the dispense block on the bulk fluid robot (see [Figure 2-22](#)) until the probe clears the top plate.
- 3 Push the robot along the rail to the rear of the slide staining assembly. Use a slow, steady motion – do not push too fast.

Push until the robot is just clear of the top plate rail – **do not** push it back as far as it will go.

**Figure 2-22:** Lift the dispense block

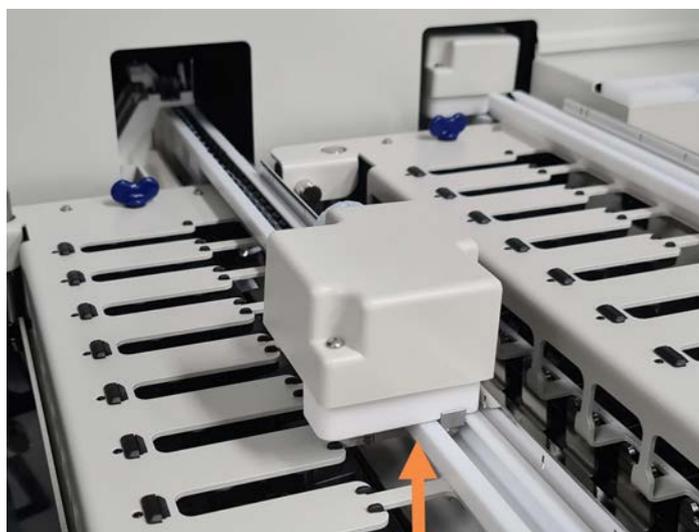

- 4 When the robot is clear of the top plate, close the lid and turn the processing module back on. The slide staining assembly should unlock as part of the initialization routine.

If the slide staining assembly does not unlock, see [12.4.2 Manually Unlocking Slide Staining Assemblies](#) for instructions on how to retrieve the slide trays.

- 5 Retrieve the slide tray and slides.

## 2.2.11 Syringes

The syringes aspirate and dispense the precise reagent fluid volumes required by the BOND system. See [12.13 Syringes](#) for syringe maintenance instructions.




**WARNING:** Ensure that the syringe door is closed (BOND-MAX) or the syringe cover is fitted (BOND-III) during normal operation. If a syringe or a syringe fitting becomes loose, reagent under pressure can spray from the syringe.

### 2.2.11.1 BOND-III

The BOND-III has four syringe pumps, located below the front cover. The first three syringe pumps, from left to right, are used by the bulk fluid robots on SSA1, SSA2 and SSA3 above. The fourth, main syringe pump, is used by the aspirating probe.

Figure 2-23: BOND-III syringes

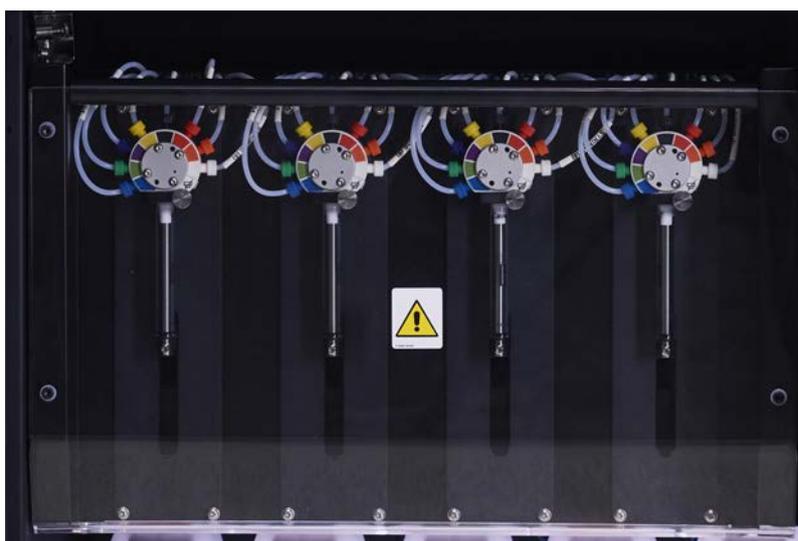

**CAUTION:** Ensure the syringe module is fully closed before starting a run or initializing the processing module (see [12.4.2 Manually Unlocking Slide Staining Assemblies](#)). Failure to do so can result in damage to the syringes during operation.

## 2.2.11.2 BOND-MAX

The BOND-MAX has a single syringe pump located in a compartment on the right side of the processing module. This is a 9-port syringe valve (one port is not used) with a screw-in syringe barrel and a small clamp.

Figure 2-24: BOND-MAX 9-port syringe



To check the condition of the syringe unit, open the door by pressing and releasing at the rounded tab in the front middle of the door.



**WARNING:** Always wear protective clothing and gloves.

## 2.2.12 Power Switch

This is a single rocker switch located on the right cover of the processing module. This is used to turn the processing module on and off.

- For the power switch location on the BOND-III, see [Figure 2-3](#).
- For the power switch location on the BOND-MAX, see [Figure 2-5](#).

## 2.2.13 Back Cover



**WARNING:** Do not remove the processing module covers or attempt to access internal components. Dangerous voltages are present inside BOND Processing Modules and only qualified service technicians approved by Leica Biosystems should perform these tasks.

### 2.2.13.1 BOND-III

Figure 2-25 shows the back cover of the BOND-III Processing Module.

Figure 2-25: BOND-III back cover



#### Legend

- |   |   |   |                        |
|---|---|---|------------------------|
| 1 | Circuit Breakers (Legacy processing modules only)   | 3 | Mains Power Connection |
| 2 | Fuses   | 4 | Ethernet Connection    |
|   | <ul style="list-style-type: none"> <li>• Legacy processing modules—4 fuses</li> <li>• Alternate processing modules—2 fuses</li> </ul> |   |                        |

See [12.14 Power Supply Fuses](#) for instructions to replace fuses.




**WARNING:** Do not use the two black handles on the back cover of the BOND-III to lift the processing module.

## 2.2.13.2 BOND-MAX

Figure 2-26 shows the back cover of the BOND-MAX Processing Module. (Note that earlier model processing modules have only one power supply fan.)

Figure 2-26: BOND-MAX back cover

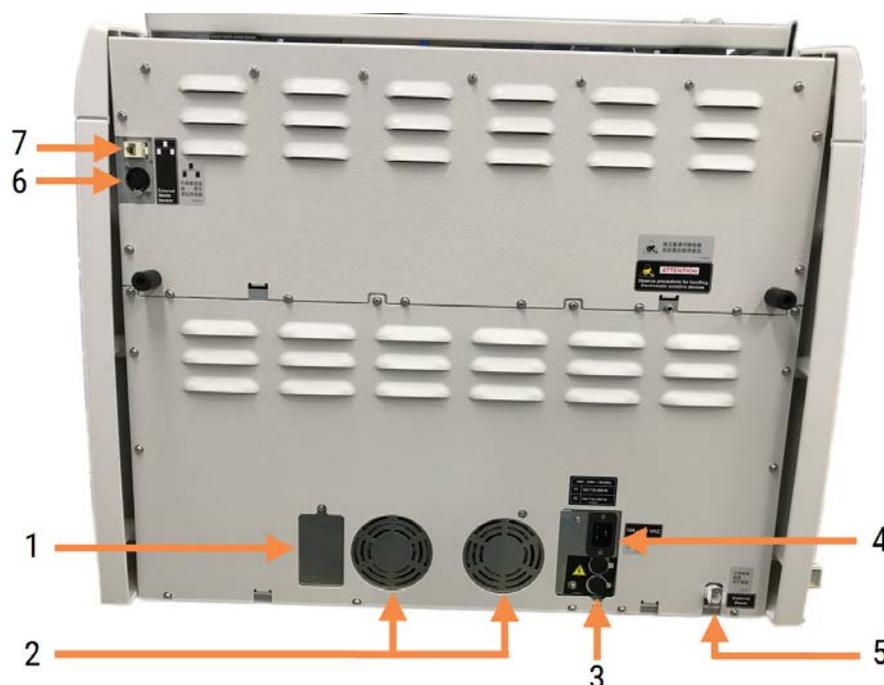

### Legend

- |   |   |   |  |
|---|---|---|--|
| 1 | Circuit Breakers (Legacy processing modules only)   | 5 | External Waste Connection – for tubing (see <a href="#">12.2.4 External Waste Container (BOND-MAX only)</a> )              |
| 2 | Power Supply Fans   | 6 | External Waste Connection – for liquid level sensor (see <a href="#">12.2.4 External Waste Container (BOND-MAX only)</a> ) |
| 3 | Fuses <ul style="list-style-type: none"> <li>• Legacy processing modules—4 fuses</li> <li>• Alternate processing modules—2 fuses</li> </ul> | 7 | Ethernet Connection  |
| 4 | Mains Power Connection  |   |  |

See [12.14 Power Supply Fuses](#) for instructions to replace fuses.

## 2.2.13.3 Disconnecting the Processing Module

To disconnect a BOND-III or BOND-MAX Processing Module from the mains power supply, do the following:

- 1 Switch off the power using the switch at the right side of the processing module.
- 2 Trace the power cable from the processing module mains power connection (item 3 in [Figure 2-25](#) and item 4 in [Figure 2-26](#)) to the wall. Switch off the mains power supply at the wall socket.
- 3 Disconnect the plug from the back of the processing module.

## 2.3 BOND Controller and Terminals

All BOND systems include a BOND controller, where all software processing is carried out. In single-seat installations (see [3.1.1 Single-Seat Configuration](#)), one controller with a keyboard, mouse and monitor, is used to run the client software. Single-seat installations are adequate for running five or fewer processing modules.

Laboratories with BOND-ADVANCE installations (see [3.1.2 BOND-ADVANCE](#)), with more than five processing modules, have, in addition, BOND terminals. In these installations most user interaction with the BOND software occurs at the terminals, each of which can control any or all processing modules. It is also possible to control the same processing module(s) from more than one terminal.

The BOND controller continues to carry out all software processing. Controllers in BOND-ADVANCE installations have a higher specification than those used in single-seat installations and include multiple levels of redundancy to ensure excellent reliability.

Some BOND-ADVANCE installations include a secondary (backup) controller. This controller records all processes on the primary controller, and can be switched to in the event that the primary controller malfunctions. Ideally, secondary controllers should not be located nearby the primary controller, to decrease the likelihood of both controllers being damaged by a localized event.

A slide label printer and handheld barcode scanner are connected to the controller in single-seat installations, or to each terminal in BOND-ADVANCE installations.



**CAUTION:** The operating system and software on the BOND controller are designed to provide optimal control over the BOND system. To avoid any possibility of delays or interference with system control, do not install any additional software on the BOND controller or terminal.

## 2.4 Handheld Barcode Scanner

Figure 2-27: The handheld barcode scanner



USB handheld barcode scanners are attached to the controller (single-seat installations) or to terminals (BOND-ADVANCE installations). They are used to register reagents, and can also be used to identify slides (see [6.5.6 Manually Identifying a Slide](#)).



Creating 1D and OCR barcodes is not supported in BOND version 7 onwards.

If your system upgrade includes a BOND-PRIME Processing Module, you must use a 2D barcode scanner. Refer to [13.1 Handheld Barcode Scanners](#).

The handheld barcode scanner should be installed and operational when your BOND system is installed. See [13.1 Handheld Barcode Scanners](#) for maintenance and configuration instructions.

### 2.4.1 Using the Handheld Barcode Scanner

To read a barcode, point the scanner at it and press the trigger. Align so that the red line extends the full length of the barcode. The scanner beeps and the indicator turns green when a barcode is recognized. If a barcode is not recognized the scanner beeps and the indicator turns red.



Do not hold barcodes too close to the scanner. If the scanner does not recognize a barcode, try moving the barcode further away or scan the barcode at a 45° angle (to prevent feedback to the scanner).

When the scanner is placed in its stand then it is in hands-free use, and you do not need to press the trigger when reading a barcode.

## 2.5 Slide Labeler

Single-seat BOND systems include one slide label printer (called a “slide labeler”) connected to the controller. In BOND-ADVANCE installations a separate slide labeler is connected to each terminal.

Slide labelers print stick-on labels to attach to slides for identification. All labels include a unique slide ID rendered as 2D barcodes (see [10.5.2 Case and Slide Settings](#)). BOND uses the IDs to automatically identify slides when they are loaded onto processing modules. You can configure other information, as well as the IDs, to appear on labels – see [10.3 Labels](#).

Some laboratories use slide labels printed from their LIS, however the BOND slide labeler is still included in these systems for any slides created with the BOND clinical client.

Slide labelers are set up as part of the standard BOND installation. If you add or replace a slide labeler, configure this in the administration client **Hardware** screen (see [10.6.3 Slide Labelers](#)). Use the documents supplied with the labeler for information on label and ribbon replacement, and cleaning.



**WARNING:** Use only BOND slide labels and printing ribbon. These labels must remain attached and legible during processing on BOND Processing Modules.

## 2.6 Ancillary Equipment

This section describes the ancillary equipment used with the BOND system.

- [2.6.1 Slides](#)
- [2.6.2 BOND Universal Covertiles](#)
- [2.6.3 Slide trays](#)
- [2.6.4 Reagent trays](#)
- [2.6.5 Reagent Systems and Containers](#)

For information about the BOND-PRIME consumables, refer to the separate BOND-PRIME user manual.

### 2.6.1 Slides

Use only glass slides of correct size on BOND-III and BOND-MAX Processing Modules. Slides of the wrong size may not sit properly in the slide trays, and Covertiles will not sit properly on them. Both of these could affect staining quality.

Leica Biosystems recommends Leica BOND Plus slides and Apex BOND slides, which are designed for use on the BOND system. As well as being the optimal size for BOND slide trays and Covertiles, these positively charged slides are marked to show the areas where tissue should be placed for 100  $\mu$ L and 150  $\mu$ L dispenses (see [6.5.8 Dispense Volumes and Tissue Position on Slides](#)).

If you use your own slides, they must conform to the following specifications:

Dimensions	Width: 24.64–26.0 mm (0.97–1.02 in)
	Length: 74.9–76.0 mm (2.95–2.99 in)
	Thickness: 0.8–1.3 mm (0.03–0.05 in)
Label area	Width: 24.64–26.0 mm (0.97–1.02 in)
	Length: 16.9–21.0 mm (0.67–0.83 in)
Material	Glass, ISO 8037/1



**CAUTION:** Do not use damaged slides. Ensure all slides are correctly aligned on the slide trays before loading into the processing module.



**CAUTION:** Do not use slides with rounded or clipped corners. These slides may fall through the slide tray, and could alter fluid flow under the Covertiles, affecting staining quality.

## 2.6.2 BOND Universal Covertiles


BOND Universal Covertiles are transparent plastic covers that sit over slides during staining. Capillary action draws reagent that has been dispensed to slides between the Covertiles and slides, ensuring gentle, uniform tissue coverage. The Covertiles minimize the volumes of reagent required, and protect slides from drying between applications. Covertiles are an essential part of the BOND staining system and must always be used.

Place Covertiles on slides after placing slides in slide trays (see [4.1.3.5 Loading Slides](#)). Ensure the Covertiles are properly positioned, with the key in the neck of each Covertile (circled in photograph, right) fitting into the slot in the slide tray.

There are three Covertile designs – they can be used interchangeably. The two newest designs include features (the word **Leica** and a projection at the top left) that make it more obvious when a Covertile has been incorrectly placed on a slide.



Figure 2-28: BOND Universal Covertiles

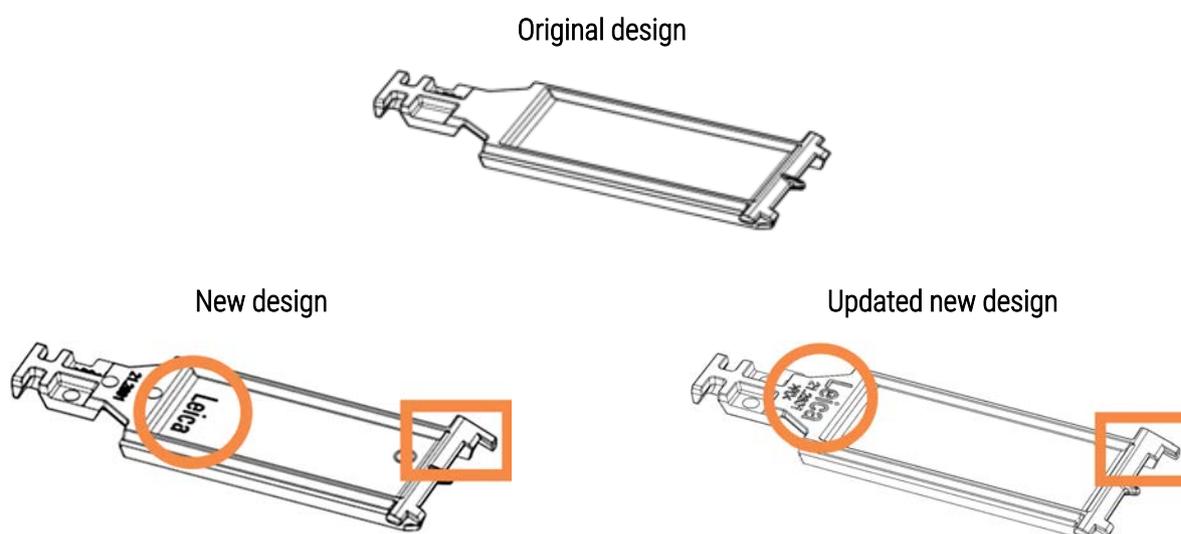

Covertiles can be reused up to 25 times provided they are not heavily discolored or damaged, and provided they are cleaned properly (see [12.3 Covertiles](#)). Discard damaged Covertiles.


Some assays require the use of new (unused) Covertiles. Check the relevant assay Instructions For Use (IFU) beforehand.

## 2.6.3 Slide trays

Use the slide trays to hold slides and Covertiles in position when you load them into the BOND-III or BOND-MAX Processing Module. Each tray can hold ten slides.

There are two slide tray designs – they can be used interchangeably.

**Figure 2-29:** Slide tray (new design (left) and old design (right))

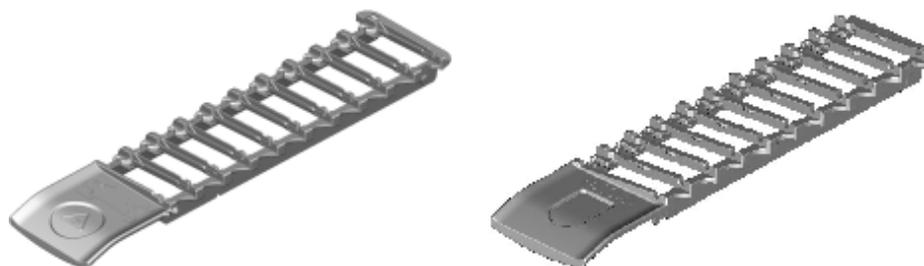


For instructions on loading slides and Covertiles into the processing module, see [4.1.3.5 Loading Slides](#).

## 2.6.4 Reagent trays

Reagent trays hold 7 mL and 30 mL BOND reagent containers, and 6 mL BOND titration containers. The trays are loaded onto the processing module in the reagent platform (see [2.2.6.5 Reagent Platform](#)).

**Figure 2-30:** Reagent tray

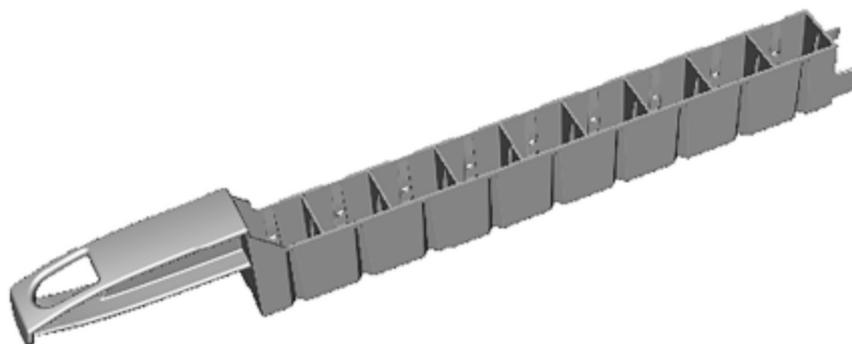

Container positions within reagent trays are numbered from the end furthest from the handle (position 1) to the position nearest the handle (position 9).

For instructions on loading reagents into the processing module, see [4.1.4 Loading the Reagents](#).

## 2.6.5 Reagent Systems and Containers

A range of reagent container types can be used in reagent trays.

### 2.6.5.1 Reagent Systems

Reagent systems are predefined sets of reagents in a reagent tray. BOND uses two types of reagent systems:

- BOND detection systems
- BOND cleaning systems

See [8.1 Reagent Management Overview](#) for further details on each of these.

A reagent system is registered by scanning the barcode(s) on the side of its reagent tray, rather than by scanning the barcode labels on each of its component containers. The reagent containers that make up the system are not individually registered, are locked into the tray, and should not be removed or rearranged. When a reagent system is exhausted or expired, discard the complete tray and containers.

### 2.6.5.2 BOND Ready-To-Use Reagents

BOND ready-to-use reagents use containers that fit into the reagent trays. These reagents are provided in concentrations optimized for the BOND system, so require only registration and opening before use.

The containers hold different volumes of reagent, from 3.75 mL up to 30 mL, depending on the reagent type.

### 2.6.5.3 Open Containers

Open containers are empty, clean, containers for holding a user-supplied reagent (for example a primary antibody). They are available in 7 mL and 30 mL sizes. Open containers can be used with one reagent only, and can be refilled so that each container delivers a maximum of 40 mL of reagent (see [8.3.2.4 Refilling an Open Reagent Container](#)).

Only BOND open containers should be used on the BOND system – do not attempt to use other containers (except titration containers) for user-supplied reagents.

### 2.6.5.4 Titration Containers

Special purpose titration containers are also available (see [14.2.1.4 Titration Kit](#)). These include a 6 mL removable insert so that the reagent in a container can be easily changed, for example during concentration optimization. Like open containers, each titration container can be refilled and used to deliver up to 40 mL of reagent. Five inserts are provided per container in the BOND titration kit, available from Leica Biosystems.

The kits can be re-used for different antibodies and are designed with minimal dead volume to preserve reagent.

## 2.7 Relocating a Processing Module



**WARNING:** Contact customer support to relocate the processing module over a large distance or to transport for repair or disposal. The processing module is heavy and is not designed to be moved by the user.



**CAUTION:** Do not block the ventilation openings located on the back cover of the processing module. Also, do not cover the ventilation openings located on the syringe door (BOND-MAX).

If relocating a BOND Processing Module a short distance, consider the following points before proceeding:

- Ensure the flooring is able to withstand the weight of the processing module, see [18.2 Physical Specifications](#) in [18 Specifications](#) for dimensions, and consult with local requirements before moving.
- Evaluate the electromagnetic environment prior to operation of the processing module for interference.
- Do not use a BOND Processing Module in close proximity to sources of strong electromagnetic radiation. For example unshielded intentional RF sources, which may interfere with proper operation.
- Do not lift a BOND Processing Module with a forklift.
- Use only the power cord supplied, and ensure that the operator can access the power connection that the cord is plugged into.
- Ensure the power cord and Ethernet cable are disconnected before moving.
- Ensure adequate ventilation.
- Empty waste containers before moving.
- Ensure you unlock all four wheels on the BOND-III Processing Module (or trolley, for a BOND-MAX) before moving, and re-lock when in the new location.

## 2.8 Instrument Decommissioning and Disposal

The instrument, including parts and associated accessories used, must be disposed of according to applicable local procedures and regulations. Dispose of any reagents used with the instrument in accordance with the recommendations of the reagent manufacturer.

Clean and decontaminate in accordance with local procedures and regulations before returning or disposing of the instrument or parts and accessories.

In the EU, all electronic waste must be disposed of in accordance with Waste Electrical and Electronic Equipment (2012/19/EU). In regions outside of the EU, follow local procedures and regulations for the disposal of electronic waste.

If you need assistance, contact your local Leica Biosystems representative.

# 3

## Software Overview (on BOND Controller)

This chapter is designed to help you become familiar with the general features of the BOND software. For instructions to use the software to run the processing modules and manage slides, cases and reagents, see the relevant chapters. See [10 Administration Client \(on BOND Controller\)](#) for instructions for the administration client.

- [3.1 System Architecture](#)
- [3.2 Starting and Shutting Down the BOND Software](#)
- [3.3 User Roles](#)
- [3.4 Clinical Client Interface Overview](#)
- [3.5 BOND-ADVANCE Dashboard](#)
- [3.6 Notifications, Warnings, and Alarms](#)
- [3.7 Reports](#)
- [3.8 Help](#)
- [3.9 About BOND](#)
- [3.10 BOND Data Definitions](#)
- [3.11 Software Updates](#)
- [3.12 BOND-PRIME Log Retrieval Tool](#)

## 3.1 System Architecture

Users interact with the BOND software through two “clients” – in effect, two separate programs. These are the clinical client (or simply “the client”) and the administration client. The clinical client is for everyday operation – to set up reagents, protocols, and cases and slides in preparation for processing, and then to monitor and control runs on the processing module. The administration client is used to configure advanced settings that are rarely changed after initial setup. These include slide label configurations, hardware connections, and user accounts (see [10 Administration Client \(on BOND Controller\)](#)).


- [3.1.1 Single-Seat Configuration](#)
- [3.1.2 BOND-ADVANCE](#)

### 3.1.1 Single-Seat Configuration

Single-seat installations have just one “BOND controller”, which is the single point for user interaction with the BOND software (and through that, control of the processing modules). The BOND controller carries out all software processing for the system and maintains the system database, where case and slide information is held. It has a keyboard, mouse, and slide label printer and scanner attached.

There is a limit of five processing modules in a single-seat installation. If you need more processing modules, upgrade to BOND-ADVANCE.

**Figure 3-1:** Diagram of a single-seat installation

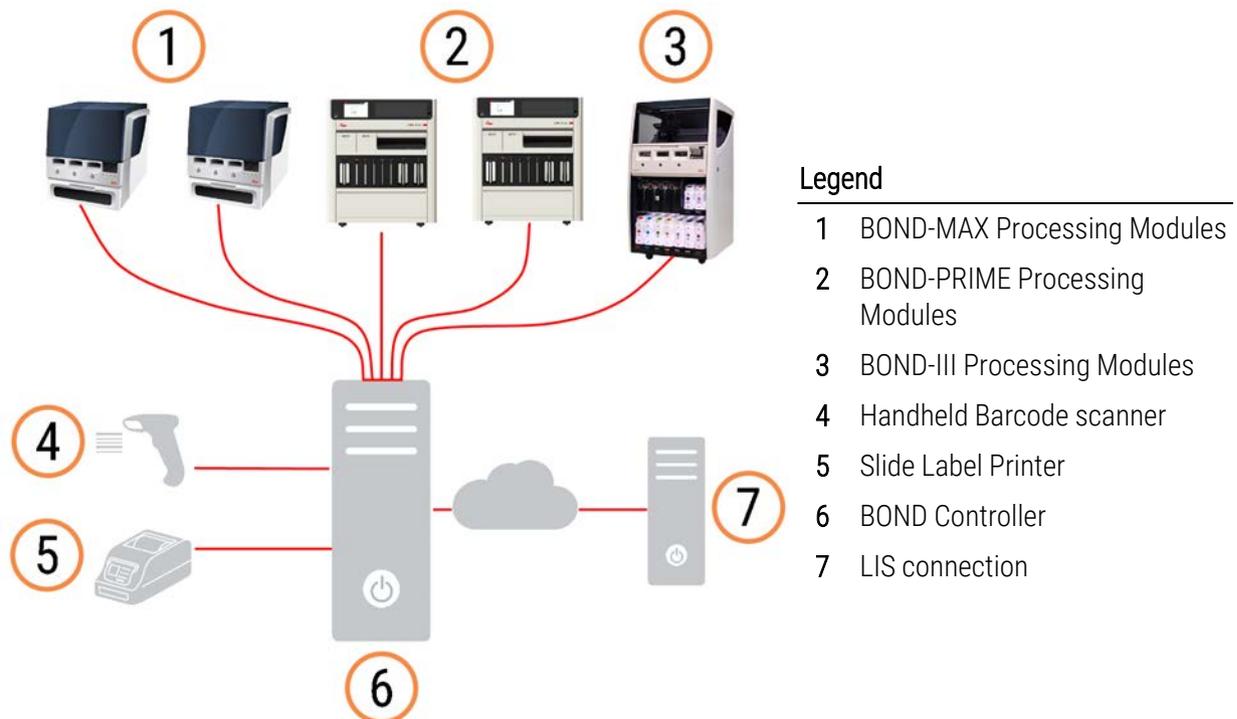


## 3.1.2 BOND-ADVANCE

BOND installations with more than five processing modules are configured as multi-seat BOND-ADVANCE installations. The BOND controller continues to perform all software processing for the entire system, but most input comes from BOND-ADVANCE terminals located near processing module work cells (called “pods” in the BOND software) that they control. Pods are defined in the administration client.

A monitor connected to the controller shows the “BOND Dashboard”, which gives a summary of the real-time status of every processing module in the system (see [3.5 BOND-ADVANCE Dashboard](#)). The dashboard can also be connected to a dedicated terminal if requested. The administration client can be run from any terminal.

Some laboratories may have a secondary controller, which backs up all BOND data in real time and can be switched to, in the case that the primary controller malfunctions. For details of how to do this, see [16.2 Switching to the Secondary Controller](#).

**Figure 3-2:** Diagram of a BOND-ADVANCE installation – the BOND-ADVANCE terminals control the processing modules in the pods, via the BOND-ADVANCE controller.

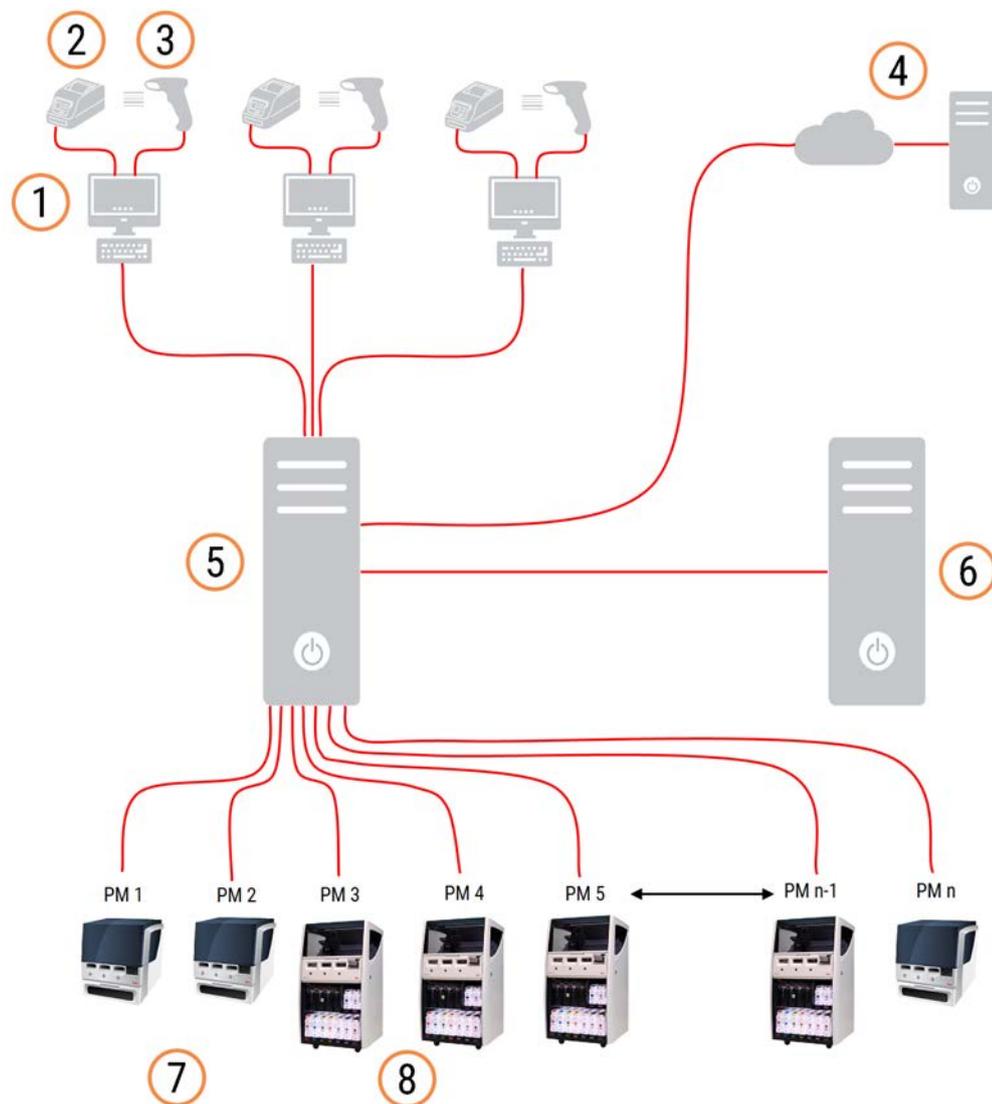

### Legend

- |                                   |                                     |
|-----------------------------------|-------------------------------------|
| 1 BOND-ADVANCE terminals          | 6 BOND-ADVANCE Secondary Controller |
| 2 Slide Label Printers            | 7 BOND-MAX Processing Modules       |
| 3 Barcode Scanners                | 8 BOND-III Processing Modules       |
| 4 LIS connection                  |                                     |
| 5 BOND-ADVANCE Primary Controller |                                     |

## 3.2 Starting and Shutting Down the BOND Software

### 3.2.1 Start the BOND software

You can start the BOND software before or after starting any connected processing modules. To start the software:

- 1 **Single-seat:** if necessary, start the BOND controller and log on to Windows® as user “BONDUser”. When the system is new, no initial password is configured. However, if a password has been configured, see the laboratory manager for the details.

**BOND-ADVANCE:** if necessary, start the BOND-ADVANCE controller. The dashboard should open automatically (if not, double-click the **BONDDashboard** shortcut on the Windows desktop. Press <F11> to set Internet Explorer to full screen mode).

Start the terminal you need and log on to Windows as user “BONDUser”.

- 2 Double-click the appropriate desktop icon to start the clinical client or administration client (or both – they can run concurrently).
- 3 Enter your BOND username and password.

If you are opening the clinical client in a BOND-ADVANCE system you can select the pod to connect to.



The BOND-ADVANCE clinical client remembers the last pod selected.

You can change your password on the logon dialog at any time. Follow laboratory procedures for frequency of password changes and password strength. The BOND software requires that passwords are 4–14 characters and include at least one number.

If you are a BOND-PRIME user, you can also set or change your processing module PIN. Refer to [3.2.2 Set or change your BOND-PRIME Processing Module PIN](#) below.

- 4 Click **Log on**.

The system displays the clinical client screen or the administration client screen as selected. The title bar displays the username of the user that is currently logged on. If you take over from another user you should log off that user and log on again with your own username. For BOND-ADVANCE, the title bar also displays the currently selected pod.




**WARNING:** Because the BOND software is controlling important hardware and storing sensitive data, do not run other applications on the BOND controller – this will invalidate the BOND System warranty. Do not use the BOND controller for general purpose computing.

## 3.2.2 Set or change your BOND-PRIME Processing Module PIN


- 1 In the logon dialog, click **Set processing module PIN**.

**Figure 3-3:** Logon dialogs for clinical client and administration client

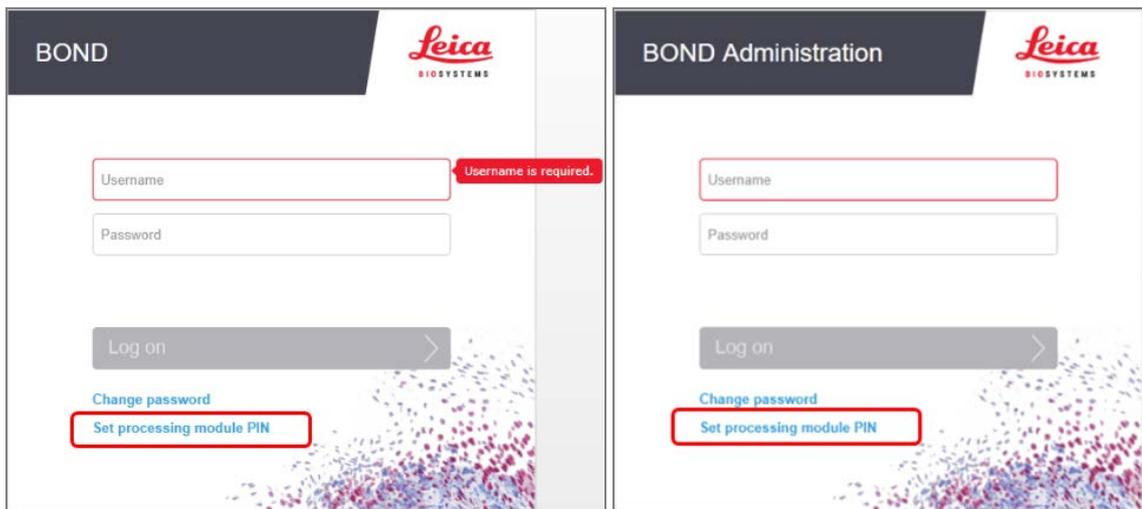

- 2 Enter your BOND username and password.
- 3 Enter a 4-digit PIN, then confirm your PIN below.

**Figure 3-4:** Set processing module PIN dialog

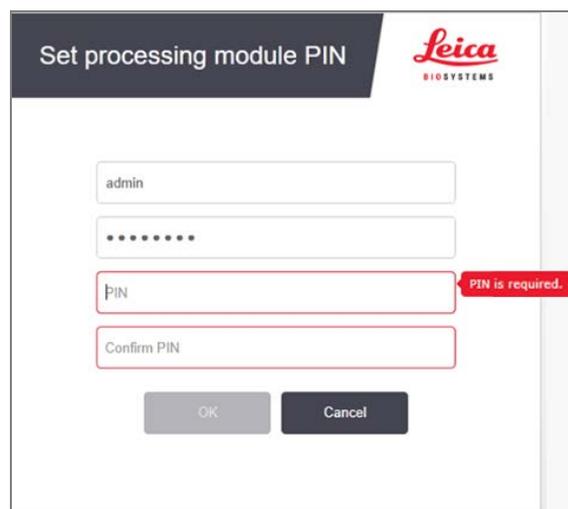

- 4 Click **OK**.


## 3.2.3 Desktop Backgrounds

Different Windows desktop backgrounds are used to distinguish between the type of Windows user currently logged on, and the role of the currently connected controller or terminal.

### Single-seat

Normally, you would see the “Controller BONDUser” background, but if a service engineer is on site, you may see the “Controller BONDSERVICE” background. See [Figure 3-5](#).

**Figure 3-5:** BOND desktop backgrounds: “Controller BONDUser” and “Controller BONDSERVICE”

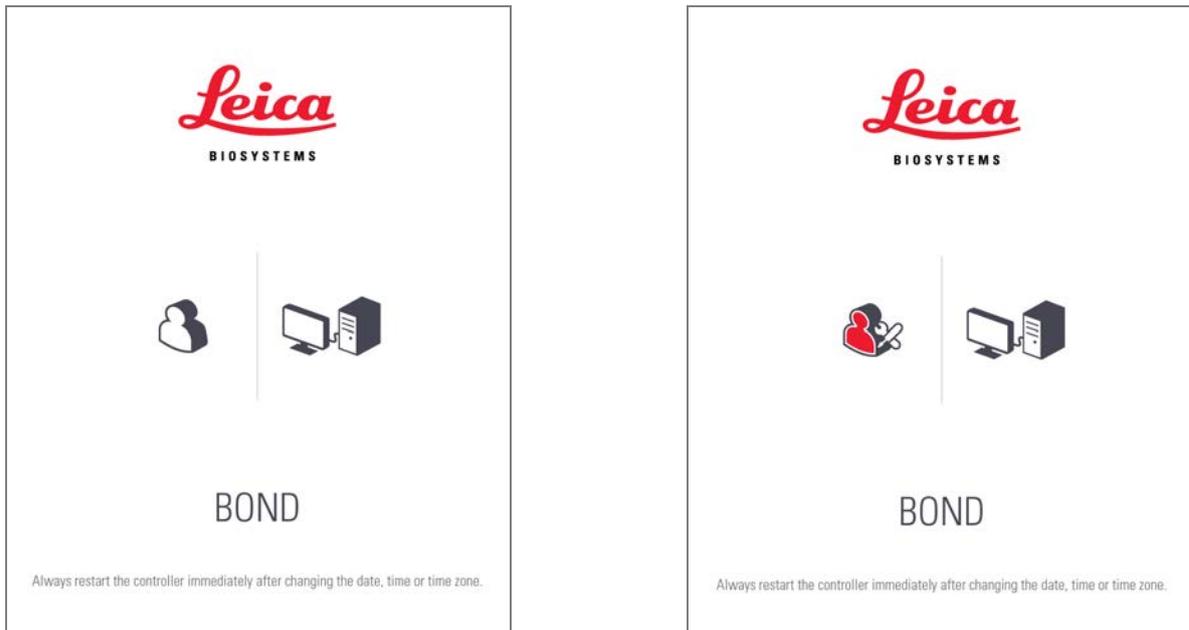

## BOND-ADVANCE

On the BOND-ADVANCE desktop backgrounds, the connected controller’s or terminal’s icon changes according to its role. See the examples in [Figure 3-6](#).

**Figure 3-6:** Terminal, Standalone Controller, Primary Controller and Secondary Controller icons



You will also see different icons that represent the type of user. See [Figure 3-7](#).

**Figure 3-7:** BONDUser, BONDService, BONDControl and BONDDashboard icons



### 3.2.4 Shut down the BOND software

To shut down the clinical client or administration client, click the **Log out** icon on the function bar.

You can shut down the clinical client while a run is in progress if you need to change users. Do not leave the processing module running without the client open for any length of time, however, as you will not see any alarms or warnings.



Never shut down the BOND controller during a run. If closing down the BOND system completely, you can shut down the software before or after turning off the processing modules.

## 3.3 User Roles

There are three user roles in the BOND system:

- **Operator:** can update reagent inventory, create cases and slides, start and control staining runs, create and edit doctors, and generate reports.
- **Supervisor:** create and edit protocols, reagents, and panels.
- **Administrator:** has access to the administration client to manage BOND users and configure system-wide settings.

Users can have multiple roles. Supervisors automatically get operator roles. Only users with the administrator role can run the administration client, and only users with operator or supervisor roles can run the clinical client.

Users are created and their roles set on the administration client **Users** screen (see [10.1 Users](#)).



The username of the currently logged-in user is displayed in the client window's title bar.

## 3.4 Clinical Client Interface Overview

At the top and at the left of the clinical client screen there are features that are common to all pages of the software. This section describes these features, and also describes general features of the software.



- [3.4.1 Function Bar](#)
- [3.4.2 Processing Module Tabs](#)
- [3.4.3 Sorting Tables](#)
- [3.4.4 Date Format](#)

### 3.4.1 Function Bar

The function bar is located at the top of the BOND software screen, and provides quick access to the main sections of the BOND software.



Click on an icon on the function bar to go to a screen or perform a specific function as described in the following table.

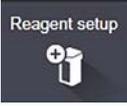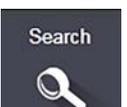Icon	Screen displayed (or function performed)	Purpose
	Slide setup	Create cases and set up slides in the BOND software. For more information see <a href="#">6 Slide Setup (on BOND Controller)</a> .
	Protocol setup	Edit and manage your protocols. For more information refer to <a href="#">7 Protocols (on BOND Controller)</a> .
	Reagent setup, Reagent inventory, and Reagent panels (3 tabs)	Configure new reagents, manage reagent inventory, and create reagent panels (sets of markers used to speed up slide creation). For more information refer to <a href="#">8 Reagent Management (on BOND Controller)</a> .
	Slide history	Display details of slides that have been run on the BOND system, view details of individual slides, runs and cases, and generate a wide range of reports. For more information refer to <a href="#">9 Slide History (on BOND Controller)</a> .
	Search	Identify slides, reagent containers and reagent systems by scanning the barcode or manually entering the slide ID or reagent ID. A unified search dialog is used where the search content (slide or reagent) is automatically identified by the system. See <a href="#">6.5.6 Manually Identifying a Slide</a> or <a href="#">8.1.1.3 Reagent Identification</a> for further information.

Icon	Screen displayed (or function performed)	Purpose
	Help	Open this user manual.
	Log out	Log out of the client.
	Backup failed	A database backup has failed to complete successfully. For more information refer to <a href="#">10.5.3 Database Backups</a> .
	LIS not connected	An LIS module is installed, but is currently not connected to the LIS. For more information refer to <a href="#">11.3 LIS Connection and Initialization</a> .
	LIS connected	An LIS module is installed and is currently connected to the LIS. For more information refer to <a href="#">11.3 LIS Connection and Initialization</a> .
	LIS notifications	The number of outstanding LIS notifications. For more information refer to <a href="#">11.4 LIS Notifications</a> .

At the top right of the screen is the Leica Biosystems logo. Click the logo to display the **About BOND** dialog. See [3.9 About BOND](#).

At the top right of the screen, warning and status icons may be displayed. See [11 LIS Integration Package \(on BOND Controller\)](#) and [10.4.2 Audit Trail](#).

## 3.4.2 Processing Module Tabs



These tabs do not appear for BOND-PRIME Processing Modules. For system status and maintenance information related to the BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual.

Tabs on the left-hand side of the interface open **System status**, **Protocol status** and **Maintenance** screens for each of the processing modules in the pod that the client is connected to. The tabs themselves display some information about the current state of each processing module (see [5.1.1 Processing Module Tabs](#)).

**Figure 3-8:** Processing Module Tab (BOND-MAX)



**System status** screens show the state of each processing module, while the **Protocol status** screens show the progress of protocols being run. The **Maintenance** screen has commands for a range of maintenance operations.

## 3.4.3 Sorting Tables

Many screens in the BOND software display data in tables. Click on a column heading to sort by the values in that column. An upward triangle appears beside the heading to indicate the table is being sorted in ascending order (0-9 A-Z). Click again to sort in descending order; the triangle points down.

To sort on two columns, click the first column you want to sort by, then hold the <Shift> key and click on the second column. The order of values in the first column does not change, but where there are multiple rows with the same column-one value, the rows are ordered by the values in the second column.

You can also resize column widths and drag columns to new positions in the table.

Any changes you make to table sorting, also column widths and positions, are retained until you log out.

## 3.4.4 Date Format

For single-seat installations, dates and times in the software and reports use the formats set in the BOND controller operating system. For BOND-ADVANCE installations, the formats set in the terminals are used. Short and long date formats should have maximum lengths of 12 and 28 characters respectively.

## 3.5 BOND-ADVANCE Dashboard



BOND-PRIME Processing Modules are not displayed on the BOND-ADVANCE Dashboard.

For BOND-ADVANCE installations the BOND dashboard is displayed on a monitor connected to the controller or terminal. It gives a real-time status summary for all the processing modules in the system.

Figure 3-9: The BOND Dashboard



### Legend

- |   |   |
|---|---|
| 1 Processing modules with alarms        | 4 Processing modules with finished runs   |
| 2 Processing modules with warnings      | 5 Individual processing module panes, showing status of slide staining assemblies |
| 3 Processing modules with notifications |   |

At the top of the screen are four icons showing processing modules with (from left to right) alarms, warnings, notifications, and finished runs. If there is more than one processing module in a category, the icons cycle through them in sequence.

Beneath the top row are panes for each processing module in the system, ordered alphabetically by name (set in the administration client). The panes show the status of each of the three slide staining assemblies on the processing modules, plus any general status indicators applying to the modules as a whole.

## 3.5.1 Dashboard icons

Icon	Description
	The processing module has an alarm.
	The processing module has a warning.
	The processing module is functioning normally. The timestamp has a white background (00:14:28).
	The run has successfully completed on at least one tray on the processing module, and the tray is ready to unload. The timestamp has a green background (00:11:36).
	The processing module has a notification.
	The processing module has been disconnected.

Processing modules with warnings, notifications or finished runs appear both in the appropriate position at the top of the display, and as individual panes in the alphabetical listing below.

## 3.5.2 Slide Staining Assembly Status



This section does not apply to the BOND-PRIME Processing Module.

The status of each slide staining assembly is shown on the processing module panes. There are three status categories:

- **Locked** – shown when the slide tray is locked. No time is shown.
- **Processing** – processing has started on the tray. The **Time** column shows the time left to run, in hours, minutes and seconds.
- **Completed** – processing has finished. The **Time** column shows the time since the run finished, in hours, minutes and seconds, and has a green background.

If no tray is locked the row is blank.

You cannot interact with the dashboard. If the dashboard displays a message that a PM needs attention, you need to interact via the BOND-ADVANCE terminal.

## 3.6 Notifications, Warnings, and Alarms

The BOND system has three alert levels: notification, warning, and alarm. Each alert is indicated by an icon that appears on the **System status** screen over or adjacent to the item subject to the alert message. A corresponding alert icon may also appear on the processing module tab to provide an indication irrespective of the currently visible screen (refer to [5.1.1 Processing Module Tabs](#)). In BOND-ADVANCE, alerts also appear on the dashboard (see [3.5 BOND-ADVANCE Dashboard](#)).

Right-clicking an alert icon and selecting **Attention message** launches a dialog that details the alert condition.

The three alert levels and their associated icons are described below.



Steady

### Notification

Provides information about a condition that may require action now or later, in order to start a run or to avoid a later delay in processing.



Steady

### Warning

Action is required now, possibly to avoid a delay in processing. Delays in processing can compromise staining.



Flashing

### Alarm

Action is urgently required. If the processing module was processing slides it has been paused and cannot resume until you rectify the alert condition. Delays in processing can compromise staining.



**WARNING:** Always read warning and alarm messages as soon as you see the icons (especially when a run is in progress). Quick response may avoid compromising slide staining.

It is also advisable to act on notifications that occur during runs as soon as possible.

## 3.7 Reports

The BOND software generates a number of reports. These open into a “BOND Report Viewer” in a new window. General information such as time, place and the processing module that the report refers to is provided in report headings. Report page footers show the time and date each report was generated, and page numbers.



Some reports, especially those containing case, slide or reagent information, may take minutes to generate, particularly in laboratories with many processing modules and/or high turnover.

The BOND report viewer has a small range of navigation, viewing and output options. As well as opening a standard print dialog to select and configure a printer, or to select which pages to print, you can export reports in a range of formats, including PDF, XLS, CSV and text.

You can use various keyboard shortcuts for navigation, such as **Page Up**, **Page Down**, **Home** (first page) and **End** (last page). Other functions are also available via keyboard shortcuts, for example **Ctrl-F** displays the Search dialog, **Ctrl-S** opens the Save dialog, and **Ctrl-P** opens the Print dialog.



BOND reports are documented in the following sections:

- [5.3.1 Maintenance Report](#)
- [6.7 Slide Setup Summary Report](#)
- [7.5 Protocol Reports](#)
- [8.3.4 Inventory Details Report](#)
- [8.3.5 Reagent Usage Report](#)
- [9.4 Run Events Report](#)
- [9.5 Run Details Report](#)
- [9.6 Case Report](#)
- [9.8 Slides Summary](#)
- [9.10 Brief Slide History](#)
- [3.9.1 Service Log](#)

It is also possible to export slide information in a CSV (comma-separated values) file format. See [9.9 Export Data](#).

## 3.8 Help

The **Help** icon on the function bar in both the Clinical and administration clients opens a popup window that allows you to select the version of the user manual you want to open.

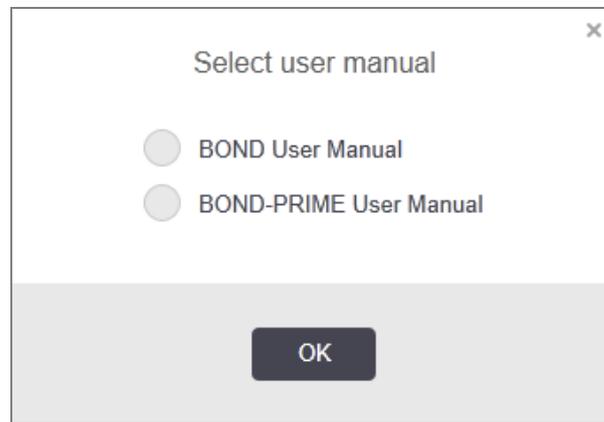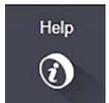


Alternatively, you can open the **Select user manual** from the desktop icon.

## 3.9 About BOND

Click the Leica Biosystems logo at the top right of the screen to view the **About BOND** dialog, which lists system information.

Figure 3-10: About BOND dialog

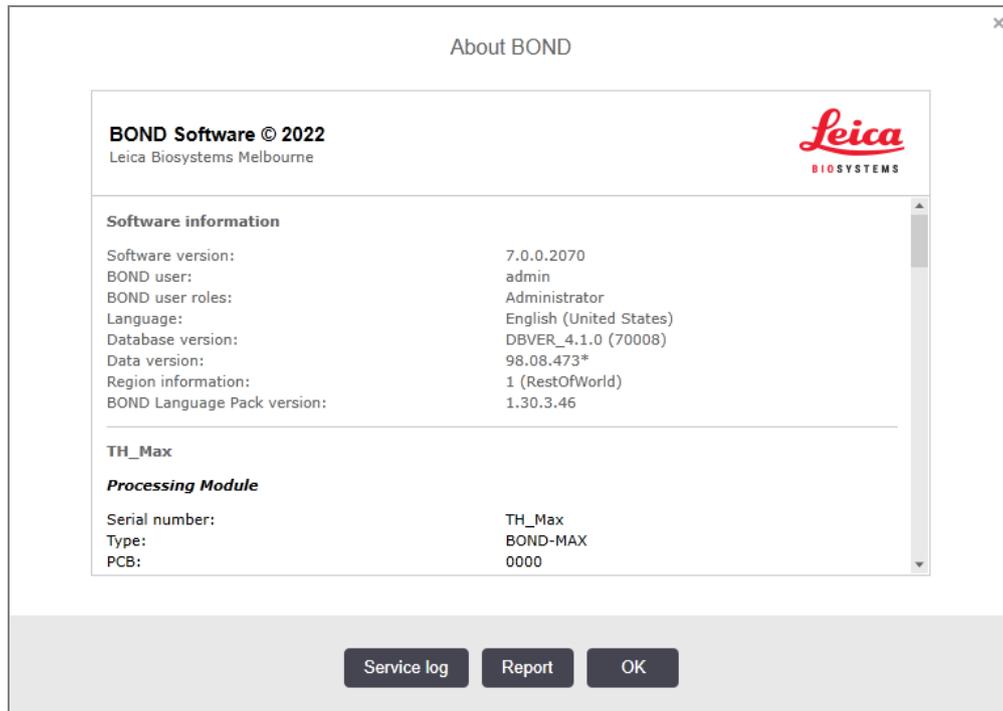

Much of the information in the **About BOND** dialog is principally of interest to service personnel, however laboratory staff may find the initial information group useful, especially during discussions with customer support.

The information contained in the initial group is as follows:

- Software version: the software release version number.
- BOND user: the username of the current user.
- BOND user roles: the user roles of the current user.
- Language: the current language.
- Database version: the version of database (refers to the database structure).
- Data version: the version of data loaded in the database.
- Region information: the world region the system is configured for (set during installation).

You can save the information in the dialog to a text file – click **Report** and select a location to save the file.

## 3.9.1 Service Log

In the administration client you can generate service log reports from the **About BOND** dialog. Typically this would be done at the request of a service representative. To create a service log:

- 1 Click **Service log** in the **About BOND** dialog (see [Figure 3-10](#)).
- 2 Select either:
  - the serial number of a specific processing module,
  - **\*System\*** to report on software or controller events in the BOND system, or
  - **\*LIS\*** for events related to the LIS system.
- 3 Select a time period for the report, or click **Last seven days**.
- 4 To generate the report, click **Generate**. The report appears in the report viewer – see [3.7 Reports](#).
- 5 To export the service log to a CSV file, click **Export Data**.

## 3.10 BOND Data Definitions

The BOND controller stores data definitions that contain all reagent and protocol details for the entire system. Default protocols and details of Leica Biosystems reagents and reagent systems are also included.

### 3.10.1 Data Definitions Updates

Leica Biosystems periodically distributes data definitions updates on the web site, e.g. to add newly released reagents. See [10.4 BDD](#) for instructions to update the data definitions.



When you update the data definitions, you must only use update files that have the **.bdd** file extension and are for the correct region.

Check your current data version in the **About BOND** dialog. To view this dialog, click the Leica Biosystems logo at the top right of the BOND software screen. Also see [3.9 About BOND](#).

## 3.11 Software Updates

Leica Biosystems may release software updates as the BOND system continues to develop. The updates may be to the main software or to the database that contains the default protocols, reagents and reagent systems.

The version number of the current software version can be found in the **About BOND** dialog (refer to [3.9 About BOND](#)). The data version is also displayed in the **About BOND** dialog.

## 3.12 BOND-PRIME Log Retrieval Tool

For BOND-PRIME Processing Modules connected to the BOND Controller, you can retrieve the processing module logs when requested by Customer Support.

### 3.12.1 Retrieve BOND-PRIME logs

- 1 For single-seat BOND systems, minimize the BOND Software window to reveal the Desktop on the BOND Controller.  
For BOND-ADVANCE systems, press **Alt + F4** simultaneously to close the BOND Dashboard and reveal the Desktop.
- 2 Double click on the **BOND-PRIME Log Retrieval** icon.




The **BOND-PRIME Log Retrieval** window is displayed. All BOND-PRIME Processing Modules that are connected to the BOND Controller and powered on are listed.

- 3 Click on the processing module that you want to retrieve the logs for.




If the processing module you are looking for is not listed, make sure it is powered on, then press **F5** to refresh the list.

- 4 Click on the calendar icon and select the date of the logs that you want to download.

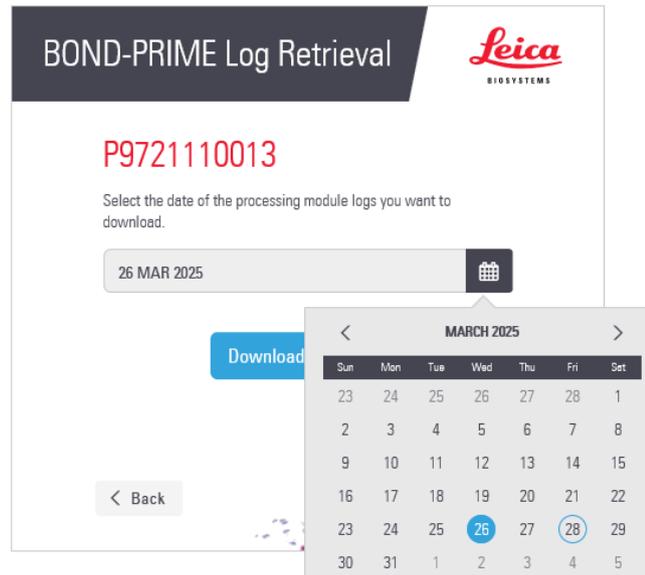


- 5 Click on the **Download Logs** button, and then the **Save** button at the bottom of the screen.

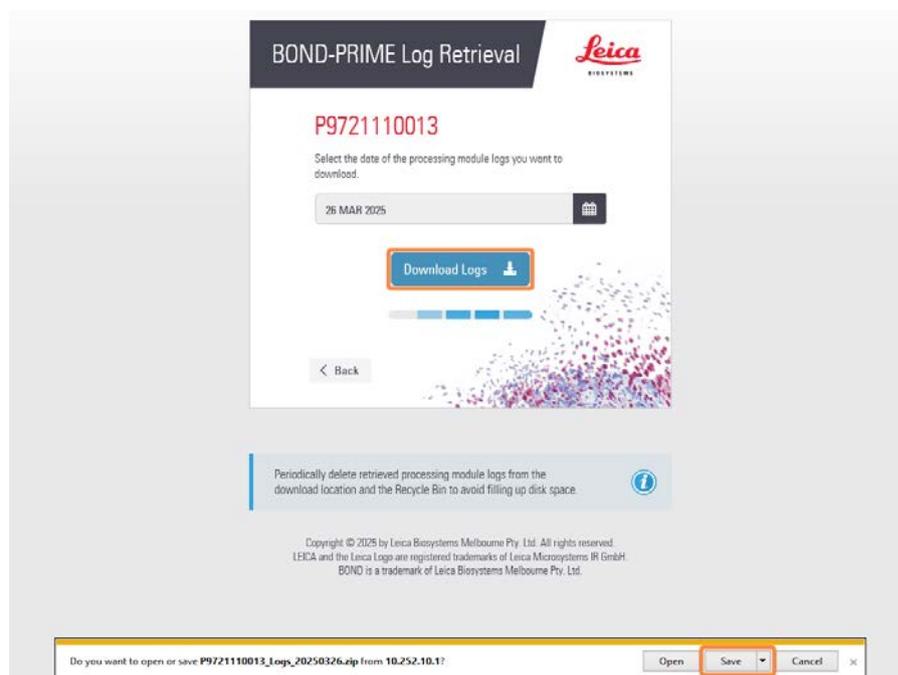


The default location for the downloaded files is the **Downloads** folder. If you click on the arrow next to the **Save** button you can choose a different location.

If you need to retrieve logs for more than one day, repeat **step 4** and **step 5** for each date.

- 6 When the download is complete, click on the **Open Folder** button.

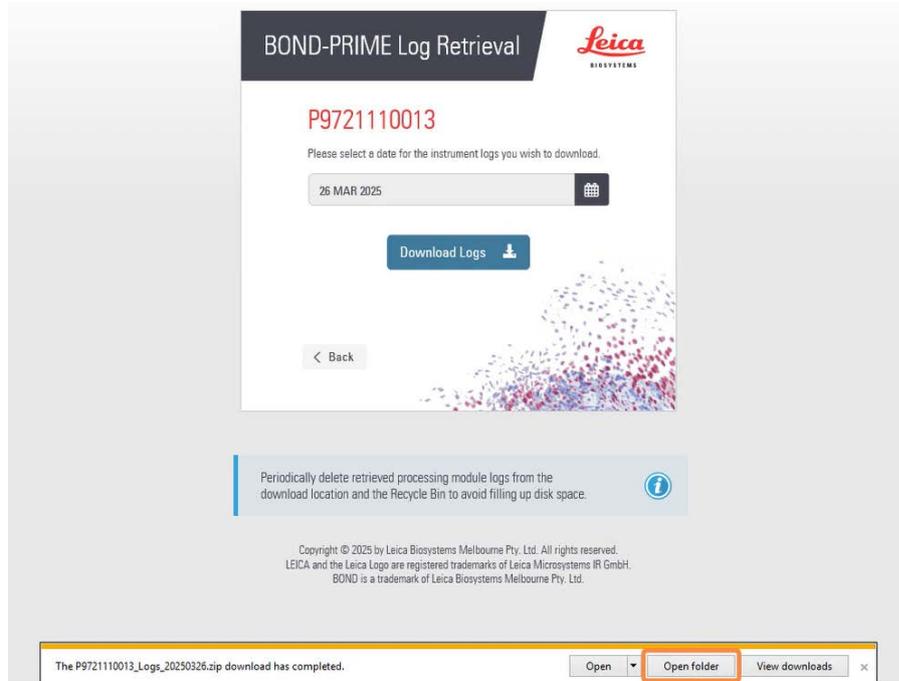

Windows File Explorer opens to the folder where the log files are saved.

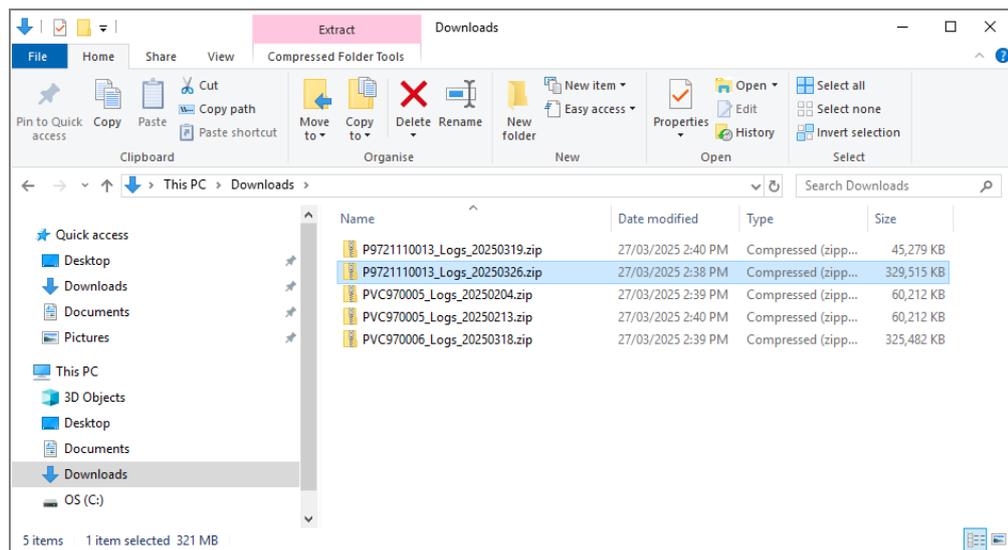

The file name is [processing module serial number]\_Logs\_[date of logs]. The date of logs is in the format yyyyymmdd.

- 7 Send the file to your Customer Support Representative.



Retrieved logs saved on the BOND Controller should be deleted once they are no longer needed. Refer to [3.12.2 Delete retrieved logs](#).


## 3.12.2 Delete retrieved logs

Retrieved logs saved on the BOND Controller should be deleted once they are no longer needed.




If you accidentally delete logs that you still need, you can simply retrieve them again following the steps in [3.12.1 Retrieve BOND-PRIME logs](#).


- 1 Open **Windows File Explorer** and navigate to the **Downloads** folder.

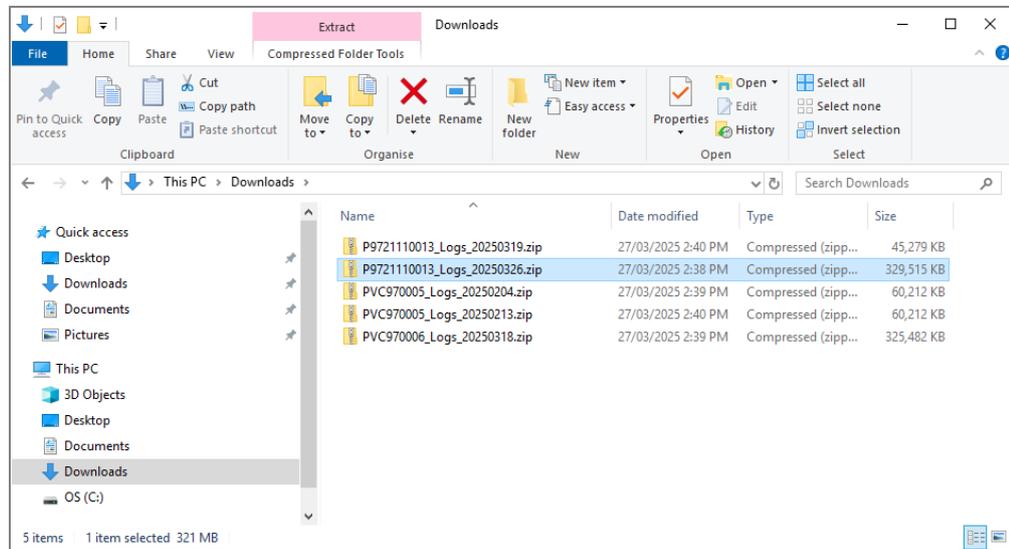

- 2 Highlight any files that you no longer need and press the **Delete** key on the keyboard.  
This sends the files to the Recycle Bin.
- 3 On the Desktop of the BOND Controller, right click on the **Recycle Bin** icon, and select **Empty Recycle Bin**.

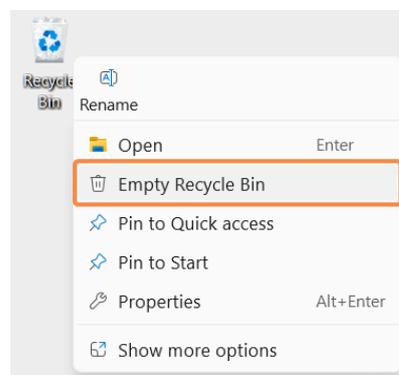

- 4 Click **Yes** to confirm you want to delete the files.

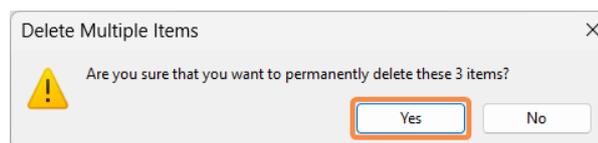

# 4

## Quick Start

This chapter is designed to take you on a guided tour of your first individual run with the BOND system. In it we create a sample case and configure and process four slides, testing with BOND ready-to-use primary antibodies \*CD5, \*CD3, \*CD10, and \*Bcl-6.

For BOND-III and BOND-MAX, the default protocol and detection system for these antibodies is \*IHC Protocol F and BOND Polymer Refine Detection System (DS9800).

On BOND-PRIME Processing Modules, the default protocol detection system is \*IHC Protocol F and BOND-PRIME Polymer DAB Detection System (DS9824). The process also uses the ancillary BOND-PRIME Hematoxylin (AR0096).

The procedures described are also valid for ISH probes and protocols (simply swap the antibody for a probe and replace IHC protocols with ISH protocols).

### 4.1 BOND-III and BOND-MAX

Before you start you should be familiar with the relevant sections of the [2 Hardware](#) and [3 Software Overview \(on BOND Controller\)](#) chapters of this manual.

- [4.1.1 Preliminary Checks and Startup](#)
- [4.1.2 Protocol and Reagent Checks](#)
- [4.1.3 Setting Up Slides](#)
- [4.1.4 Loading the Reagents](#)
- [4.1.5 Running the Protocol](#)
- [4.1.6 Finishing](#)

## 4.1.1 Preliminary Checks and Startup

Carry out the following steps before beginning a run:

- 1 Ensure that the processing module is clean and that all maintenance tasks are up to date (see [12.1 Cleaning and Maintenance Schedule](#)).

Daily pre-run tasks are:

- a Check bulk waste containers are no more than half full; on the current-model BOND-MAX, use the white horizontal line on the container label as a guide to the half-full level (see [Figure 12-3](#)).
  - b Check bulk reagent containers have an adequate volume of the correct reagent.
- 2 Check wash blocks and mixing station – clean or replace if necessary.
  - 3 Check that the slide labeler has an adequate supply of labels.
  - 4 If the processing module and controller (and terminal, for BOND-ADVANCE) are not on, turn them on now.
  - 5 When the controller or terminal is running, start the clinical client.
  - 6 Once the software has started, check the **Status** screens to ensure there are no processing module notifications. Rectify before attempting to run any slides.
  - 7 Power up the slide labeler.

## 4.1.2 Protocol and Reagent Checks

You should check that the protocols and reagents you are going to use in the run are set up in the software.

To check the protocols:

- 1 Select the **Protocol setup** icon (shown at the right) on the function bar.
- 2 Check that “\*IHC Protocol F” is listed in the table.



If the protocol is not listed select **All** in the **Preferred status** filter at the bottom of the screen (see [7.2 Protocol Setup Screen](#)).

- 3 Select the protocol in the table, click **Open**, and note the preferred detection system in the **Edit protocol properties** dialog; **BOND Polymer Refine Detection**.

Make sure that the protocol is selected as **Preferred** near the top of the dialog (you need to be logged on with a supervisor user role to make the protocol preferred, if it is not).

To check the reagents:

This check assumes that you have stock of the required antibodies and detection system, and that these have been registered in the BOND reagent inventory. See [8.3.3 Registering Reagents and Reagent Systems](#) for more information.



- 1 Select the **Reagent setup** icon (shown at the right) on the function bar.
- 2 On the **Setup** tab select **Primaries** as **Reagent type**, **Leica Microsystems** as **Supplier**, and **All** for **Preferred status** in the filters at the bottom of the screen.
- 3 Locate each of the antibodies that we need (\*CD5, \*CD3, \*CD10, and \*Bcl-6) and double-click to open the **Edit reagent properties** dialog:
  - a Click **Restore factory default protocols** (you need to be logged on with a supervisor user role to restore factory defaults). This ensures that the default staining protocol, \*IHC Protocol F, and default pretreatment protocols are set.
  - b Ensure that the reagent is checked as **Preferred** (you need to be logged on with a supervisor user role to make the reagent preferred, if it is not).
  - c Click **Save**.
- 4 Now go to the **Inventory** tab and select **Reagent containers** as **Package type**, **Primaries** as **Reagent type**, **In stock** for **Inventory status**, **Leica Microsystems** for **Supplier** and **Preferred** for **Preferred status** in the filters at the bottom of the screen.

All the antibodies we need should appear with the volumes available.

Make sure that there is sufficient volume for each antibody.

- 5 On the same tab, select **BOND detection systems** as **Package type** and **In stock** for **Inventory status**. Check that the preferred detection system, **BOND Polymer Refine Detection** is listed in the table, and that there is enough volume (see [8.3.1.1 Reporting Volume for Detection Systems](#)).

## 4.1.3 Setting Up Slides

This section describes the processes of telling the BOND system the details it needs to stain the slides and of physically placing slides into the processing module.



The software operations in this section are carried out from the **Slide setup** screen. To display this screen, click the **Slide setup** icon on the function bar.

See subsections:

- [4.1.3.1 Entering Case Details](#)
- [4.1.3.2 Entering Slide Details](#)
- [4.1.3.3 Controls](#)
- [4.1.3.4 Labeling Slides](#)
- [4.1.3.5 Loading Slides](#)

### 4.1.3.1 Entering Case Details

First we must create a “case” in the software for the sample patient. For our example the patient’s name is A Edward, case ID 3688, with Dr. Smith the referring doctor.

- 1 Click **Add case** in the **Slide setup** screen. The software displays the **Add case** dialog.

Figure 4-1: The **Add case** dialog

- 2 Click in the **Case ID** field and type “3688”.
- 3 Click in the **Patient name** field and type “Edward, A”.
- 4 Click **Manage doctors** to open the **Manage doctors** dialog. There, click **Add** to open the **Add doctor** dialog and type “Smith” in the **Name** field. Ensure that the **Preferred** box is checked. Click **Save**.
- 5 Select “Smith” and click **OK** in the **Manage doctors** dialog.
- 6 Select 150 µL dispense volume as the case default. This setting can be overridden during slide setup if you wish.
- 7 Select \*Dewax or \*Bake and Dewax in the **Preparation protocol** field to set a default preparation for slides in the case. This setting can be overridden during slide setup if you wish.
- 8 Click **OK** to close the **Add case** dialog – the table on the left of the **Slide setup** screen displays the new case.

For more information on working with cases, see [6.3 Working with Cases](#).

### 4.1.3.2 Entering Slide Details

At the next stage we create “slides” in the software for each of the four physical slides:

- 1 Select our new case ID 3688 in the case list on the left of the screen.
- 2 Click **Add slide** to display the **Add slide** dialog.

Figure 4-2: The **Add slide** dialog

- 3 Optionally, add a comment specific to this slide.
- 4 Ensure **Test tissue** is selected as the **tissue type**.
- 5 Select a dispense volume suitable for the processing module and tissue size (see [6.5.8 Dispense Volumes and Tissue Position on Slides](#)).

We will assume the slides will be processed on a BOND-III, so set dispense volume to 150 µL.

- 6 Select **Single** and **Routine** in **Staining mode**.
- 7 Click **IHC** to specify the IHC process.
- 8 Select **\*CD5 (4C7)** from the **Marker** list.

In the **Protocols** tab, the software automatically enters the preparation protocol set for the case, and the default staining and retrieval protocols for \*CD5.

9 For Single staining, you should generally leave the default of **Auto** for the Unique Product Identifiers (UPIs) on the left side of the dialog. However, if you want to select a specific lot number for a specific slide (e.g. for lot-to-lot validation), select from the drop-down list in the following fields:

- **Marker UPI** – UPI of the reagent container for the marker
- **Detection System UPI** – UPI of the Detection System.

For slides to be processed on the same run (on BOND-MAX and BOND-III), either the UPIs must be the same, or **Auto** must be selected.

10 Click **Add slide**.


The slide is added to the slide list on the right of the **Slide setup** screen. The **Add slide** dialog remains open.

11 Repeat **step 8–step 10** three times and select **\*CD3 (LN10)**, **\*CD10 (56C6)** and **\*Bcl-6 (LN22)** as the marker in **step 8**.

12 After all slides have been added, click **Close** to close the **Add slide** dialog.

Review the details in the slide list.

**Figure 4-3:** Four slides configured in the **Slide setup** screen

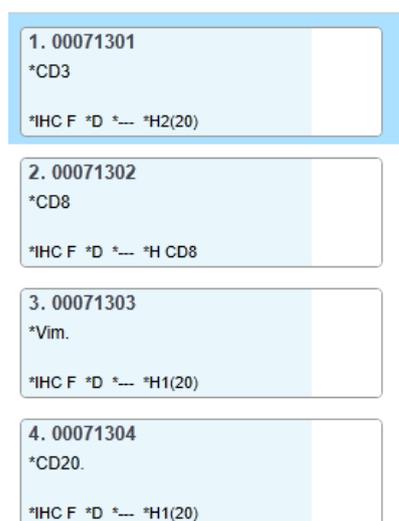

If you need to change details for a slide, double-click the slide to open the **Slide properties** dialog, change the details as required, then click **OK**.

For more information on working with slides, see [6.5 Working with Slides](#).



You can use **panels** to quickly add a number of slides that you commonly use. For an explanation of panels and how to create and use them, see [8.4 Reagent Panels Screen](#).

### 4.1.3.3 Controls

Always use controls on the BOND system. We strongly recommend placing appropriate control tissue on the same slides as patient tissue. In addition to this, you can create a separate case specifically for control slides. See [6.2 Working with Controls](#) for further discussion.

### 4.1.3.4 Labeling Slides

You are now ready to print slide labels and attach them to the slides:

- 1 Click **Print labels** from the **Slide setup** screen.
- 2 In **Slide labels to print**, select the appropriate option, then click **Print**.  
The labels are printed.
- 3 Ensure the frosted area of the slide (where the label will be applied) is dry, then apply the label with the slide ID or barcode aligned parallel with the end of the slide. The label should be right-side-up when the slide is held with the label at the top.

**Figure 4-4:** Correctly applied label




For more information, see [6.6 Slide Labeling](#).

### 4.1.3.5 Loading Slides

Load slides as follows:

- 1 Hold the slide by the label end with the sample uppermost.
- 2 Orient the slide over an empty position on the slide tray, with the label end of the slide over the indent in the side of the tray (see [Figure 4-5](#)). Place the slide down so it sits in the recessed position in the tray.

**Figure 4-5:** Positioning a slide in a slide tray

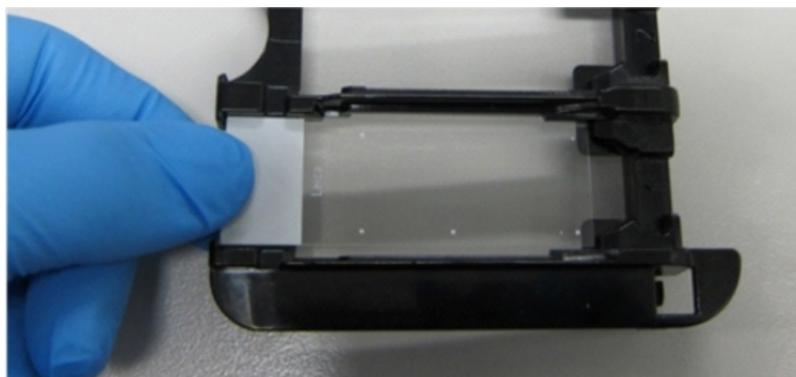

- 3 Hold a Covertile by the tail and lay it on the slide, fitting the key on the neck of the Covertile into the recess in the slide tray (circled in [Figure 4-6](#)). With new-design Covertiles the word "Leica" imprinted on the Covertile should read correctly, showing that the Covertile is the correct way up.

**Figure 4-6:** Positioning a Covertile on a slide



- 4 When all slides and Covertiles are loaded into the tray, lift the tray and rest the end on the entrance to an empty slide staining assembly. Slide the tray as far as it will go into the module. The tray should slide in easily and audibly click when it is in place.

## 4.1.4 Loading the Reagents

Now the detection system (BOND Polymer Refine) and marker containers (for \*CD5, \*CD3, \*CD10 and \*Bcl-6) must be placed onto the processing module.




**WARNING:** Reagent containers can tip during transit, leaving reagent residue around the cap. Always wear approved eye protection, gloves and protective clothing when opening reagent containers.

To load reagents into the BOND-III or BOND-MAX Processing Module, do the following:

- 1 Place marker containers into reagent trays by aligning the grooves on the rear of the containers with the indents in the tray compartments. Press down until the containers click into place.

Marker containers can be placed in the spare compartments in detection system trays if you wish.

**Figure 4-7:** Reagent container in reagent tray

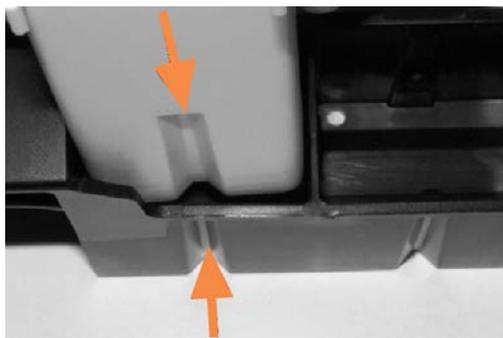


The arrows indicate the grooves in the reagent container and in the reagent tray.

- 2 Open all marker and detection system containers. Click open the lids and swing back until they clip into the tabs at the backs of the containers.
- 3 Ensure the top barcode labels are fully adhered to the containers – press down any labels that are lifting.
- 4 Wipe any moisture/condensation from the top barcode label.
- 5 Place the reagent trays on the reagent platform of the processing module. Use the guides on the platform to guide the trays correctly into the platform.

When the tray reaches the end of the platform it should engage the interlock. The tray LED turns green to indicate the tray is in position.

**Figure 4-8:** Inserting the reagent tray

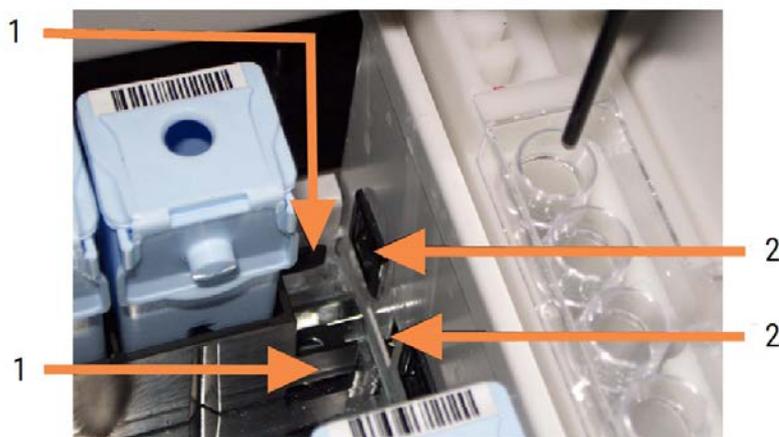


#### Legend

- 1 The tray's locking mechanism
- 2 Processing module's locking port

- 6 In the software, click the processing module tab to display the **System status** screen.

The reagent column is displayed in a lighter color with a dark border to indicate that the tray is about to be imaged. The BOND system images the IDs on the reagents as soon as the main robot is available, then updates the icons for the reagents.

**Figure 4-9:** Reagent tray status as shown in the System status screen

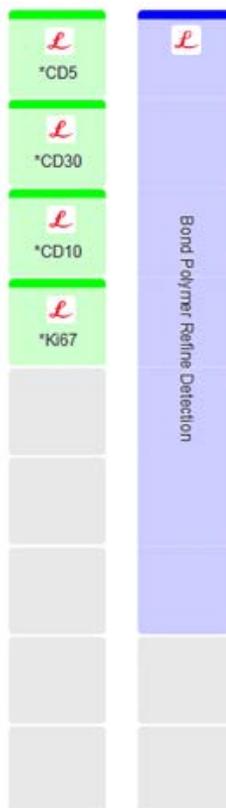

If there are any problems with reagents, the software displays an attention icon on that screen. Right-click the icon to get more information (see [5.1.3.4 Fixing Reagent Problems](#)).



Reagent trays can be removed at any time while the tray LED is green. When a reagent in a tray will be required within 2 minutes the LED turns red, indicating that the tray is locked (see [2.2.6.5 Reagent Platform](#)).

## 4.1.5 Running the Protocol

With slides and reagents configured and loaded in the processing module, you are ready to start processing.

- 1 Ensure that the processing module lid is closed.
- 2 Press the Load/Unload button on the front cover beneath the loaded slide tray.

BOND-III or BOND-MAX locks the tray, and the slide tray LED should glow orange.



Listen as the slide tray locks – if there are any loud cracking or clicking sounds it is likely that Covertiles are out of position. In this case unlock the tray, remove, and check the slides and Covertiles.

- 3 As soon as the main robot is available, the BOND system images the slides.

If any of the required reagents are not available, the software displays an attention icon below the slide list. Right-click on the icon for more information.

- 4 Provided there are no unrecognized or incompatible slides, the slides are now ready for a staining run. The progress bar will be in the starting phase (refer to [5.1.6.2 Run Progress](#)) and the run status will be **Slides ready** (refer to [5.1.6.1 Run Status](#)).

Click  to begin running the protocol (or you can set the processing module to start later; see [5.1.8 Delayed Start](#)).

The system will schedule the run then the progress bar will switch to the processing phase and the run status will be **Proc (OK)**.



You should start only one run at a time, and then wait until that run has started/been scheduled before starting the next run. Wait for a short while after starting each run to confirm it has started successfully. If not, the run status is set to **Rejected/Slides ready**. See [5.1.6.1 Run Status](#).

While a run is being processed, the Load/Unload button for its slide staining assembly will not release the slide tray.

Click  below the tray on the **System status** screen to abandon the run (see [5.1.7 Starting or Stopping a Run](#)).

## 4.1.6 Finishing

When the processing run is finished, the processing module tab icon flashes (see [5.1.1 Processing Module Tabs](#)). If there were unexpected events during the run, the display text is red and the notification symbol will appear below the tray and on affected slides. If this happens, check the **System status** screen for attention icons and right-click on them to display information about the attention state. You should also inspect the Run Events Report (refer to [9.4 Run Events Report](#)) to see any other information about problems during the run.

When the run has finished:

- 1 Remove reagent trays.

Close reagent container lids firmly to prevent reagent evaporation, and immediately store the reagents as recommended on the label or reagent data sheet.

- 2 Generate the Run Event report (refer to [9.4 Run Events Report](#)).
- 3 Press the Load/Unload button and remove slide trays from the processing module.



Again listen for cracking or clicking sounds as the tray unloads. If you hear this inspect in and around the slide staining assembly for broken slides in the unexpected event that a misaligned slide has been crushed; if so contact customer support.

- 4 Place the slide tray on a flat, stable surface. Remove the Covertiles by holding down the label of the slide, then carefully putting pressure downwards on the neck of the Covertile to lift the end of the Covertile off the slide.



Do not slide the Covertile across the surface of the slide, as you may damage the tissue, making slide reading difficult.

- 5 Lift the Covertiles from the slides and clean them as described in [12.3 Covertiles](#).
- 6 Remove the slides and proceed with the next step in processing them according to your laboratory processes.

You can choose to rerun any slides (see [9.3.1 Rerunning Slides](#)).

This completes your first run on the BOND system.

## 4.2 BOND-PRIME



For full details, refer to the separate BOND-PRIME user manual.

### 4.2.1 Preliminary Checks and Startup

- 1 Turn on the controller (and terminal for BOND-ADVANCE) and open the BOND clinical client.
- 2 Check that the slide labeler has labels and print ribbon, and is turned on.
- 3 Initialize the BOND-PRIME Processing Module and log in.
- 4 Complete any Action Queue tasks that show action is required "Soon" or "Now".

### 4.2.2 Protocol and Reagent Checks

Use \*IHC Protocol F and BOND-PRIME Polymer DAB Detection System (DS9824). The process also uses the ancillary BOND-PRIME Hematoxylin (AR0096). Otherwise follow the steps described in [4.1.2 Protocol and Reagent Checks](#).

### 4.2.3 Setting Up Slides

Follow the steps described in [4.1.3 Setting Up Slides](#) (up to and including labeling slides).

### 4.2.4 On the BOND-PRIME Processing Module

- 1 Load the reagent tray and Detection System tray.
- 2 Load the slides into the Preload drawer.
- 3 The slides are then scanned, moved from the drawer and automatically processed.
- 4 On completion of the staining process, the slides are transferred to the Unload drawer, where they will be hydrated until you remove them.

# 5

## BOND-III and BOND-MAX Status Screens (on BOND Controller)



The Status screens in the BOND Controller are not used for BOND-PRIME. For information about BOND-PRIME status, refer to the separate BOND-PRIME user manual.

In the clinical client, each processing module has two status screens and a maintenance screen, selected from tabs at the top left of the window when a processing module has been selected from the left-hand tabs. The **System status** screen offers system control from a view that shows slide and reagent placement in the module. The **Protocol status** screen gives information on protocol progress for individual slides. The **Maintenance** screen has commands for a range of maintenance operations.

- [5.1 System Status Screen](#)
- [5.2 Protocol Status Screen](#)
- [5.3 Maintenance Screen](#)


## 5.1 System Status Screen



This screen is applicable only to BOND-III and BOND-MAX Processing Modules. For status information about the BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual.

This screen allows you to control processing, and it displays the details of slide trays and reagents loaded, as well as displaying status of reagents, waste, and interlocks in the system.

Figure 5-1: The System status screen for a BOND-III Processing Module

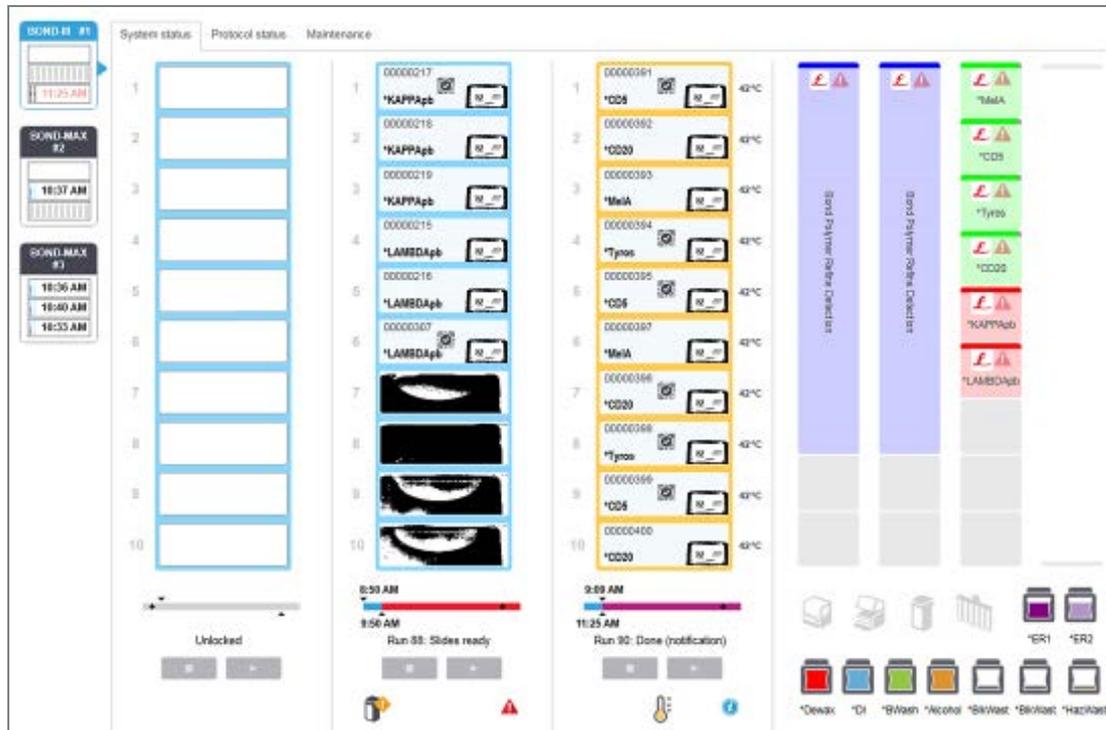

The processing module tabs at the left of the status screens give a visual summary of the status of the associated processing module. Click on the tab to see the detailed status of the processing module.

For more information see:

- [5.1.1 Processing Module Tabs](#)
- [5.1.2 Hardware Status](#)
- [5.1.3 Reagent Status](#)
- [5.1.4 Slide Information](#)
- [5.1.5 On-Board Slide Identification](#)
- [5.1.6 Run Progress Indicator](#)
- [5.1.7 Starting or Stopping a Run](#)
- [5.1.8 Delayed Start](#)

## 5.1.1 Processing Module Tabs

The software displays a tab at the left of the screen for each processing module in the system (single seat) or in the pod that the client is connected to (BOND-ADVANCE). If there is not enough vertical space to display all the processing modules, scroll up and down using the arrow buttons that appear (up arrow shown at right).



Figure 5-2: Processing Module Tab (BOND-III)



Each tab shows the processing module name, and rectangular icons display the state of the module's slide staining assemblies (see below). To display the **System status** screen for a processing module, click on the tab. A blue outline and right-facing arrow appear around a processing module tab when it is selected (see above).

### 5.1.1.1 Slide Staining Assembly States

Below are examples of slide assembly states you may see on a processing module tab.

Before a Run:



Blank rectangle: no tray present or not locked.




Animated ID numbers and solid bars: tray is being imaged.



Icon of tray with slides: slide labels have been imaged and the tray is ready to run.

During a Run:

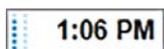


Time display in black with moving dots at left: tray is running with no unexpected events reported. The time displayed is the estimated completion time for the tray.



Time display in red with moving dots at left: tray is running with unexpected events reported. The time displayed is the estimated completion time for the tray.

After a Run:

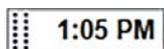

Flashing time display in black, with static dots at left: the run finished at the time reported without any unexpected events.



Flashing time display in red, with static dots at left: the run finished at the time reported – unexpected events occurred.



The run was abandoned.

## 5.1.1.2 Processing Module States

The software continuously monitors the system status and may display icons on the processing module tab as follows:

Icon	Meaning	Icon	Meaning
	The processing module is not connected.		<b>Warning:</b> The BOND software has detected an unexpected state.
	(Flashing) The processing module is initializing.		<b>Alarm (flashing):</b> To continue operation the processing module needs user intervention.
	The processing module is currently being serviced.		The processing module is undergoing a maintenance operation.

## 5.1.2 Hardware Status

The icons at the lower right of the screen display a warning  or alarm  if there is a problem with some part of the BOND system, or information indicator  if there is a general notification for the system. Right-click on the icon to get more information.



General fault with the system, or a maintenance task reminder.



Appears when either the lid is opened or (BOND-MAX only) the bulk container door is opened during a staining run. These must be closed to operate the processing module.

If a staining run is not in progress, the information indicator  appears instead.



Missing or insufficient reagent.



The processing module has started initialization and has not yet attempted to scan the mixing station.



The mixing station was not detected during initialization. The station may not be present, or it may be present but the barcode was not recognized.

If necessary place a clean mixing station in the processing module. Right-click on the icon and follow the prompts to inform the system that the mixing station is in place.



The mixing station state at initialization is dirty (e.g. the station was dirty when the processing module was last closed down).

Ensure there is a clean mixing station in place then right-click on the icon and confirm.



Mixing station cleaning has failed.

You may still be able to proceed using remaining clean vials. Otherwise, you will need to restart the processing module to clear the notification.

If the notification persists it may indicate a fluidics problem – contact customer support.



There are no clean mixing vials available.

Wait for the processing module to clean some vials and then proceed as normal.

If vials are not cleaned you may need to restart the processing module. If the notification persists it may indicate a fluidics problem – contact customer support.



You can manually clean the mixing station if necessary. See [12.7 Wash Block and Mixing Station](#).

### 5.1.2.1 Heater Errors


Each of the BOND-III and BOND-MAX slide heaters is independently monitored and will be marked as faulty if a temperature error occurs (see [Figure 5-3](#)). Contact customer support if a faulty heater is indicated.

**Figure 5-3:** Individual heater error



You should not attempt to run a slide that requires heating at a position marked as faulty. If a heater malfunctions during a run it may compromise the slide at that position. If the heater malfunction is a safety risk, it may shut down all slide heating on the processing module (see [Figure 5-4](#)).

**Figure 5-4:** Gray heater symbols at each position indicate a complete heating shutdown

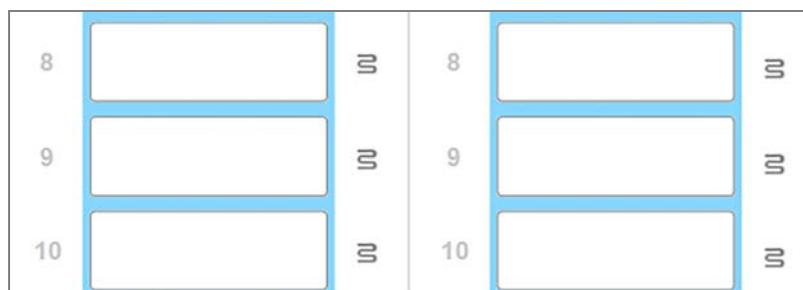

Once slide heating is shut down, you must turn off then restart the processing module to clear the heater lock. You can continue to use slide positions with faulty heaters so long as the slides processed there do not require heating.

## 5.1.2.2 Temperature Indication

When a slide staining assembly is above ambient temperature, a temperature indicator appears near the bottom of the **System status** screen.


The temperature indicator at the bottom of the screen shows that a slide staining assembly is either warm or hot.

**Figure 5-5:** Temperature indicator – warm (left) and hot (right)



The borders of the slide trays on the **System status** screen also change color to indicate temperature: blue when the tray is at ambient temperature, orange when it is warm and red when it is hot.

**Figure 5-6:** Temperature-indication borders of the slide trays: warm (left) and hot (right)

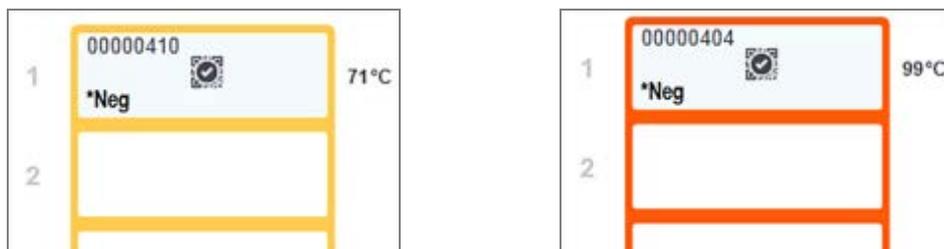

**WARNING:** Avoid contact with slide staining assemblies and their surrounds. These may be very hot and cause severe burns. Allow twenty minutes after the cessation of operation for the slide staining assemblies and their surrounds to cool.

## 5.1.3 Reagent Status

The right side of the **System status** screen displays the status of reagents detected. The sections below describe the icons used and how to fix some reagent problems indicated on the screen.

- [5.1.3.1 Reagent Systems](#)
- [5.1.3.2 Reagent Containers](#)
- [5.1.3.3 Reagent Levels](#)
- [5.1.3.4 Fixing Reagent Problems](#)
- [5.1.3.5 Fixing Undetected Reagents](#)
- [5.1.3.6 Bulk Container Status](#)

### 5.1.3.1 Reagent Systems

 <div style="background-color: #d9e1f2; padding: 5px; border: 1px solid #000; text-align: center;"> <b>Bond Polymer Refine Detection</b> </div>	BOND detection system
 <div style="background-color: #e6e6fa; padding: 5px; border: 1px solid #000; text-align: center;"> <b>Bond Aspiring Probe Cleaning System</b> </div>	BOND cleaning system

### 5.1.3.2 Reagent Containers



Reagent container icons have an asterisk (\*) before BOND-supplied reagent names.




**A BOND ready-to-use primary antibody.**

Details for these reagents are automatically entered by the BOND software when you register them. The abbreviated name of the reagent is shown.



**A BOND ready-to-use ISH probe.**

Details for these reagents are automatically entered by the BOND software when you register them. The abbreviated name of the reagent is shown.

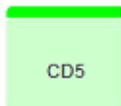

**User-supplied primary antibody in a BOND open or titration container.**

Details for these reagents must be entered manually in the **Reagent Setup** screen before registering, with lot number and expiration date required when registering. The abbreviated name of the reagent is shown.




**User-supplied ISH probe in a BOND open or titration container.**

Details for these reagents must be entered manually in the **Reagent Setup** screen before registering, with lot number and expiration date required when registering. The abbreviated name of the reagent is shown.



**BOND ready-to-use ancillaries.**

Details for these reagents are automatically entered by the BOND software when you register them. The abbreviated name of the reagent is shown.

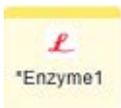

**BOND enzyme in a BOND open or titration container.**

BOND enzyme must be prepared by users and put into open containers, but reagent setup details are predefined in the BOND software. Only lot number and expiration date are required when registering.



**User-supplied ancillary reagent in a BOND open or titration container.**

Details for these reagents must be entered manually in the **Reagent Setup** screen before registering, with lot number and expiration date required when registering. The abbreviated name of the reagent is shown.



### The software did not detect a reagent in this position.

If there is a reagent present, see [5.1.3.5 Fixing Undetected Reagents](#) for details on how to fix the problem. If the imager frequently fails to properly image IDs, clean the ID imager window (see [12.9 ID Imager](#)).



### The BOND software detected a problem with this reagent. Right-click the Information symbol for further information.

It may be that the BOND software did not recognize the reagent. In that case use the handheld scanner to scan the reagent and add it to the inventory. If the ID is damaged, enter the ID manually. Refer to [8.3.3 Registering Reagents and Reagent Systems](#) for more information.



### The BOND software detected a problem with this reagent or reagent system.

Right-click the notification symbol for further information.

## 5.1.3.3 Reagent Levels

The icons for reagent systems indicate only three volume levels on the **System status** screen:



Ready-to-use reagents and open container icons indicate reagent levels more precisely.

**Figure 5-7:** Examples of ready-to-use reagent levels shown on **System status** screen



To view more detailed reagent or reagent system inventory information, right-click on the icon and select **Inventory ...** from the pop-up menu. The **Reagent inventory details** screen appears. See [8.3.2 Reagent or Reagent System Details](#).

### 5.1.3.4 Fixing Reagent Problems

If the BOND software detects a problem with a reagent required for processing, before a run starts, then the software will display an attention icon on a reagent container graphic below the slide tray on the **System status** screen. If the problem occurs during a run, the attention icon appears over the reagent hardware status icon, as described earlier in this section. To see more information about the problem, right-click on the attention icon.

If you need to replace or add reagent, remove the reagent tray containing the problem reagent, replace or add the required reagent to the tray, then reload the tray.



Note that if processing is already in progress, and reagent in a specific tray will be required within 2 minutes, you will not be able to remove that tray without abandoning the run. This is indicated by the indicator for that reagent tray glowing red.

### 5.1.3.5 Fixing Undetected Reagents


If a reagent is not detected or a kit is only partially detected, do the following:

- 1 Check that:
  - The reagent container is correctly positioned in the reagent tray
  - The reagent container cap is opened and clipped to the back of the container
  - There is an undamaged reagent barcode ID across the top front of the container.
- 2 Check that the reagent is registered in the inventory.
  - If the reagent is not registered, then register it as described in [8.3.3 Registering Reagents and Reagent Systems](#).
- 3 At this point you can either:
  - a remove the reagent tray (then make a note of the Unique Pack Identifier (UPI) of the reagent concerned) and reinsert it to make the system automatically identify the reagent tray again, or
  - b if reinserting the reagent tray is not an effective solution, you can manually identify the reagent - right-click on the container icon on the **System status** screen and click **Select ...** from the submenu. Enter the UPI of the reagent you noted above, and click **OK**.

A symbol  appears on the image to identify a reagent that has been manually entered or partially auto-identified. The symbol (and the manually identified reagent or auto-identified kit) is removed if the reagent tray is removed.

If you manually enter a reagent UPI number, the following message is displayed:

**Figure 5-8:** Notification for manually entered reagent

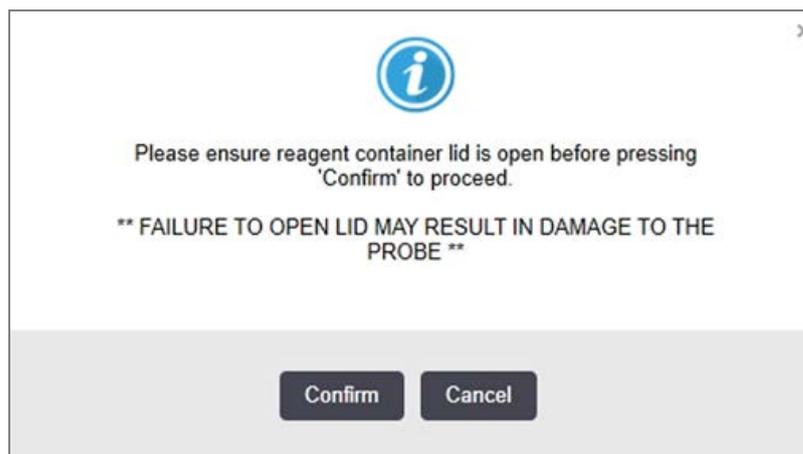


Once the manually entered UPI number is identified by the system or the processing module has auto-identified the reagent, the following icon is displayed.

**Figure 5-9:** Manually entered or auto-identified reagent



If a kit has been only partially identified and the processing module has auto-identified some containers, the following message and icon are displayed.

**Figure 5-10:** Notification of auto-identified kit

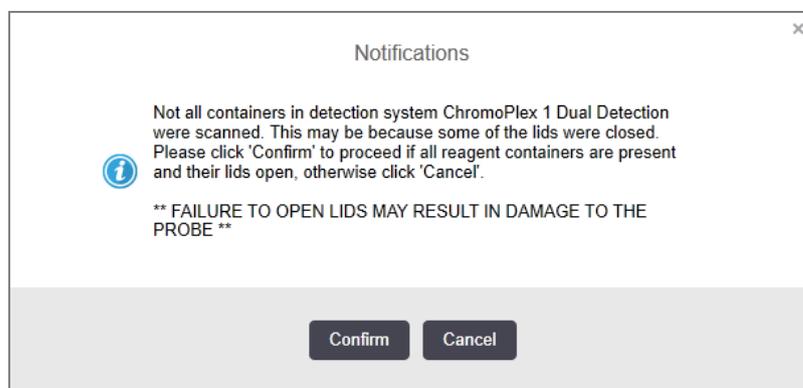

**Figure 5-11:** Auto-identified kit



### 5.1.3.6 Bulk Container Status

The bottom right of the **System status** screen displays icons for bulk waste and reagent containers. Each container is labeled and the colors match the installed containers. The positions of the bulk container icons on the System status screen reflect the physical positions of the corresponding bulk container cavities on the processing module.

Refer to [2.2.7 Bulk Containers Cavity](#) for the actual container configuration for each processing module type.

**Figure 5-12:** Bulk containers (BOND-III configuration)



**Figure 5-13:** Bulk containers (BOND-MAX configuration).



The right-most icon represents the external waste container

Below are descriptions of each of the above bulk container's contents.

Bulk container label	Bulk container contents
*Dewax	BOND Dewax Solution
*DI	Deionized Water
*BWash	BOND Wash Solution
*Alcohol	Alcohol (reagent grade)
*BlkWast	Bulk Waste
*HazWast	Hazardous Waste
*ER1	BOND Epitope Retrieval Solution 1
*ER2	BOND Epitope Retrieval Solution 2

## BOND-III

The software displays the BOND-III bulk reagent and waste containers fluid levels. If the reagent supply is low, or the waste levels are high, there may be an audible alarm, pulsing bottle light (white or red) and a warning icon displayed on the status screen, depending on the severity of the problem. Right-click the icon to view the attention message and take any actions needed to fix the problem – see [12.2.2 Replenishing or Emptying Bulk Containers](#).



If the warning symbol appears, processing is paused until the problem is fixed.



The bulk container status on the **System status** screen is synchronized with the lighting system, as described in [Bulk Container Lighting System \(BOND-III\) \(on page 52\)](#).

The display on the BOND-III software shows an interpreted level in the bottle based on an estimate of how many more slides can be processed with the bulk reagents. The following images are used to indicate the bulk container states:

### Bulk reagent container volume icons

Figure 5-14: Bulk reagent container volume icons

Level	State	Supply Bottles	Dewax	Alcohol	DI	Buffer	HEIR1	HEIR2	Label	Bottle
		GUI	Volume range						Lights	
-	-	Bottle removed	-	-					WHITE Flashing	Off
0	Pause running batch		0 - 150	0 - 150	0 - 150	0 - 150	0 - 100	0 - 100	RED Flashing	RED Flashing
1	Can't start batch		150 - 500	150 - 500	150 - 1000	150 - 1000	100 - 300	100 - 300	WHITE Flashing	WHITE Flashing
2	OK		500 - 750	500 - 750	1000 - 1500	1000 - 1500	300 - 500	300 - 500	WHITE	WHITE
3	OK		750 - 2500	750 - 2500	1500 - 3500	1500 - 3500	500 - 1500	500 - 1500	WHITE	WHITE

Level	State	Supply Bottles	Dewax	Alcohol	DI	Buffer	HEIR1	HEIR2	Label	Bottle
		GUI	Volume range						Lights	
4	OK		2500 - 5000	2500 - 5000	3500 - 5000	3500 - 5000	1500 - 2000	1500 - 2000	WHITE	WHITE



Appears if the following occurs:

- reagent is running low and needs to be filled immediately
- container is missing
- insufficient volume to start a run

See [12.2.2 Replenishing or Emptying Bulk Containers](#).



or



Appears if a run has been paused because one of the following occurs:

- reagent is low and needs to be filled urgently (warning)
- container is missing and needed for processing (alarm)

See [12.2.2 Replenishing or Emptying Bulk Containers](#).

## Waste container volume icons

Figure 5-15: Bulk waste container volume icons

Level	State	Waste Bottles	Std Waste	Haz Waste	Label	Bottle
		GUI	Volume range		Lights	
-	-	Bottle removed	-	-	WHITE Flashing	Off
0	OK		0 - 1100	0 - 1100	WHITE	Off
1	OK		1100 - 3000	1100 - 3000	WHITE	WHITE (1 strip only)
2	OK		3000 - 3900	3000 - 3900	WHITE	WHITE

Level	State	Waste Bottles	Std Waste	Haz Waste	Label	Bottle
		GUI	Volume range		Lights	
3	Can't start batch		3900 - 4800	3900 - 4800	WHITE Flashing	WHITE Flashing
4	Pause running batch		4800 - 5000	4800 - 5000	RED Flashing	RED Flashing



Appears if the following occurs:

- waste is nearly full and needs to be emptied immediately

See [12.2.2 Replenishing or Emptying Bulk Containers](#).



or



Appears if a run has been paused because one of the following occurs:

- waste is full and needs to be emptied urgently (warning)
- container is missing and needed for processing (alarm)

See [12.2.2 Replenishing or Emptying Bulk Containers](#).

## BOND-MAX

The software displays an attention icon (as above) over a bulk container when it detects a problem (for example, the volume in a reagent container is low, or the volume in a waste container is high). Right-click the notification icon for details.

### 5.1.4 Slide Information

The sections below describe the icons used to represent slide information on the **System status** screen. Options in the slide pop-up menu are also described.

- [5.1.4.1 Slide Icons](#)
- [5.1.4.2 Slide Tray Pop-up Menu](#)
- [5.1.4.3 Slide Event Notifications](#)
- [5.1.4.4 Fixing Incompatible Slide Setup](#)

## 5.1.4.1 Slide Icons

The **System status** screen displays a graphical representation of each of the three slide trays with an icon for each slide. The slide icons indicate the state of each slide.

Your system uses 2D barcodes. The slide icons can be optionally configured to include captured images of the slide labels. Contact customer support if you wish to change the existing settings.

Examples of slide icons are shown in the following tables.

### Slide Icons for Barcode Labels



No slide at this position, or slide imaged but system unable to identify



Single slide imaged and automatically identified

(refer to [5.1.5.1 Automatic Slide Identification](#))




Multiplex slide imaged and automatically identified

(refer to [5.1.5.1 Automatic Slide Identification](#))



Slide imaged and manually identified – note the symbol (circled in red) on the slide

(refer to [5.1.5.2 On-Board Manual Slide Identification](#))

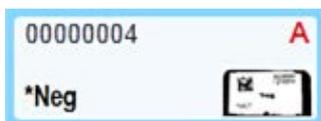

Slide is incompatible with one or more other slides on the tray

(refer to [5.1.4.4 Fixing Incompatible Slide Setup](#))



Slide processing with event notification

(refer to [5.1.4.3 Slide Event Notifications](#))

Double-click slides that have been recognized by the BOND system to open the **Slide properties** dialog for them. If the run has not been initiated you can edit slide details in the dialog, but you will then need to print a new label for the slide, unload the tray and apply the new label, and then reload.


## 5.1.4.2 Slide Tray Pop-up Menu

Right-click on slides in the slide tray graphics on the **System status** screen for a number of options for the slide or tray.

Command	Description
Select manually...	Enabled if the slide was not automatically identified.  Select to open the <b>Slide identification</b> dialog, which allows you to identify the slide with one configured in the system (see <a href="#">5.1.5.2 On-Board Manual Slide Identification</a> ).  This option can also be selected if you double-click on an unidentified slide.
Attention message...	View an attention message if the slide is showing an event notification (see <a href="#">5.1.4.3 Slide Event Notifications</a> ).
Run events	Generate a Run Events Report for the run (see <a href="#">9.4 Run Events Report</a> ).
Delayed start	Set a delayed start for the run (see <a href="#">5.1.8 Delayed Start</a> ).

## 5.1.4.3 Slide Event Notifications

Figure 5-16: Slide with event notification

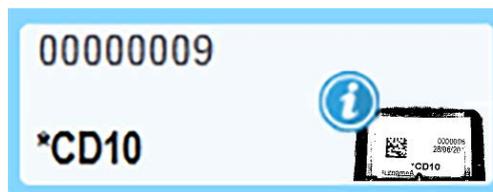

When an unexpected event occurs during processing an alert symbol appears on the slide icon. This notification does not necessarily indicate that staining was in any way unsatisfactory. When the notification symbol appears the system operator or laboratory supervisor must take the following extra steps to confirm that the slide is suitable for diagnostic use.

- 1 Right-click on the slide and select **Run events** to generate the Run Events Report (refer to [9.4 Run Events Report](#)).  
Any events that caused a notification are displayed in **Bold** text. The system operator or laboratory supervisor should carefully consider the notification events listed as these provide important details about the nature of the slide notification events.
- 2 Carefully inspect the stained tissue.
- 3 Carefully inspect any control slides.

If the laboratory is unable to confirm the staining quality then either the pathologist should be informed of the notification or the test should be rerun.

Multiple notifications may be present within a single Run Events Report. If the run completes with status **Done (notification)**, ensure that the entire report is inspected. If the status is **Done (OK)**, there is no need to inspect the report.

## 5.1.4.4 Fixing Incompatible Slide Setup

If the BOND system detects an incompatible slide, it will assign letters in bold red lettering at the upper right of all slides in the tray. Slides with the same letter are compatible.

Figure 5-17: Incompatible slides



Remove the slide tray and remove the incompatible slides, or change slide properties (if there were errors in these) to make slides compatible. If you change slide properties you must reprint the labels for the changed slides and attach these before reloading the tray.

See [6.9 Slide Compatibility](#) for further details about slide compatibility.

## 5.1.5 On-Board Slide Identification

In the most common workflow, slides with labels from the BOND system or an LIS are loaded on the processing module and then automatically identified. Identification is by reading 2D barcodes on the labels. If a label is smudged or for some other reason cannot be read, you can manually identify it to the BOND software. Some workflows use manual identification as a matter of course (see [6.8 Impromptu Slide and Case Creation](#)).

### 5.1.5.1 Automatic Slide Identification

The BOND system is able to automatically identify standard BOND 2D barcode slide labels created using the BOND labeler (as described in [6.6 Slide Labeling](#)), and LIS-printed slides that use a recognizable barcode format (see [11.3 LIS Connection and Initialization](#)). When a slide tray is locked, the system attempts to identify each slide label and match it against a slide that has had a label printed. Where it is able to match the label to a printed slide, the slide is automatically identified and no further action is required.

The system captures an image of each label during the slide identification process. These images appear in the following reports to provide a permanent record of the slide matching:

- [9.4 Run Events Report](#)
- [9.5 Run Details Report](#)
- [9.6 Case Report](#)


If the system was unable to identify the label then the slide must be manually identified using the manual slide identification procedure (see the next section).

## 5.1.5.2 On-Board Manual Slide Identification

On systems that are set up to take an image of each slide label, if automatic identification fails, slides can be manually identified while still loaded on the processing module. Use the following procedure to manually identify a loaded slide.


- 1 When the system is unable to automatically identify a slide, the System Status dialog displays an image of the label.

Figure 5-18: Slide not automatically identified

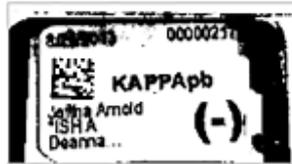

- 2 To launch the Slide Identification dialog do one of the following:
  - a Double-click the slide image; or
  - b Right-click on the image and select **Select manually** from the pop-up menu.
- 3 The **Slide identification** dialog is displayed.

Figure 5-19: Slide identification dialog

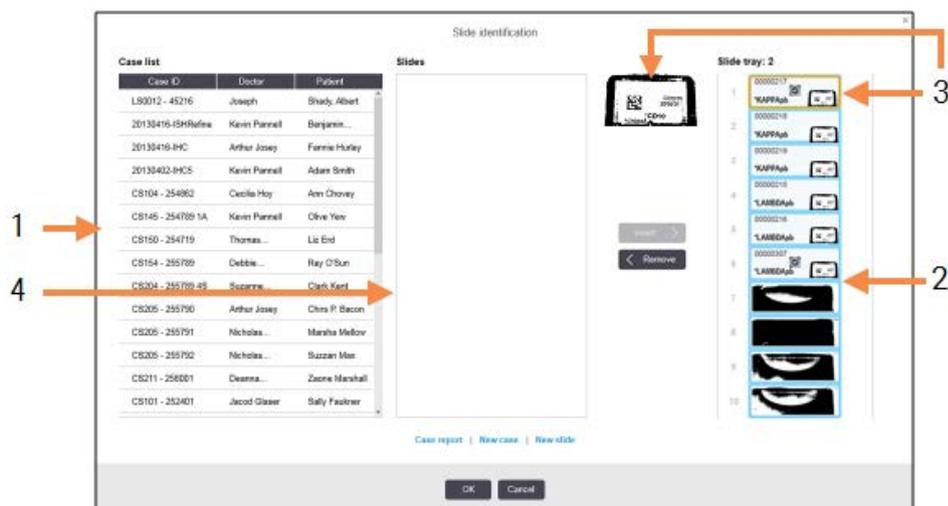

The left-hand pane (item 1) lists all cases with unprocessed slides. Under default settings, only cases with slides for which labels have been printed appear (you can change this to include cases with slides for which labels have not been printed – see [6.8.2.2 External Slide Labels](#)).

Slide labels in the current slide staining assembly are shown in the right-hand pane (item 2).

The slide selected when the dialog was opened is highlighted (item 3) in the right-hand pane and displayed enlarged. Hold the cursor over the slide in the right-hand pane to see an even bigger enlargement of the image.

The center pane (item 4) shows slides configured for the case selected in the left-hand pane, where the slides have not yet been matched to any slides imaged on the processing module. Again, under default settings, only slides that have had labels printed appear, but this can be changed to show all slides configured for the case (see [6.8.2.2 External Slide Labels](#)).

It is possible to create new cases and slides at this point, with **New case** and **New slide**, if necessary (see [6.8 Impromptu Slide and Case Creation](#) for instructions). The instructions below assume that all required slides are already configured in BOND.

- 4 Use the information visible in the selected label image, on the right, to determine the case that the slide belongs to. Select that case from the case pane (item 1).

The slide list (item 4) is populated with the unmatched slides configured for that case.

- 5 Now match the unidentified slide to a slide in the slide list (item 4).

Select the slide and click **Insert**.

The slide is removed from the slide list and the image in the right-hand pane updates to show that the slide has been identified. A symbol  identifies the slide as having been manually selected.

The next unidentified slide label, if there are any, is now highlighted for identification.

- 6 Match all the unidentified slides by repeating the steps above.
- 7 When all the slides in the tray have been identified click **OK** to close the dialog. If you click **Cancel** any slide identifications you may have made will be lost.
- 8 The **System status** screen now shows all slides in the tray with their slide details. The slides that were manually identified include an image of the label and the symbol  to show that the slide was manually selected.

**Figure 5-20:** Manually identified slide prior to processing



- 9 Manually selected slides process normally.

An image of the slide appears in the following reports to provide a permanent record of the slide matching:

- [9.4 Run Events Report](#)
- [9.5 Run Details Report](#)
- [9.6 Case Report](#)

## Systems NOT set up to take an image of each slide label

These slides can still be manually identified, but this may involve removing the slide tray.

Take note of the slide ID and slide position number (embossed on the slide tray below the neck of the Covertile) for the slide that was not automatically identified.

Reload the slide tray and double-click the corresponding slide position (counting down from the top position of the slide staining assembly in the **System status** screen).

## 5.1.6 Run Progress Indicator

Progress indicators sit below each of the slide tray graphics. They provide a quick visual indication of run status and progress.

- [5.1.6.1 Run Status](#)
- [5.1.6.2 Run Progress](#)
- [5.1.7.1 Stopping a Run](#)
- [5.1.8.1 Setting Delayed Start Time](#)

### 5.1.6.1 Run Status

The current run number and status is displayed at the bottom of each progress indicator. The possible run states are:

Run Status	Description
Unlocked	The slide tray is unlocked.
Locked	The slide tray is locked but it is not yet possible to start. This state usually occurs prior to the completion of slide imaging.
Slides ready	All slides in the slide staining assembly have been imaged.
Starting	The start button has been pressed and the system is performing pre-start checks and scheduling.
Rejected/Slides ready	The BOND system attempted to start the run but was unsuccessful. The most likely causes of rejection are missing reagents, low bulk reagent levels, or a full waste container. Generate a Run Events Report, resolve any problems that it indicates, then restart the run.
Scheduled	The run is scheduled but has not started processing. The run progress indicator indicates the scheduled start time.
Proc (OK)	The run is processing, no unexpected events have occurred.
Proc (notification)	The run is processing, unexpected events have occurred. Check the Run Events Report for details.
Abandoning	The run is being abandoned. This occurs when the operator presses the stop button.
Done (OK)	Processing is complete, no unexpected events occurred.

Run Status	Description
Done (notification)	Processing is complete, unexpected events occurred. Check the Run Events Report for details.


## 5.1.6.2 Run Progress

A progress bar below each slide tray graphic provides a visual display of run progress. The progress bar displays critical times, shows the current progress with respect to the critical times, and uses the following colors to represent the four stages of run progress:

- Blue – slide tray is locked, processing has not started
- Red – processing has not started and the starting time limit has been exceeded
- Green – processing
- Purple – run has been completed and is now being hydrated.

You can pause the mouse pointer in the run progress section to display the run status, such as “Time since locked”, “Time to completion” and “Time since completion” as shown in [Figure 5-21](#).


Figure 5-21: Run status display

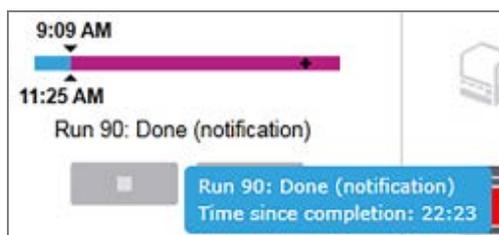

## Slides Ready – Starting

After slides have been imaged and the run is ready to start, and for a brief period after the start button has been pushed or a delayed start initiated, the bar displays the following items (refer to [Figure 5-22](#) for item numbers).

Figure 5-22: Run progress (starting)

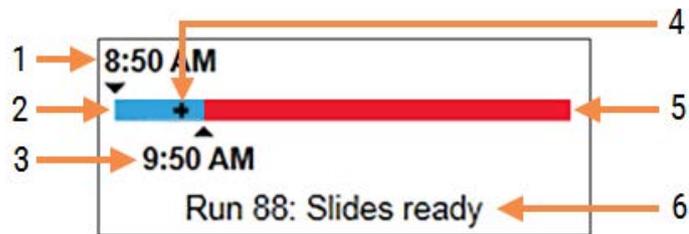

### Legend

- |   |  |   |  |
|---|--|---|--|
| 1 | Time the tray was locked   | 4 | The current progress                                     |
| 2 | The acceptable starting period (blue bar)<br>(see <a href="#">Acceptable Starting Period &amp; Alarm</a><br>(on page 127)) | 5 | The start time exceeded period (red bar)                 |
| 3 | The acceptable start time limit  | 6 | The run status (see <a href="#">5.1.6.1 Run Status</a> ) |

## Acceptable Starting Period & Alarm

Always start processing as soon as possible after slide trays are locked. The slides are not hydrated during the “starting period” (between locking a tray and start of processing) so if this period is too long, for dewaxed slides, tissue can be damaged. The BOND software helps you monitor this by tracking the times since trays were locked and showing the acceptable maximum starting period for the slide type loaded (waxed or dewaxed). The acceptable starting periods are visually displayed as the blue bar in the “Slides ready” progress bar (see above). For dewaxed slides, if processing has not started some time after the acceptable starting period, there is an alarm.

Starting periods and the dewaxed slide alarm period are shown below. All times are from when trays are locked:

Acceptable Starting Period or Alarm	Time (min) from locking tray
Dewaxed slides acceptable starting period	15
Dewaxed slides time to alarm	25
Waxed slides acceptable starting period	60

If processing has not started within the starting period you can remove trays to manually hydrate the slides. When you reinsert the tray the BOND software starts a new run, allocating a new run ID number and starting the period count again.

Acceptable start time limits apply only to immediate-start runs; they do not apply to delayed start runs.

## Scheduled

After a run has been initiated with the start button or delayed start it is scheduled in the system. In the period between scheduling and processing beginning – which may be long in the case of a delayed start – the progress bar displays the following items (refer to [Figure 5-23](#) for item numbers).

**Figure 5-23:** Run progress (starting, with delayed start)




### Legend

- |   |                                    |   |  |
|---|------------------------------------|---|--|
| 1 | Time the run is scheduled to start | 5 | Post processing hydration period (purple bar)            |
| 2 | Delay before the start (blue bar)  | 6 | The approximate run finish time                          |
| 3 | The current progress               | 7 | The run status (see <a href="#">5.1.6.1 Run Status</a> ) |
| 4 | Processing period (green bar)      |   |  |

## During Processing

During the processing phase the bar displays the following items (refer to [Figure 5-24](#) for item numbers).

**Figure 5-24:** Run progress (processing)

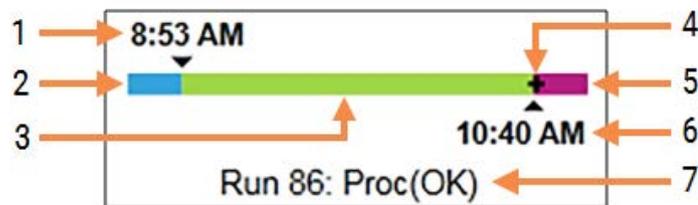

### Legend

- |   |   |   |  |
|---|---|---|--|
| 1 | Scheduled start time  | 5 | Post processing hydration period (purple bar)            |
| 2 | The starting period – blue: start OK, red: start limit exceeded | 6 | The approximate time the run will finish                 |
| 3 | Processing period (green bar)                                   | 7 | The run status (see <a href="#">5.1.6.1 Run Status</a> ) |
| 4 | The current progress  |   |  |

## 5.1.7 Starting or Stopping a Run

You begin a run by loading and locking a slide tray. The tray is imaged and the system checks the following to ensure it can run:

- All slides are compatible
- All reagents are available.

When the slides are imaged the run status is set to **Slides ready** (see [5.1.6.1 Run Status](#)) and the progress bar appears in the starting phase (refer to [5.1.6.2 Run Progress](#)). Once any slide incompatibilities have been resolved, all slides have been identified, and checks run to ensure that all required reagents are present, the run can be started.

- To start the run as soon as possible click . For delayed start right-click on the tray and select **Delayed start** from the pop-up menu; see further directions in [5.1.8 Delayed Start](#)
  - The run status is set to **Starting** as the pre-run checks and scheduling are completed. The progress bar remains in the starting phase.
  - Once the scheduling is complete, the state changes to **Scheduled**. The progress bar now appears in the processing phase. The scheduled start time is displayed and the starting condition (OK or time limit exceeded) is displayed at the left end of the bar.
  - When processing starts at the scheduled time, the state changes to **Proc (OK)**. If the start time limit was exceeded the warning or alarm clears once processing actually starts. The starting section of the progress bar remains red however.
  - Note that the **Starting** and **Scheduled** states may take some time and it is possible the starting time limit is exceeded. If this is likely to occur you can unlock the slide tray and manually hydrate the slides before restarting. If you unlock a tray prior to processing commencing, the run is not considered abandoned and can be restarted.



You should start only one run at a time, and then wait until that run has started/been scheduled before starting the next run. Wait for a short while after starting each run to confirm it has started successfully. If not, the run status is set to **Rejected/Slides ready**. See [5.1.6.1 Run Status](#). You should then generate the Run Events report to identify why the run did not start (see [9.4 Run Events Report](#)).

### 5.1.7.1 Stopping a Run

After pressing the start button (or activating delayed start) up until processing actually begins – while the run is in **Starting** or **Scheduled** states – processing can be stopped for a run without having to abandon it. To cancel a processing request at this time unlock the slide tray on the processing module (the start and abandon buttons are disabled during this period). Slide information remains in the system and the run can be restarted later if you want. A single line is written to the **Slide history** list for the rejected run.

To abandon a run once processing has started click . The processing module will cease operation on the run after completing the current step. The status of the slides on the **Slide history** screen changes to **Done (notification)**.



Consider carefully before abandoning a run – abandoned runs cannot be restarted, and any slides for which processing has not been completed may be compromised.

## 5.1.8 Delayed Start

Runs with waxed slides can be scheduled to start at a specified future time (up to one week from the current time) on the BOND-III and BOND-MAX systems. Runs started overnight, for example, can be timed so that they finish shortly before start of work on the following day. Slides sit safely, still waxed, until processing begins, and the hydration period that follows processing is minimized.



Some non-Leica Biosystems reagents could deteriorate if kept for long periods on processing modules awaiting delayed starts. Check product data sheets for reagent use and storage information. As always, Leica Biosystems recommends placing control tissue on slides with test tissue.



If the scheduled end time is not suitable, use the **Load / Unload** button to raise and re-lower the SSA. After the slides have been re-scanned, the delayed start time can now be adjusted to reflect the desired end time.

### 5.1.8.1 Setting Delayed Start Time

To run a tray with delayed start, prepare slides as usual and lock the slide tray. When the run status is **Slides ready** select **Delayed start** from the tray's right-click pop-up menu on the **System status** screen.

Set the date and time that you want the tray to start in the **Delayed start** dialog, and click **OK** (see [Using the Date & Time Selectors \(on page 219\)](#)). The system goes into **Starting** state as usual, and schedules the run in coordination with other operations. The tray then waits with status **Scheduled** until the set start time, when normal processing begins.

## 5.2 Protocol Status Screen



This section does not apply to the BOND-PRIME Processing Module.

This screen displays detailed information about the status of individual slides.

To display the **Protocol status** screen, go to the **System status** screen and click the **Protocol status** tab.

Figure 5-25: The Protocol status screen

The screenshot shows the Protocol status screen with three slide trays. Slide tray 1 is selected, showing details for slide 1. Slide tray 2 shows details for slide 1. Slide tray 3 shows details for slide 1. The protocol steps for the selected slide are listed in a table below.

Step	Reagent	Time	°C
1	*Bond Dewax Solution	0:30	72
2	*Bond Dewax Solution	0:00	72
3	*Bond Dewax Solution	0:00	0
4	*Alcohol	0:00	0
5	*Alcohol	0:00	0
6	*Alcohol	0:00	0
7	*Bond Wash Solution	0:00	0
8	*Bond Wash Solution	0:00	0
9	*Bond Wash Solution	0:00	0
10	*Bond ER Solution 2	0:00	0
11	*Bond ER Solution 2	0:00	0
12	*Bond ER Solution 2	20:00	100

To see how a run is progressing on a slide, click the corresponding slide position button near the top of the screen. Option buttons corresponding to positions without a slide are dimmed, and you cannot select them.



If the patient's name is too long to fit in the available space (slide tray 1, 2 and 3) the name is shortened with "..." at the end. If you want to see the patient's full name in a pop-up field, hover the mouse pointer over the shortened name.

When you select a slide position, the software displays some slide details and the protocol progress. To view additional slide details click **View details** to launch the **Slide properties** dialog.

The protocol steps for the selected slide are displayed beneath the slide details. The current step is highlighted blue. Completed steps show a check mark in a green circle or, if unexpected events occurred, a icon.

If all the required actions for the current step have been performed but there is a waiting period before the next step begins, the check mark or is gray. It remains gray until the next step starts, when it changes to the normal color.

You can view run events by right-clicking the step list and selecting **Run events** from the pop-up menu. You can also open the **Slide properties** dialog from the pop-up menu.


## 5.3 Maintenance Screen



For maintenance information about the BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual. The information below does not apply to the BOND-PRIME Processing Module.

To display the **Maintenance** screen, go to the **System status** screen and click the **Maintenance** tab.

Figure 5-26: The **Maintenance** screen

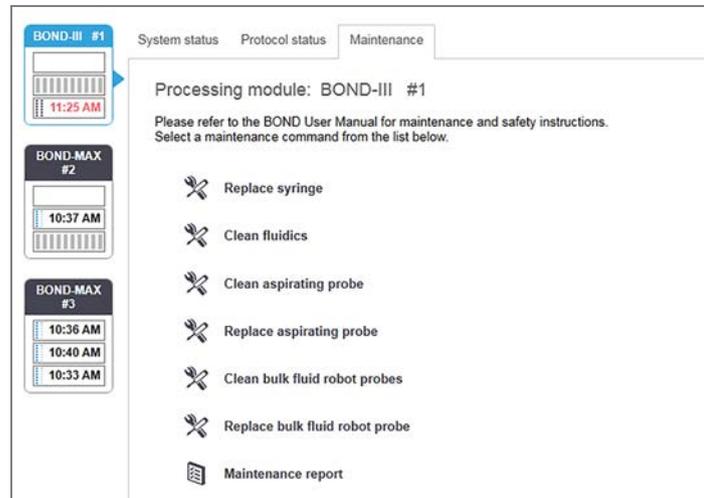

The **Maintenance** screen has command buttons for a range of maintenance tasks, listed below:

Command	Description
Replace syringe	Control the processing module while replacing the syringe or syringes. See <a href="#">12.13 Syringes</a> .
Clean fluidics	Prime the fluidics system. See <a href="#">Clean Fluidics (on page 293)</a> .
Clean aspirating probe	Clean the aspirating probe with the BOND Aspirating Probe Cleaning System. See <a href="#">12.6.1 Cleaning the Aspirating Probe</a> .
Replace aspirating probe	Contact Customer Support.
Clean bulk fluid robot probes	Moves the bulk fluid robots (BOND-III only) into position so the probes can be wiped clean. See <a href="#">12.12.1 Cleaning the Bulk Fluid Robot Probes</a>
Replace bulk fluid robot probes	Contact Customer Support.
Maintenance report	Generate a maintenance report for the selected processing module. This command is always available. See <a href="#">5.3.1 Maintenance Report</a>

The **Maintenance** screen shows the name of the currently selected processing module and the associated maintenance command buttons. A series of dialog boxes will assist you to carry out the maintenance task you select.

Whenever a maintenance task is unavailable, for example when maintenance is already in progress, its command button is disabled. All command buttons (except **Maintenance report**) are disabled when the processing module is disconnected.

## 5.3.1 Maintenance Report



This section does not apply to the BOND-PRIME Processing Module.

Maintenance report displays information about a specific processing module, for a time span that you choose.

- 1 In the clinical client, select the processing module's tab to display its **System status** screen.
- 2 Click the **Maintenance** tab, and then click the **Maintenance report** button.

Figure 5-27: Maintenance report dialog box

Select a processing module from the drop-down list, and then choose the time span you want, using the **From** and **To** date controls. Or, you can click **Last twelve months** to set the time span to this period.

Click **Generate** to generate the maintenance report.

The report is displayed in a new window. The top right of the report shows the information in the following table:

Field	Description
Facility	The name of the facility as entered in the <b>Facility</b> field on the administration client <b>Laboratory settings</b> screen – see <a href="#">10.5.1 Laboratory Settings</a>
Time period	The “From” and “To” dates for the period that the report covers
Processing module	The unique name of the processing module as entered in the <b>Name</b> field on the administration client <b>Hardware configuration</b> screen – see <a href="#">10.6.1 Processing Modules</a>
Serial No.	The unique serial number of the processing module

Points to note regarding the report are listed below:

- An attention icon will appear over the processing module icon on the System status screen (as in [5.1.2 Hardware Status](#)) with a right-click reminder notification when these maintenance tasks become due (at which time the estimated date will display with “Due now”).
- Estimated dates of next maintenance actions are based on the number of slides processed and/or the recommended time period between actions.
- If there is no event history for the report’s time period, a statement to this effect appears in place of a history table.
- The first date in a history table is either the start of the report period, or the processing module’s commissioning date, if this occurred later. The entries in the associated “Slides since last maintenance / replacement” columns always show 0 slides.
- The last date in a history table is the end of the report period.
- There are slide counts for each slide staining assembly, also a combined total slide count for all 3 assemblies. Slide counts reset to 0 after each successful maintenance action.
- There are individual slide counts for each slide staining assembly’s bulk fluid robot probe (BOND-III only).
- There are individual slide counts for each slide staining assembly’s syringe (BOND-III only).
- There is a separate slide count for the main syringe.

# 6

## Slide Setup (on BOND Controller)

The standard workflow for creating slides for processing by the BOND system involves the following major steps:

- 1 Preparing the sections on the slides.
- 2 Creating a case for the slides in the BOND software (or the case may be imported from an LIS).
- 3 Adding or editing doctor details, if necessary.
- 4 Entering the details of the slides (or these may be imported from an LIS).
- 5 Creating control slides as per the laboratory's standard practices.
- 6 Labeling the slides (unless already labeled with LIS labels).
- 7 Loading the slides on slide trays, and placing the slide trays in the processing module.

Once your slides have started processing, the **Slide history** screen allows you to produce a range of slide, case and run reports. Refer to [9 Slide History \(on BOND Controller\)](#) for details.

If the standard workflow does not suit your laboratory, there are alternative workflows.

This chapter has the following sections:

- [6.1 Slide Setup Screen](#)
- [6.2 Working with Controls](#)
- [6.3 Working with Cases](#)
- [6.4 Manage Doctors](#)
- [6.5 Working with Slides](#)
- [6.6 Slide Labeling](#)
- [6.7 Slide Setup Summary Report](#)
- [6.8 Impromptu Slide and Case Creation](#)
- [6.9 Slide Compatibility](#)

## 6.1 Slide Setup Screen

The **Slide setup** screen displays cases and slides entered into BOND but not yet processed. For LIS-integrated systems it shows the cases and slides imported from the LIS. For non-LIS systems you create and, if necessary, edit cases and slides on this screen. Slides must belong to a case, so you must create a case before you can create slides.

To display the **Slide setup** screen, click the **Slide setup** icon on the function bar.



Figure 6-1: The Slide setup screen

Case ID	Patient name	Doctor name	Slides
LS0012 - 45216	Shady, Albert	Joseph	1
20130416-ISHRefine	Benjamin Hightower	Kevin Pannell	10
20130416-IHC	Fannie Hurley	Arthur Josey	10
20130402-IHC5	Adam Smith	Kevin Pannell	10
CS104 - 254862	Ann Chovey	Cecilia Hoy	12
CS145 - 254789 1A	Olive Yew	Kevin Pannell	5
CS150 - 254719	Liz Erd	Thomas Matthews	1
CS154 - 255789	Ray O'Sun	Debbie Hanrahan	3
CS204 - 255789 4S	Clark Kent	Suzanne Rhinehart	3
CS205 - 255790	Chirs P. Bacon	Arthur Josey	1
CS205 - 255791	Marsha Mellow	Nicholas Monahan	10
CS205 - 255792	Suzzan Max	Nicholas Monahan	10
CS211 - 256001	Zaone Marshall	Deanna Hayman	7
CS101 - 252401	Sally Faulkner	Jacod Glaser	3
CS102 - 252413	James Donovan	Jacod Glaser	1
LS0012 - 45214	Barb, Akew	Jenny	1
CS3201 - 527890	Reeve Ewer	Jack Browne	11
CS3201 - 527891	Theresa Brown	Jack Browne	14
CS3201 - 527892	Tex Rytta	Arthur Josey	11

Positive tissue controls: 21  
Negative tissue controls: 25

Total cases: 28  
Total slides: 143

Figure 6-1 shows the **Slide setup** screen. The top right of the screen contains features for working with cases, the right of the screen also contains features for working with slides.

## 6.2 Working with Controls

Leica Biosystems recommends routine use of controls on the BOND system. Some assay products include their own control slides, but additional in-house controls may be recommended in the product instructions. Please refer to the specific Instructions For Use (IFU) for assay products for further details on quality control recommendations. Bear in mind that controls should be a test of the whole process. See [14.3 Quality Control](#) for further discussion.



To most adequately test the performance of the BOND system, Leica Biosystems strongly recommends placing appropriate control tissue on the same slide as patient tissue.

While placement of control tissue with test tissue is strongly recommended, the BOND software also allows for slides with only control tissue, and reagent controls. Take care that slides with only control tissue are well marked to avoid confusion with patient test samples.

### 6.2.1 Control Tissue

Each slide must be entered into the BOND software as having one of the following tissue types:

- Test tissue
- Negative tissue
- Positive tissue

This is set in the **Add slide** dialog (see [6.5.2 Creating a Slide](#)). Any slide with patient test tissue should be set as “Test tissue”. Use the “Positive tissue” and “Negative tissue” control settings only for slides with only control tissue.

Whenever the tissue type is changed for a new slide in the **Add slide** dialog, the **Marker** field automatically clears, to help ensure that you select the correct marker for the tissue.

Slides with negative or positive tissue are marked with a “-” or “+” respectively in the **Slide setup** screen. On the **Slide history** screen, “Test”, “Negative” or “Positive” is displayed for each slide in the **Type** column.

So that the slides themselves stand out clearly as controls, we include “Tissue type” as one of the information fields in the default slide label templates. This prints a large “(+)” on positive tissue control labels, and “(-)” on negative tissue control labels. Nothing is printed in the field for test tissue. We recommend including this field in any other slide labels you configure (see [10.3 Labels](#)).

## 6.2.2 Control Reagent

Slides are set up with a control reagent by selecting the appropriate reagent as the marker, in place of standard antibodies or probes, during slide configuration.

For IHC, the BOND software includes a negative control reagent option. With IHC selected in the **Add slide** dialog, select **\*Negative** from the **Marker** drop-down list. BOND delivers BOND Wash Solution for these steps.

For ISH, the BOND software includes negative and positive control reagents for RNA and DNA. These reagents need to be purchased, registered, and loaded onto the BOND system. Select the appropriate control probe from the **Marker** list.

Slides with control reagents are not specially marked other than by the marker name shown in the **Slide setup** screen and on the slide label if the marker field is included in the applicable slide label template.

## 6.3 Working with Cases

This section describes the features at the left of the **Slide setup** screen that allow you to work with cases. The subsections following the descriptive section give procedures for adding, editing, and deleting case details.

Sections below:

- [6.3.1 Case Controls and Active Case Information](#)
- [6.3.2 Case Identification](#)
- [6.3.3 Adding a Case](#)
- [6.3.4 Case Duplication, Resurrection and Expiration](#)
- [6.3.5 Editing a Case](#)
- [6.3.6 Deleting a Case](#)
- [6.3.7 Copying a Case](#)
- [6.3.8 Daily Case Option](#)
- [6.3.9 Case Report](#)

### 6.3.1 Case Controls and Active Case Information

Click **Add case** to add details of a new case (see [6.3.3 Adding a Case](#)).

Click **Edit case** to edit details of an existing case (see [6.3.5 Editing a Case](#)).

Click **Delete case** to delete an existing case (see [6.3.6 Deleting a Case](#)).

Click **Copy case** to add a copy of a case and the slides for that case (see [6.3.7 Copying a Case](#)).

The **Edit**, **Delete**, and **Copy** commands can also be accessed in the pop-up menu if you right-click on a case.

Click **Case report** (below the case list) to view a report for the selected case (see [6.3.9 Case Report](#)).

The table below the buttons shows active case information as follows:

Case ID	The case identification. This can be any alphanumeric characters.  Because this field can contain letters as well as numbers, clicking the table's Case ID column heading sorts this field as text – an identifier beginning with "10" will be sorted ahead of an identifier beginning with "2".
Patient name	Identification of the patient.
Doctor name	Name of the doctor or referring pathologist in charge of the patient.
Slides	The number of unprocessed slides configured for the selected case.  Once processing starts on slides they are moved from the <b>Slide setup</b> screen to the <b>Slide history</b> screen, and this number updates accordingly.

A case with a red bar at the left-hand side indicates that it has one or more priority LIS slides (see [11.2.5 Priority Slides](#)).

Beneath the active case list there is a summary of all cases and slides as follows:

Positive tissue controls	The total number of positive tissue controls for all cases currently entered and not run.
Negative tissue controls	Total number of negative tissue controls for all cases currently entered and not run.
Total cases	The total number of active cases.
Total slides	The total number of slides for all cases currently entered and not run.

## 6.3.2 Case Identification

The BOND system uses two primary case identifiers: the case ID and case number (**Case ID** and **Case No.** respectively, in the software).

- **Case ID:** a user-entered case ID, using the laboratory's identification scheme. For cases created in the BOND system the case ID is entered in the **Add case** dialog when cases are created. For LIS-ip systems the case ID is received from the LIS (where it may be known as the "accession number", or by another term).
- **Case No.:** a unique identifying number that the BOND system automatically assigns to every case in the system (both created in the BOND system and received from an LIS). The case number is displayed in the **Case properties** dialog.

In BOND versions prior to 4.1 there was no requirement that case IDs were unique, so it was possible to have two or more distinct cases sharing the same case ID. The cases would, however, likely have different patient names, and certainly have different case numbers. In BOND versions 4.1 and later, all new case IDs must be unique.

Cases are also frequently identified by patient name, however, patient names are not required and do not need to be unique.

## 6.3.3 Adding a Case

To add a case, starting at the **Slide setup** screen, do the following:

- 1 On the **Slide setup** screen, click **Add case** to display the **Add case** dialog (see [Figure 6-2](#)).

Figure 6-2: The Add case dialog

- 2 Enter the details as appropriate in the Case ID, Patient name, Case comments, and Doctor fields.



It is possible to add cases without any case information.

- 3 If the required doctor is not in the Doctor list add him or her by clicking **Manage doctors** to open the **Manage doctors** dialog (refer to [6.4 Manage Doctors](#)).
- 4 Select a dispense volume for slides created for this case, if it is not the same as the already configured default dispense volume.  
 Note that for all slides processed on BOND-III and BOND-PRIME Processing Modules, select the 150 µL dispense volume. In addition, for all ISH slides, select the 150 µL dispense volume for all processing module types.  
 For information on the usable areas on slides and dispense volumes, refer to [6.5.8 Dispense Volumes and Tissue Position on Slides](#).
- 5 Select a preparation option from the **Preparation protocol** list (see [Figure 6-2](#)), to make it the default for slides created for this case.
- 6 To leave the dialog without entering the details in the system, click **Cancel**.

- 7 To enter the details of the case, click **OK**.

The case is added to the case list.



If the Case ID already exists in the system, the **Case ID duplication** dialog opens (see [6.3.4 Case Duplication, Resurrection and Expiration](#)).

## 6.3.4 Case Duplication, Resurrection and Expiration

Software versions before BOND 4.1 allowed distinct cases to have the same case ID. Such cases could generally be distinguished by the patient name, and distinction was always guaranteed by the case number, which is always unique. BOND no longer allows new cases to use the same case IDs as existing cases – each new case must be either given a unique case ID or identified as the same as a case already in the system.

If you enter a case with a case ID already in the system, the **Case ID duplication** dialog is displayed, showing the existing case with the same case ID. To use the existing case select it and click **Use selected** (also see [6.3.4.1 Merging Cases](#)). Otherwise, cancel out of the dialog and change the case ID to create the case as a new one.

Cases in the **Case ID duplication** dialog may have been deleted, expired (cases for which all slides have been processed – see below), or may be current cases, still listed on the **Slide setup** screen. When an expired case is selected and restored to the case list the case is said to be “resurrected”.

See [Duplicate Case ID \(on page 231\)](#) for discussion of duplicate case IDs for LIS cases.

### 6.3.4.1 Merging Cases

If you edit a case ID to make it the same as an existing case ID, and then click **Use selected** in the **Case ID duplication** dialog that subsequently appears, all unprocessed slides from the edited case are moved into the existing case.



It is only possible to edit a case that has unprocessed slides; thus it is not possible to change a case to which processed slides are associated.

### 6.3.4.2 Processed Case Lifetime

When processing on the last slide in a case has begun, the case is (by default settings) removed from the Slide setup screen and will appear in the Slide History screen.

You can set the BOND system to keep cases on the **Slide setup** screen for a set number of days after the last slides in the cases have been processed. Set this “processed case lifetime” in the administration client **Laboratory** screen (see [10.5.2 Case and Slide Settings](#)).

Expired cases are stored in the system, but cannot be viewed. Expired cases can be restored to the list by adding the case again (resurrecting it) or adding a slide to the case via the LIS.



Cases that do not contain any processed slides are never automatically cleared from the slide setup screen.

## 6.3.5 Editing a Case

To edit the details of a case, select it in the list then click **Edit case**. The software displays the **Case properties** dialog. You can use this in the same way as the **Add case** dialog described previously.



If you edit details of a case for which slide labels have been printed, print the labels again before attempting to run the slides (a message to this effect will appear on screen).

## 6.3.6 Deleting a Case

To delete a case, select it in the list then click **Delete case**.



When a BOND case in the **Slide setup** screen contains only unprocessed slides, you can manually delete the case, making it “expired”. (All LIS cases expire automatically as soon as they contain no unprocessed slides.)



You cannot manually delete a case if it contains any processing or processed slides.



Deleting a case also deletes all unprocessed slides created for that case.  
You can recover the details of deleted cases but not their slides.

## 6.3.7 Copying a Case

Copying cases provides a convenient way to set up a new case for a patient. You can alter case details in the new case if you wish, or keep them the same. A new case number is automatically created, and you must enter a new case ID.



A case cannot be copied if it contains a slide that references a deleted protocol.

The copied slides are ready for label printing and processing on the **Slide setup** screen. Delete unwanted slides by right-clicking on them and selecting **Delete slide**.

To copy a case:

- 1 Select the case to copy in the case list at the left of the **Slide setup** screen.
- 2 Click **Copy case**; the software displays the **Copy case** dialog.
- 3 Enter a new Case ID and edit the details of the case as necessary.
- 4 Select **Unprocessed slides**, or **All slides** as required.
  - Unprocessed slides - to copy only the unprocessed slides from the original case.
  - All slides - to copy all the slides (unprocessed, processing and processed) from the original case. The system marks all slides in the new case as unprocessed.
- 5 Click **OK**.

The system creates the new case and copies the slides, including any comments, according to the selected option. All copied slides (including LIS) behave in the same manner as slides created in the **Add Slide** dialog (see [6.5.1 Description of Slide Fields and Controls](#)).

## 6.3.8 Daily Case Option

The BOND system can be configured so that it automatically creates a new case every 24 hours, allowing all the slides for each day to be created in the same, one, case. This can save time for laboratories processing small numbers of slides, as patient names and case IDs are not entered. Each daily case has the following properties:

- The case ID is set to the new day's date.
- The dispense volume and preparation protocol default to the system defaults set in the administration client. They can be edited.
- The **Patient name** and **Doctor** fields remain empty and cannot be altered.

You can still create individual cases in the usual way if you want, with the daily case option on. See [10.5.2 Case and Slide Settings](#) for instructions to set the daily case option.

## 6.3.9 Case Report

You can generate reports for individual cases. The reports show basic case details and information about all the slides in the cases, e.g. slide IDs and the protocols and reagents used on them. There is space to write a comment for each slide if the report is printed. See [9.6 Case Report](#) for a complete description.

Generate case reports from the **Slide setup** and **Slide history** screens. Select the appropriate case or slide, then click the **Case report** button. Case reports only include reagent details for slides that have been processed and unlocked from the processing module.

## 6.4 Manage Doctors

The BOND system stores a list of doctors to optionally add to case details. Select from a list of “preferred” doctors in the **Add case** or **Case properties** dialogs, or add or edit doctors in the **Manage doctors** dialog, opened from the same case property dialogs.

The following fields are displayed for each doctor:

- Name: – the doctor’s name
- LIS ID: – a unique identifier supplied by a laboratory information system (if applicable)
- Pref.: – doctor’s preferred status (only preferred doctors are available in the drop-down list when creating cases). This status is set in the **Edit doctor** dialog.

These values are also shown in the **Edit doctor** dialog. In addition, the **Edit doctor** dialog has:

- ID: – a unique ID automatically generated and assigned by the BOND system
- Comments: – editable field for a general comment or additional name information

With the **Manage doctors** dialog open, click **Add** or **Edit** to add new doctors or edit details of existing doctors. Edits are restricted to the comments field and changing the preferred status – you cannot change a doctor’s name after the doctor has been created.

You can delete doctors from the **Manage doctors** dialog. Cases already created with a deleted doctor continue to show the doctor’s name, but the doctor is not available for new cases. You cannot reuse a deleted doctor’s name for a new doctor.

## 6.5 Working with Slides

This section describes slide creation and management on the **Slide setup** screen. The final section describes the dispense volume setting and how it affects tissue placement on slides.

- [6.5.1 Description of Slide Fields and Controls](#)
- [6.5.2 Creating a Slide](#)
- [6.5.3 Copying a Slide](#)
- [6.5.4 Editing a Slide](#)
- [6.5.5 Deleting a Slide](#)
- [6.5.6 Manually Identifying a Slide](#)
- [6.5.7 Adding a Panel of Slides](#)
- [6.5.8 Dispense Volumes and Tissue Position on Slides](#)

## 6.5.1 Description of Slide Fields and Controls

At the top of the slide list there are two buttons:

- Click **Add slide** to add a slide for the selected case.
- Click **Add panel** to add a panel for the selected case.

Refer to [6.5.7 Adding a Panel of Slides](#) for more details.

The slide list on the right of the screen displays details of slides for the case selected on the left of the screen. Each slide displays the slide ID and the details of the protocols to be run on that slide. The label areas on the right of the slides are color-coded to indicate where they were created as follows:



White:  
Slide created in **Add slide** dialog  
(see [6.5.2 Creating a Slide](#))



Yellow:  
Slide created in the **Slide identification** dialog  
(see [6.8 Impromptu Slide and Case Creation](#))



Light gray:  
LIS slide  
(see [11 LIS Integration Package \(on BOND Controller\)](#))

The slides also show the following symbols:



Minus sign:  
Negative tissue slide (see step 4 in [6.5.2 Creating a Slide](#))



Plus sign:  
Positive tissue slide (see step 4 in [6.5.2 Creating a Slide](#))



Red P:  
LIS priority slide (see [11.2.5 Priority Slides](#))



Sample label:  
Slide label has been printed



Mx:  
Multiplex slide with three or more markers. Click the drop down arrow to display all markers for the slide.

Double-click a slide to open the **Slide properties** dialog for it. Right-click to delete the slide, or print a label for it.

## 6.5.2 Creating a Slide

To create slides for the Bond™ Oracle™ HER2 IHC System, see the Instructions For Use (IFU) supplied with the product.

To create a new slide:

- 1 Click on a case in the case list.
- 2 Click **Add slide** to display the **Add slide** dialog.

Figure 6-3: The Add slide dialog

The new slide is automatically numbered with a unique **Slide ID**, however this is not displayed until the slide is saved, when you click the **Add slide** button in the dialog.

- 3 Add a slide comment if you wish.
- 4 Select the tissue type (Test tissue, Negative tissue, Positive tissue) by clicking one of the radio buttons in the **Tissue type** group.  
See [6.2.1 Control Tissue](#), and for more general discussion of controls, [14.3.2 Tissue Controls](#).
- 5 If necessary, change the dispense volume for the slide (see [6.5.8 Dispense Volumes and Tissue Position on Slides](#)).

- 6 Select the staining mode.
  - a In the **Staining mode** field, select **Single** (the default) if a single stain will be applied, or **Sequential multiplex** or **Parallel multiplex** for a multiplex stain slide (see [7.1.1 Staining Modes](#)).
  - b Select **Routine** (the default) in the second field (select **Oracle** only if directed to in the instructions for a Bond™ Oracle™ HER2 IHC System).
  - c For Sequential multiplex staining, select the number of stains from the **Stains** drop-down list. You can select up to four stains.

The tabs displayed depend on the Staining mode selected:

- Single– the **Single** tab
- Parallel multiplex– **Parallel multiplex** tab.
- Sequential multiplex– a tab for each stain (up to four tabs), for example, **First** tab, **Second** tab, **Final** tab).

The screenshot shows the 'Add slide' dialog box. On the left, patient information is displayed: Edward. A, Case ID: 3688, Doctor: Smith, Slide ID, Case N°: 5, Case comments, and Date created: 7/11/2025 3:53:54 PM. The main configuration area on the right includes a 'Slide comments' field, 'Tissue type' (Test tissue selected), 'Dispense volume' (150 µL selected), 'Staining mode' (Sequential multiplex and Routine selected), 'Stains' (4 selected), 'Process' (ISH selected), 'Marker', 'Preparation', and 'Protocols'. The 'First', 'Second', 'Third', and 'Final' tabs are visible, with 'First' highlighted. At the bottom, there are 'Add slide' and 'Close' buttons.

- 7 On each tab displayed:
  - a Select the staining process (**IHC** or **ISH**).
  - b Select the primary antibody or probe from the **Marker** drop-down list:
  - c To run a negative IHC control reagent, select either the default negative reagent **\*Negative** or a negative reagent you have created (refer to [14.3.3 Negative Reagent Control for IHC](#)).
  - d To run a negative ISH control reagent select **\*RNA Negative Control Probe** or **\*DNA Negative Control**.

- e To run a positive ISH control reagent select \*RNA Positive Control Probe or \*DNA Positive Control Probe.



To add or remove items from the **Marker** drop-down list, select or deselect the **Preferred** field for the reagent on the **Reagent Setup** screen of the software. See [8.2.1 Adding or Editing a Reagent](#) for more information.

- f Select the appropriate protocol for each processing stage.
- g When you select a primary antibody or a probe the software will enter default protocols. Check that the correct protocols are set for each stage and select a new protocol from the appropriate drop-down list if required. Select \*--- if no protocol is required for a particular stage.
- Default protocols are set from the **Reagent Setup** screen. Refer to [8.2.1 Adding or Editing a Reagent](#).
- h To add or remove items from the **Protocol** drop-down lists, select or deselect the **Preferred** field for the protocol on the **Protocol setup** screen. See [7.2.1 Protocol Details](#) for more information.
- 8 For Single staining, you should generally leave the default of **Auto** for the Unique Product Identifiers (UPIs) on the left side of the dialog. However, if you want to select a specific lot number for a specific slide (e.g. for lot-to-lot validation), select from the drop-down list in the following fields:
- **Marker UPI** – UPI of the reagent container for the marker
  - **Detection System UPI** – UPI of the Detection System.
- For slides to be processed on the same run (on BOND-MAX and BOND-III), either the UPIs must be the same, or **Auto** must be selected.
- 9 Click **Add slide**.
- Add slide** adds a slide with the details currently displayed in the **Add slide** dialog, then leaves the dialog open. This makes it easy to quickly add a number of slides for the selected case.
- 10 Click **Close** when you have finished adding slides for the case.

### 6.5.3 Copying a Slide



A slide cannot be copied if it references a deleted protocol.

To copy an existing slide:

- 1 Double-click the slide you want to copy, to open the **Slide properties** dialog.
- 2 Click **Copy slide**.  
The dialog changes to **Add slide**, with an **Add slide** button.
- 3 Check the slide details and change as required.
- 4 Click **Add slide**.

The new slide, including any comments, will be added to the same case as the copied slide.

## 6.5.4 Editing a Slide

To edit the details of a slide on the **Slide setup** screen, double-click it to open the **Slide properties** dialog. Change the details as described in [6.5.2 Creating a Slide](#).



If you edit details of a slide for which a label has already been printed, reprint the label before processing the slide.

## 6.5.5 Deleting a Slide

To remove a slide from the slide list, right-click it in the slide list on the **Slide setup** screen, then select **Delete slide** from the submenu. You can also use the Delete key to delete the selected slide.

## 6.5.6 Manually Identifying a Slide

Any slide in the BOND system can be identified at any time. Click the **Search** icon on the function bar to open the **Manual ID entry** dialog.

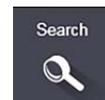


Figure 6-4: Manual ID entry dialog

For slides with two-dimensional barcode labels, for example those printed by the BOND system, scan the label to open the **Slide properties** dialog for the slide. Or, manually enter the 8-digit numeric ID, including leading zeros, and then click **Validate**.

## 6.5.7 Adding a Panel of Slides

A panel is a predefined set of markers with associated tissue types. Use panels to quickly add a number of slides with markers that are commonly used together – see [8.4 Reagent Panels Screen](#).

To add a panel of slides to a case, do the following from the **Slide setup** screen:

- 1 Click **Add panel**. The **Add slides from panel** dialog appears.
- 2 Select a panel from the drop-down list. The slides in the panel are displayed.

- 3 If necessary, exclude some of the slides by deselecting the check-boxes, then click **Add Slides**.

BOND adds the slides to the case.

- For ISH slides the dispense volume is automatically set to 150  $\mu\text{L}$ .
- For IHC slides the dispense volume is set to the case default value.
- For all slides the preparation protocol is set to the case default.



Panels can be used to add slides with the Single or Parallel multiplex staining modes, but not Sequential multiplex.

## 6.5.8 Dispense Volumes and Tissue Position on Slides


The BOND software has two dispense volume settings, set for each slide in the **Add slide** dialog (see [6.5.2 Creating a Slide](#)).

The 100  $\mu\text{L}$  setting can only be used for IHC slides on the BOND-MAX Processing Module – all slides processed on the BOND-III and BOND-PRIME, and all ISH slides (on all processing module types) must use the 150  $\mu\text{L}$  setting. The BOND-PRIME Processing Module uses a different dispensing method to that described below (refer to [7 Protocols \(on BOND Controller\)](#)).

On the BOND-III and BOND-MAX Processing Modules, the dispense volume setting determines the position reagent is dispensed to on the slide as well as the volume dispensed:

- For 100  $\mu\text{L}$  dispenses Covertiles are pulled back approximately half way down the slides and the aspirating probe delivers antibody at the top of the Covertiles (approximately half way down the slides).
- For 150  $\mu\text{L}$  dispenses Covertiles cover most of the slides. Again, reagent is delivered at the top of the Covertiles, so a greater area of the slides receives reagent.

The difference in the areas of slides that receive reagent mean it is important to position tissue correctly. For 100  $\mu\text{L}$  dispenses, typically only one sample can be stained, and it should be placed on the lower half of the slide (away from the label). For 150  $\mu\text{L}$  dispenses, two tissue samples can more easily fit onto slides, or if there is only one it should be placed in the middle of the slide. Usable slide areas for the different dispense volume settings are shown in [Figure 6-5](#). Leica BOND Plus slides and Leica BOND Apex slides are marked to show the areas where tissue should be placed.

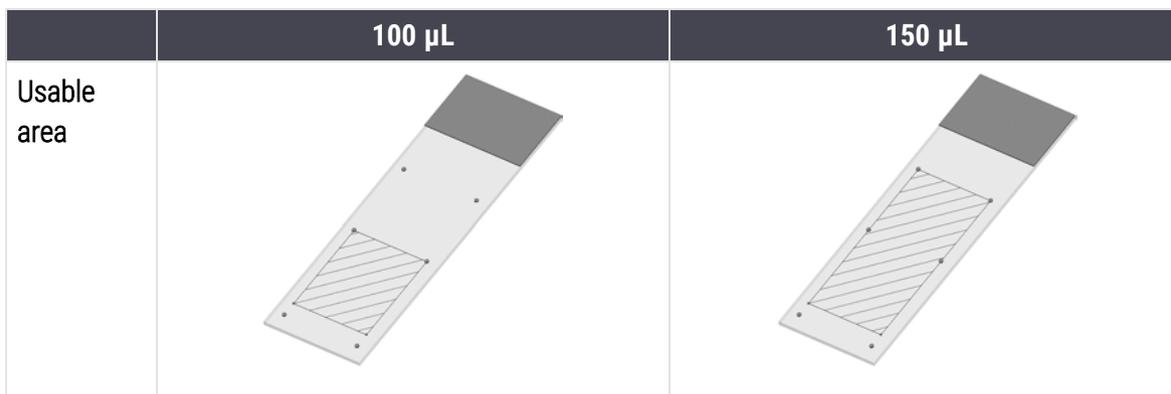**Figure 6-5:** Usable slide areas for the different dispense volume settings

- The hatched areas show where tissue can be placed on slides with different dispense volumes.
- The position-marking dots shown are on Leica BOND Plus slides and Leica BOND Apex slides (see [2.6.1 Slides](#)).

The BOND-III and BOND-PRIME Processing Modules dispense 150  $\mu$ L by default – if slides with 100  $\mu$ L dispense volumes are loaded you are unable to start processing.

For IHC slides on both the BOND-MAX and BOND-III, the volumes of antibody dispensed are as shown in the **Add slide** dialog – 100  $\mu$ L or 150  $\mu$ L. For ISH slides (for both processing module types) the 150  $\mu$ L setting is enforced and the processing modules use the 150  $\mu$ L Covertile and probe positions. However, the BOND system dispenses more than 150  $\mu$ L of probe:

- for RNA probes, BOND dispenses 220  $\mu$ L in two steps – 150  $\mu$ L and 70  $\mu$ L;
- for DNA probes, BOND dispenses 240  $\mu$ L in two steps – 150  $\mu$ L and 90  $\mu$ L.

Wash and other steps apply differing volumes, depending on the protocol.

## Dispense Volume Defaults

For IHC on the BOND-MAX the dispense volume (150  $\mu$ L or 100  $\mu$ L) can be set for each individual slide, however the BOND software allows you to configure two levels of defaults. A system-wide default can be set (see [10.5.2 Case and Slide Settings](#)). This can be overridden for individual cases with case defaults, set in the **Add case** dialog (see [6.3.3 Adding a Case](#)). And finally the dispense volume can be set for individual slides in the **Add slide** dialog (see [6.5.2 Creating a Slide](#)).

Slides must all have the same dispense volume to be processed together in the same run (see [6.9 Slide Compatibility](#)).

## 6.6 Slide Labeling

All slides that are stained on the BOND system must be labeled in order to be identified in the software, so that the correct protocols are run on them. Slide labels created in the BOND system all have a label ID (rendered as a 2D barcode) that is used to automatically identify slides on processing modules. Labels created in an LIS (2D barcode IDs) can also be automatically identified. However, additional, human-readable information should always be included on slide labels so that slides can be identified if the label IDs cannot be automatically identified, if they are smudged, for example (see [10.3 Labels](#)).

Labels must be applied to slides before they are loaded onto the processing module. Take care that the labels are correctly attached so that the ID Imager can effectively scan (for 2D barcodes) the label IDs.

You must use slide labels supplied by Leica Biosystems for use with the BOND slide labeler.

- [6.6.1 Printing Labels and Applying to Slides](#)
- [6.6.2 Slide IDs and Label IDs](#)

### 6.6.1 Printing Labels and Applying to Slides

- 1 To print a label for a single slide, right-click on the slide, then select **Print label**. In this case, the **Print slide labels** dialog does not appear. In a BOND-ADVANCE system that includes defined pods, the default slide labeler will be used to print the label. Otherwise, the first slide labeler in the list will be used (see [10.6.3 Slide Labelers](#)).
- 2 When all of your slides have been set up, click **Print labels** on the **Slide setup** screen.
- 3 Select whether to print slide labels for:
  - All slide labels not yet printed – slides in all cases for which labels have not been printed.
  - All slide labels not yet printed for current case – slides in the current case for which labels have not been printed.
  - Current case – all slides for the currently selected case, including those previously printed.



Slide labels are printed in the order that their cases were created and, within each case, in the order that the slides were created.

- 4 Select the slide labeler to use.  
(Set the default labeler in the administration client **Hardware** screen – see [10.6.2 Pods](#).)

- 5 Click **Print**.


When slide label printing is in progress, a flashing icon appears at the bottom left of the **Slide setup** screen.



- 6 Ensure the frosted area of the slide, where the label will be applied, is completely clean and dry.

- 7 Apply the label with the slide ID aligned parallel with the top of the slide. The label should be right side up (on the same side of the slide as the tissue).
- Align the label squarely as the processing module cannot properly image misaligned labels.
  - Apply firm pressure to the whole BOND Printer Labels area to ensure attachment.
  - The printer label should be fully attached to the surface. There should be no overhang of the printer label over the edge of the slide.
  - If the label is immersed in liquid, allow it to dry prior to storage.

**Figure 6-6:** Place the label within the edges of the slide

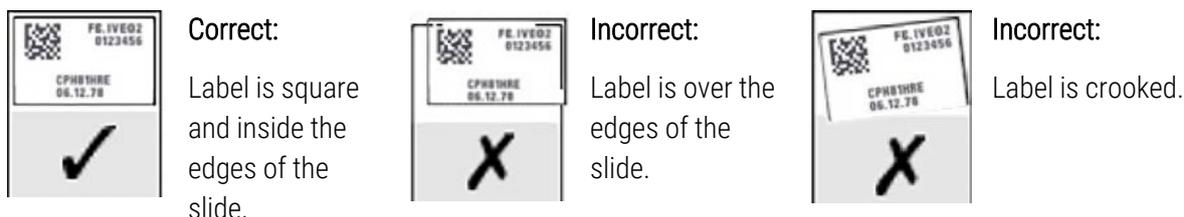

**CAUTION:** Position all parts of the label within all slide edges. An exposed sticky surface may cause the slide label (and slide) to stick to the Covertile or other equipment and damage the slide.



When the BOND Printer Ribbon and Labels roll are replaced, replace the ink ribbon with the same product number. Directions for the replacement of the Label rolls and ink ribbon are included in the box.



For printer labels that undergo prolonged reagent immersion or are subject to aggressive procedure, consider the following:

- Apply the slide label after the treatment has been performed.
- Apply a secondary identifier on the surface of the slide.
- Avoid or limit immersion of the BOND Printer Ribbon and Labels.
- Apply a protective overlay.



Used ink rolls will have reverse images of the printed information. If the information contains personally identifiable information, the used ink rolls should be disposed of according to laboratory procedures and/or local privacy regulations.



Adhesive and ink durability are subject to customer testing conditions. Use of the BOND Printer Ribbon and Labels must be verified by the laboratory for their procedures and conditions.

### 6.6.1.1 External Dewaxing and Epitope Retrieval

Dewaxing and epitope retrieval, if this is being done externally to the BOND system, is best done after labeling the slides. This avoids slides drying out while you enter the details of the slides and set up the BOND system to run the required protocol(s), and also avoids difficulties in labeling wet slides following these steps.



If you are using xylene for dewaxing off the processing module, avoid touching the label so the printing does not become smudged.



Extended soaking in, or exposure to, benzene derivatives, D-Limonenes and Aliphatic Hydrocarbons, Acetone, Water and Aqueous based reagents can reduce the effectiveness of the slide ID label adhesive and possible loss of print integrity. We recommend that labels should not be submerged for extended period. See specific product information on the LBS website.



**CAUTION:** For dewaxing on BOND-III and BOND-MAX Processing Modules, use only BOND Dewax Solution.

For dewaxing on BOND-PRIME Processing Modules, use only BOND-PRIME Dewax Solution.

Do not use xylene, xylene substitutes or other reagents that can degrade parts of the processing modules and cause fluid leakage.

## 6.6.2 Slide IDs and Label IDs

The BOND system provides a unique "Slide ID" every time a new **slide** is created. The BOND system also creates a unique "Label ID" every time a **slide label** is printed. The Label ID is a 2D Barcode.



For LIS slides the Slide ID may be defined by the LIS and could be any numeric value (with 8 digits or less).

### 6.6.2.1 Slide Identification



This section does not apply to the BOND-PRIME Processing Module.

When the labels are placed onto slides the system can identify the slides in each position in the slide staining assemblies (refer to [5.1.5.1 Automatic Slide Identification](#)).

Slides without slide IDs, or with unrecognized slide IDs, must either be manually identified to the system (refer to [5.1.5.2 On-Board Manual Slide Identification](#)), or a label printed and placed on the slide and the slide imaged again.

Configure the information to display on slide labels on the administration client **Label configuration** screen (see [10.3 Labels](#)).

## 6.7 Slide Setup Summary Report

The slide setup summary lists all slides (for all cases), currently configured on the **Slide setup** screen. The slides are grouped by case with details such as marker and dispense volume provided. At the bottom of the report is a list of all the reagents and reagent systems required by the slides in the report, with the number of tests for each. There are separate lists for each BOND Processing Module.



For BOND-PRIME, you need to have at least one processing module commissioned to see details in the report.

The report is a valuable aid in run preparation. It helps you to ensure that the slides put onto each tray are compatible (see [6.9 Slide Compatibility](#)), and shows the reagents and reagent systems that need to be loaded.

To create a slide setup report, click **Slide setup summary**.

For each slide the report shows the following information:

Field	Description
Slide ID	The BOND system assigns a unique identifier to each slide
Marker	The marker(s)
Staining protocol	The staining protocol
Preparation	The preparation protocol (if any)
HIER	HIER protocol (if any)
Enzyme	Enzyme retrieval protocol (if any)
Dispense volume	The volume of reagent to be dispensed (see <a href="#">6.5.8 Dispense Volumes and Tissue Position on Slides</a> )
Tissue type	Test tissue, positive control tissue, or negative control tissue



For sequential multiplex staining slides, up to four rows are shown in the Marker, Protocols, Dispense volume, and Tissue type columns, grouped by the Slide ID.

See [3.7 Reports](#) for further details about the report window and printing options.

## 6.8 Impromptu Slide and Case Creation



This section does not apply to the BOND-PRIME Processing Module.

By default, the BOND system is configured so that new cases and slides can be created after a slide tray has been loaded into a processing module and the slides imaged.

The first section below gives directions for this “impromptu” case and slide creation. The second section describes option settings for alternative workflows.

- [6.8.1 Creating New Cases and/or Slides After Imaging](#)
- [6.8.2 On-Board Slide Identification Options](#)

### 6.8.1 Creating New Cases and/or Slides After Imaging


Follow the procedure below to add case and slide information after slides have been loaded and imaged (the procedure is similar to the assisted-ID procedure described in [5.1.5.2 On-Board Manual Slide Identification](#), but now includes creation of new cases and slides).

- 1 Load slides onto the processing module in the usual manner.

There is no need to create cases or slides in the BOND software or print labels – hand written or third party labels can be used.

The system will not recognize the slides so will display images of the labels.

Figure 6-7: Slide not automatically identified

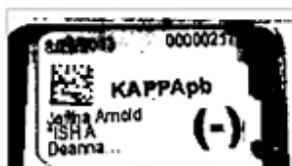


If label images are consistently not displayed for a particular processing module, it may be configured not to capture images of the slide labels. Contact customer support to arrange for this setting to be reconfigured for the processing module.

- 2 To launch the **Slide identification** dialog do one of the following:
  - a Double-click on the slide image.
  - b Right-click on the image and select **Select manually** from the submenu.

The **Slide identification** dialog appears with **New case** and **New slide** buttons available (items 1 & 2 in [Figure 6-8](#)).

**Figure 6-8:** Slide identification dialog with slide status display

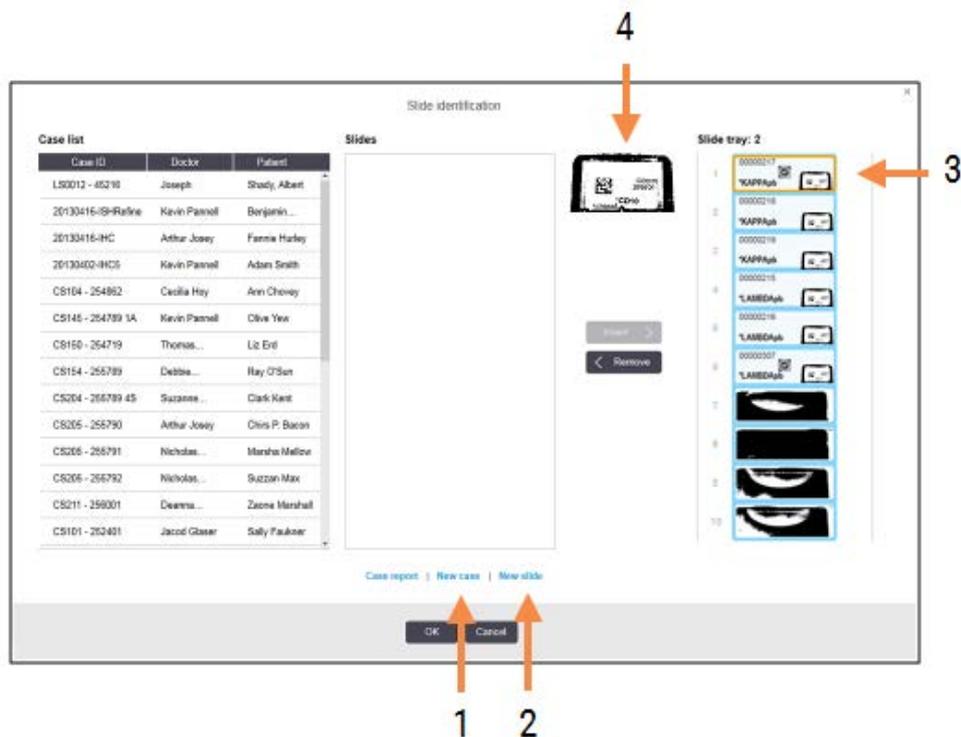

In some laboratories the **New case**, or both **New case** and **New slide** buttons may be disabled – see [6.8.2 On-Board Slide Identification Options](#).

The active slide is highlighted on the slide tray (item 3).

The dialog includes an enlarged image of the label (item 4) to assist with slide identification. Hold the cursor over the slide in the right-hand pane to see an even greater enlargement of the label.

The left-hand pane lists all cases with current slides. Under default settings, only cases with slides for which labels have been printed appear (you can change this to include cases with slides for which labels have not been printed, see [6.8.2.2 External Slide Labels](#)).

The center pane shows slides configured for the case selected in the left-hand pane, where the slides have not yet been matched to any slides imaged on the processing module. Again, under default settings, only slides that have had labels printed appear, but this can be changed to show all slides configured for the case.



Ensure that you select the correct label image, as your slides could be impacted if you choose incorrectly.

3 To create a new case, click **New case** (item 1).

Create a new case for the selected slide in the normal manner (refer to [6.3.3 Adding a Case](#)).

- 4 After you click **OK** in the **Add case** dialog, select the new case in the case list in the **Slide identification** dialog.
- 5 To create a new slide for the case you just created, click **New slide** (item 2).  
This opens the **Add slide** dialog.
- 6 Create a new slide in the software for the physical slide selected in the right-hand pane, in the normal manner (refer to [6.5.2 Creating a Slide](#)).  
When it is added, the new slide is displayed in the center pane of the dialog (i.e. while the new case remains selected in the left-hand cases list).
- 7 Ensuring that the correct label image is still selected in the right-hand pane, click **Insert** to match it with the new slide in the center pane.  
The slide is removed from the center pane and the label image in the right-hand pane replaced to show the system information for the slide, as it was entered for the new slide you have just created.  
If you match slides incorrectly, you can undo this step by selecting the slide in the right-hand pane and clicking **Remove**.
- 8 The slide can now be processed in the usual manner.  
Repeat the procedure of creating new cases and slides for remaining slides in the slide tray.

## 6.8.2 On-Board Slide Identification Options

Settings in the administration client can allow or enforce different slide identification workflows, by selectively enabling or disabling options in the **Slide identification** dialog.

### 6.8.2.1 Restrict or Disallow Impromptu Case and Slide Creation

By default the BOND system allows you to load slides that have not been created in the BOND software (or imported from an LIS), and to create the cases and slides in the software after the slides have been imaged, using the **Slide identification** dialog. Optionally, you can set the system to disallow the creation of new cases this way (but still allow creation of new slides for existing cases), or completely disallow creation of slides (and cases) after loading slides. Depending on your setting the **New case**, or both **New case** and **New slide** buttons in the **Slide identification** dialog are disabled (see [Figure 6-8](#)).

Restrict impromptu case and slide creation options in the administration client **Settings** screen (see [10.5.2 Case and Slide Settings](#)).

## 6.8.2.2 External Slide Labels

You can set the BOND system to require, or not, that all slides must be printed by the BOND system before they can be processed. There are separate settings for LIS slides and non-LIS slides.

For non-LIS slides the default setting requires printing by the BOND system. This means that physical slides without labels printed by the BOND system are not automatically matched with slides created for them in the software (even if the IDs are the same). Furthermore, you cannot match the slides manually using the **Slide identification** dialog, because only slides that have been printed by the BOND system are displayed there. Consequently, laboratories without BOND–LIS integration that hand-write labels or print them on third-party equipment, must set this option off. This makes all slides created within the system available for matching with slides loaded onto the processing module, irrespective of whether the BOND system printed the labels or not.

To enable processing of slides that have not had labels printed by the BOND system, deselect **Force printing in BOND** in the administration client **Settings** screen (see [10.5.2 Case and Slide Settings](#)). (It is not necessary to deselect **Force printing in BOND** just to allow impromptu case and slide creation – see [6.8.2.1 Restrict or Disallow Impromptu Case and Slide Creation](#).)



Slides created prior to deselecting the **Force printing in BOND** option will not be available for processing until their labels are printed, although slides created after deselecting this option will not need to have labels printed.

For LIS slides the default setting does not require printing by the BOND system. This means that slides with labels printed by the LIS can be automatically matched to the slides in the BOND software (imported from the LIS). Or, if an automatic match cannot be made (if, e.g. a slide label is smudged), you can manually match slides using the **Slide identification** dialog. However, if your workflow has slides created in an LIS but you want to enforce that labels are printed by the BOND system, turn the option on (select **Force LIS printing in BOND** on the administration client **LIS** screen – see [10.2 LIS](#)).

## 6.9 Slide Compatibility



This section does not apply to the BOND-PRIME Processing Module.

In order that the steps in each run are synchronized in a way that ensures optimal results for all the slides on the tray, the slides are checked for compatibility by the BOND software when the slide trays are loaded. Incompatible slides are shown in the **System status** screen. You must remove or replace incompatible slides before starting the run (see [5.1.4.4 Fixing Incompatible Slide Setup](#)).

For routine slides to be compatible they must:

- have the same dispense volume;
- be all single-stain or all parallel multiplex stain or all sequential multiplex stain;
- have the same marker/detection system UPI when it has been specifically selected during the Add Slide process;
- use the same preparation protocol;
- use the same staining protocol; and
- use compatible pretreatment protocols and/or ISH denaturation and hybridization protocols.

Rules for protocol compatibility are provided in [6.9.1 Protocol Compatibility](#).

Slide setup reports ([6.7 Slide Setup Summary Report](#)) provide some assistance to help ensure you load compatible slides onto each tray.

### 6.9.1 Protocol Compatibility

Staining and preparation protocols have rigid compatibility constraints, while for heat and enzyme pretreatment protocols, and ISH hybridization and denaturation protocols, there is some room for variation. Compatibility for these protocols depends on the processing module type (BOND-III or BOND-MAX), number and duration of the protocol steps and processing module states during the steps. The protocols are compatible when these factors are all the same or differ in ways that can be accommodated without affecting staining quality.

Compatibility rules for all protocol types are listed below.

#### 6.9.1.1 Staining Protocols

The same staining protocol must be used for each slide. For sequential multiplex staining runs, the same staining protocols must be used, in the same order.

IHC and ISH slides cannot be mixed in single-stain runs, but can be combined in sequential multiplex staining runs.

## 6.9.1.2 Preparation Protocols

For “dewax” and “bake and dewax” protocols

- The same protocol must be used for all slides in the tray; and
- Slides with a preparation protocol cannot be mixed with slides without a preparation protocol.

## 6.9.1.3 Pretreatment Protocols

Slides with heat retrieval only, enzyme retrieval only, heat *and* enzyme retrieval, and no epitope retrieval at all, can all be run together. Slides not receiving the current pretreatment are hydrated while the protocol runs on the other slides (heat-induced retrieval always precedes enzyme-induced retrieval).

Similarly, all combinations of slides with and without ISH denaturation and hybridization are compatible.

The sections below give conditions for compatibility of pretreatment protocols with protocols of the same pretreatment type.

### Heat Pretreatment

1 Heat pretreatment protocols are compatible when they have:

- the same number of steps; and
- the same incubation times for each step, except for heated steps.

For concurrent heat steps the longest duration set for the step is used for all slides. Slides with shorter set durations are heated just for the period configured for them, after which power to the slide heater is turned off.

2 Protocols using epitope retrieval solutions 1 and 2 can be mixed in runs.

3 Slides using heat pretreatment can be run in trays with slides not using heat pretreatment – the slides not receiving pretreatment are hydrated with epitope retrieval solution at ambient temperature while the other slides are processed.

### Enzyme Pretreatment

1 Enzyme pretreatment protocols are compatible when they have:

- the same number of steps; and
- the same incubation times for each step.

2 Up to 2 enzyme types can be applied in a run.

3 Slides using enzyme pretreatment can be run in trays with slides not using enzyme pretreatment – the slides not receiving pretreatment are hydrated at ambient temperature while the other slides are processed.

## 6.9.1.4 ISH Denaturation

Denaturation protocols are compatible when they have the same incubation times. Incubation temperatures can differ.

## 6.9.1.5 ISH Hybridization

Hybridization protocols are compatible when they have the same incubation times. Incubation temperatures can differ.

# 7

## Protocols (on BOND Controller)

In the BOND software, protocols are the series of steps performed to stain tissue samples.

Your BOND system is supplied with a set of predefined Leica Biosystems protocols that cannot be edited or deleted. The predefined protocols have been validated by Leica Biosystems. However, customized protocols can be created by copying and editing existing predefined protocols.



**WARNING:** All customized protocols must be validated in accordance with the local laboratory procedures and requirements. The ability to create and save a protocol does not indicate that it is suitable for the intended task.

This chapter has the following sections:

- [7.1 Protocol Types](#)
- [7.2 Protocol Setup Screen](#)
- [7.3 Creating New Protocols](#)
- [7.4 Editing User Protocols](#)
- [7.5 Protocol Reports](#)
- [7.6 Predefined Protocols](#)

## 7.1 Protocol Types

All protocols in the BOND system have a “type” according to the specific functions they are intended to perform. For example, prestaining HIER protocols are one type, IHC staining protocols another.

- The type of a protocol cannot be changed.
- To create a new protocol you must copy an existing protocol of the type you want the new protocol to be. You can then edit the protocol steps as required.

Typically, in any processing run, a number of protocols of different types are run in order to prepare the slides, apply the markers, and then apply chromogen. These sequences and the protocols they use typically require modification for multiplex stains.

- [7.1.1 Staining Modes](#)
- [7.1.2 Protocol Sequences](#)

### 7.1.1 Staining Modes

The BOND system has three staining modes:

- **Single** – the application of a single marker and chromogen to a single slide.
- **Parallel multiplex** – the application of up to four different markers and chromogens to a single slide. Markers are mixed together in a “cocktail” and applied with a single staining protocol.
- **Sequential multiplex** – the application of up to four different markers and chromogens to a single slide. Markers are applied one after the other in separate staining protocols.

Each staining protocol has a “staining method” to indicate its role with respect to multiplex or single staining.

Single staining has only the one staining method of “Single”.

Parallel multiplex staining has only one staining method of “Parallel multiplex”.

Predefined sequential multiplex staining protocols have the staining method “Preliminary”, which cannot be changed. However, you have the option to copy these predefined protocols and modify the staining method to suit your requirements.

Sequential multiplex staining has the following staining methods:

- **Preliminary** – used for all protocols before the last one in a sequential multiplex stain
- **Final** – used as the last protocol in a sequential multiplex stain

For example, a user-created protocol can be configured for use as a single protocol, or it can also be configured for use as a preliminary protocol and/or a final Protocol. Make sure you review the entire protocol to ensure that all steps are appropriate for all staining methods (for example a single protocol has a counter-stain, which is not needed for the preliminary protocols).

Protocol types and staining methods are displayed in the table below:

Type		Staining Method	Description
Staining	IHC Staining—Single staining	Single	Protocol for detection of a single antibody for a single stain
	IHC Staining—Sequential multiplex staining	Single	Protocol for detection of a single antibody for a single stain
		Preliminary	Protocol for detection of the preliminary antibody in sequential multiplex stain
		Final	Protocol for detection of last antibody in sequential multiplex stain
	IHC Staining Parallel multiplex staining	Parallel multiplex	Protocol for detection of cocktail antibodies in parallel multiplex stain
	ISH Detection—Single	Single	Protocol for detection of a single probe for a single stain
	ISH Detection—Sequential multiplex staining	Single	Protocol for detection of a single probe for a single stain
		Preliminary	Protocol for detection of the preliminary probe in sequential multiplex stain
		Final	Protocol for detection of last probe in sequential multiplex stain
ISH Detection Parallel multiplex staining	Parallel multiplex	Protocol for detection of cocktail probes in parallel multiplex stain (currently there are no protocols in this category)	
Prestaining	Preparation	N/A	Dewax, or bake slide (for tissue adhesion) then dewax tissue
	Heat Pretreatment	N/A	Epitope retrieval using heat
	Enzyme Pretreatment	N/A	Epitope retrieval using enzymes
	ISH Denaturation	N/A	Denaturation protocols for DNA ISH
	ISH Hybridization	N/A	Hybridization protocols for ISH

## 7.1.2 Protocol Sequences

Typically, for each slide, a sequence of protocols of different types is applied. This is a selection of preparation, epitope retrieval, denaturation, hybridization and staining protocols, as appropriate for the tissue, marker, and general laboratory procedures. These sequences can be set for each slide individually at slide creation (see [6.5.2 Creating a Slide](#)), however the BOND software also allows you to set default protocols to speed up slide creation when specialized protocols are not required:

- a default preparation protocol (e.g. \*Dewax) is set for the entire BOND system in the administration client (see [10.5.2 Case and Slide Settings](#));
- defaults for all other protocol types are set for each marker, from the **Reagent Setup** screen (see [8.2.1 Adding or Editing a Reagent](#)).

Set suitable default protocols so that time spent preparing individual slides is minimized. You can change protocols for individual slides if you need, when slides are created.

The order in which the protocols in a sequence are run is automatically set by the BOND software and is shown in the table below. Probe dispenses and removal are not included in any protocol – this also happens automatically.

Order	Protocol	IHC or ISH	Comment
1	Preparation	Both	Optional on-board removal of wax in preparation for chemistry.
2	HIER (heat-induced epitope retrieval)	Both	For most slides either an HIER or EIER protocol is run – on occasions, both, or neither.
3	EIER (enzyme-induced epitope retrieval)	Both	
4	Probe application	ISH	Not selected by the user, BOND automatically includes the appropriate protocol here.
5	Denaturation	ISH	Denaturation protocol for DNA probes. DNA probes should always use denaturation.
6	Hybridization	ISH	Required hybridization protocol for ISH, or none.
7	Probe removal	ISH	Not selected by the user, BOND automatically includes the appropriate protocol here.
8	Staining	Both	Required protocol for application of chromogen and associated reagents. IHC primaries are dispensed in this protocol.

The protocols selected for protocol sequences can be predefined or you can create customized protocols and select these (see [7.3 Creating New Protocols](#)).

## 7.1.2.1 Protocols and Protocol Sequences for Sequential Multiplex Staining

Sequential multiplex stains essentially run between two and four staining protocol sequences one after the other. These can be any combination of IHC protocols and/or ISH protocols. Commonly, but not in all cases, the first marker uses the BOND Polymer Refine Detection system, with DAB chromogen, and the subsequent markers use the BOND Polymer Refine Red Detection system, with Fast Red chromogen.

Sometimes the subsequent prestaining protocols in the sequence can be skipped (ie, Epitope Retrieval, Denaturation, etc), or if included, may need to be modified (i.e. reduce retrieval temperature). Steps in the sequential staining protocols (preliminary or final) should also, typically, be modified (the protocols necessarily need some modification to have the appropriate staining method set – see [7.1.1 Staining Modes](#)). Some suggestions for protocol and protocol sequence modifications for sequential multiplex staining are given below. In all cases you should run your own tests to verify results.

- Preparation protocols (e.g. Dewax) can only be run in the sequence for the first marker – the software does not allow selection of a preparation protocol for the second and subsequent staining protocol sequences.
- Epitope retrieval may be only required once, before application of the first marker. If additional retrieval is required for subsequent markers a shorter duration or lower temperature may be adequate.
- Epitope retrieval protocol modifications can be used to strip previous antibodies to allow sequential staining (i.e. a chromogenic multiplex sequential stain using all mouse markers).
- If multiplex staining with multiple DNA probes, denaturation is often only required once, before application of the first marker. If additional denaturation is required for additional markers, it typically requires shorter duration.
- For sequential staining protocols the counterstain segment is removed from the preliminary protocols and added to the final protocol.

## 7.2 Protocol Setup Screen

To work with protocols, click the **Protocol setup** icon on the function bar.



Figure 7-1: Protocol setup screen

The screenshot shows the 'Protocol setup' screen with a table of protocols and filter options at the bottom. The table has columns for Protocol name, Protocol type, Description, Modified by, Mod. date, and Pref. The filter options are: Protocol group (Staining), Protocol type (All), Staining method (All), Protocol origin (All), and Preferred status (Preferred).

Protocol name	Protocol type	Description	Modified by	Mod. date	Pref.
*IHC Protocol F	IHC staining	BOND Polymer DAB System for IHC	Leica	8/27/2020	✓
*IHC Protocol G	IHC staining	Bond Polymer AP Red IHC protocol	Leica	8/27/2020	✓
*IHC Protocol H	IHC staining	Bond Oracle IHC System protocol	Leica	8/27/2020	✓
*IHC Protocol J	IHC staining	BOND Polymer AP RED System for IHC	Leica	8/27/2020	✓
*IHC Protocol K	IHC staining	ChromoPlex 1 Dual IHC protocol	Leica	8/27/2020	✓
*IHC Protocol K - 50 Test	IHC staining	ChromoPlex 1 Dual IHC protocol	Leica	8/27/2020	✓
*IHC Protocol Q	IHC staining	BOND Polymer DAB System with altered Px on IHC	Leica	8/27/2020	✓
*FISH Protocol A	ISH detection	FISH System protocol - 30 Test	Leica	8/27/2020	✓
*FISH Protocol C	ISH detection	FISH wash protocol	Leica	8/27/2020	✓
*FISH Protocol D	ISH detection	FISH wash protocol (DS9636 and DS9604)	Leica	8/27/2020	✓
*ISH Protocol A	ISH detection	BOND Polymer RNA ISH Protocol	Leica	8/27/2020	✓
*ISH Protocol B	ISH detection	BOND Polymer DNA ISH Protocol	Leica	8/27/2020	✓

The **Protocol setup** screen has a table that lists each protocol along with some basic details. Predefined protocols have an asterisk (\*) as the first character in their name and abbreviated name.

You are able to select a protocol from this table for operations such as copying, editing and report generation. These operations are accessed through buttons above the table or the right-click menu.

Filters below the table allow you to set the type of protocol to display. You can select between staining and prestaining protocols, and further refine this to show specific protocol types (see [7.1 Protocol Types](#)). Additionally, you can filter the staining method, protocol origin, and preferred status.

The information in the protocol list is described below:

Title	Description	Options
Protocol name	Full name of the protocol	Predefined (Leica Biosystems) protocols always begin with an asterisk (*)
Protocol type	Describes the function of the protocol	See <a href="#">7.1 Protocol Types</a>
Description	Describes the protocol's function and application	
Modified by	Identifies who created or last modified the protocol	<b>Leica</b> indicates a predefined Leica Biosystems protocol
Mod. date	The date the protocol was created or last modified	
Pref.	Displays the protocol's preferred status	Checked – this is a preferred protocol, available for selection in the <b>Add Reagent</b> and <b>Add Slide</b> dialog.  Not checked – this is not a preferred protocol, and is unavailable for selection in the <b>Add Reagent</b> and <b>Add Slide</b> dialog

## 7.2.1 Protocol Details

To open a protocol listed in the **Protocol setup** screen for viewing or editing, double-click it (or highlight it, then click **Open**). The software displays the **Edit protocol properties** dialog with the protocol's details.

For predefined Leica Biosystems protocols only the preferred setting is editable, but other settings can be changed for user protocols.

Figure 7-2: The **Edit protocol properties** dialog for a user protocol

**Edit protocol properties**

Name:

Abbreviated name:

Description:

Staining method:  Single  Preliminary  Final  Preferred

BOND-MAX BOND-III BOND-PRIME  Protocol type: IHC staining

Preferred detection system:

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*MARKER	Leica Microsystems		26	15:00
4		*Post Primary	Leica Microsystems	✓		8:00
7		*Peroxide Block	Leica Microsystems	✓		3:00
10		*Polymer	Leica Microsystems	✓		8:00
14		*Mixed DAB - PRIME	Leica Microsystems	✓		5:00
15		*Mixed DAB - PRIME	Leica Microsystems	✓		5:00
18		*BOND-PRIME Hematoxylin	Leica Microsystems	✓		4:00

Show wash steps

The dialog displays a tab for each processing module type (BOND-MAX, BOND-III, and BOND-PRIME). If no processing modules are commissioned, only BOND-MAX and BOND-III are displayed. You must commission at least one BOND-PRIME Processing Module to see its tab.

There is also an **Import protocol** button that appears when you are creating a new protocol, or when editing a user protocol. See [7.4.4 Multiple Processing Module Types and Protocol Versions](#) for details.

Select **Show wash steps** below the table to view all protocol steps (including wash steps). Deselect to hide the wash steps.

The **Edit protocol properties** dialog displays the following protocol information:

Name	The protocol's full name.
Abbreviated name	The protocol's abbreviated name, used, for example, on slide labels.
Description	A brief statement describing the protocol.
Staining method	(See below)
Protocol type	The type indicates the protocol's function and determines allowable steps and reagents.
Preferred detection system	The preferred detection system for this protocol. This does not apply to prestaining protocols.

A table below the protocol information in this dialog lists each protocol step and its properties (see [Figure 7-2](#)). The editable steps in user protocols are edited within this table (see [7.4 Editing User Protocols](#)).

The following details are shown in the table:

Item	Description
Step No.	The order in which the steps of the protocol will be performed.
Wash	Checked if the step is a wash step.
Reagent	The reagent used in the step.
Supplier	The supplier of the reagent. This is not editable.
Ambient	Checked if the step is at ambient temperature.
Temperature	The selected slide temperature if other than ambient (prestaining protocols only).
Inc. (min)	The minimum time the reagent will remain on the slide.

## 7.2.1.1 Staining Method

Staining protocols include a “staining method” section. Single stain and sequential multiplex stain protocols have the following options:

- **Single** – protocol is for single stains
- **Preliminary** – all protocols except the last one for a sequential multiplex stain
- **Final** – the last protocol of a sequential multiplex stain

Parallel multiplex stain protocols have only one staining method option: **Parallel multiplex**.

See [7.1.1 Staining Modes](#) for further discussion of staining methods.

## 7.2.1.2 Preferred Status

Only preferred protocols are available for selection in the **Add Reagent** and **Add Slide** dialog, so protocols you intend to use should be made preferred. To do this select the **Preferred** checkbox – deselect to make not preferred.

# 7.3 Creating New Protocols

You can create new protocols by copying existing user or Leica Biosystems protocols. When you copy a protocol, the type of protocol remains fixed and cannot be altered later. Thus if you wish to create a new IHC protocol you must copy an existing IHC protocol; for an HIER protocol, copy an existing HIER protocol and so on.

To copy a protocol, select it from the list in the **Protocol setup** screen then click the **Copy** button. A copy of the selected protocol will now appear in the **New protocol properties** dialog ready for editing.

The new protocol will require a unique name and abbreviated name that must comply with all the rules specified in [7.4.3 Protocol Rules](#). Other than changing the protocol’s name and abbreviated name, you do not need to change any other part of your new protocol. However, you can, of course, alter any aspect of the protocol as described in [7.4 Editing User Protocols](#).

After editing BOND-III or BOND-MAX, click **Save**. If the protocol complies with the rules, you will be asked to confirm that you are creating a protocol “at your own risk”. This message is a reminder that Leica Biosystems cannot predict the quality of results from any user-created or edited protocol. Once you confirm that you are happy to continue, the protocol changes will be saved.

For BOND-PRIME, refer to [BOND-PRIME specific protocol rules](#).



All protocols must be validated by your laboratory before use.

## 7.4 Editing User Protocols

You are able to edit user protocols (but not Leica Biosystems protocols) using the **Edit protocol properties** dialog. To edit a protocol, select it from the list in the **Protocol setup** screen then click **Open** (or double-click the protocol). Alternatively, configure a new protocol by copying an existing protocol of the same type, and editing it (see [7.3 Creating New Protocols](#)).

In staining protocols, reagent steps can be added and removed, and new reagents and incubation times set. Additional wash steps can be added or removed.

For \*Bake and Dewax protocols, you can change only the time and temperature of the Bake step. For other prestaining protocols (HIER, enzyme), temperatures and incubation times for some steps can be changed. See [7.4.3 Protocol Rules](#) for a list of allowable edits.

Because the dispense of a new reagent must be followed by wash steps, insertion of a new reagent step in a staining protocol automatically adds a protocol “segment”, consisting of the reagent step and three wash steps (BOND-III and BOND-MAX) or two wash steps (BOND-PRIME) following.

As you edit a protocol, changed or new steps that have all the required information have a green bar at the left-hand side. Steps that require additional information have a red bar.

During editing, you can view all protocol steps or hide the wash steps, using the **Show wash steps** option button below the table.



The ability to create and save a protocol does not indicate that it is suitable for the intended task. You must take the responsibility for testing and validating any protocol you create or edit.

This section includes the following topics:

- [7.4.1 Editing Protocol Steps](#)
- [7.4.2 Adding and Removing Protocol Steps](#)
- [7.4.3 Protocol Rules](#)
- [7.4.4 Multiple Processing Module Types and Protocol Versions](#)
- [7.4.5 Deleting Protocols](#)

### 7.4.1 Editing Protocol Steps

Follow the instructions below to configure a new protocol in the **New protocol properties** dialog, or edit an existing protocol in the **Edit protocol properties** dialog. See [7.4.3 Protocol Rules](#) to ensure you create a valid protocol.

Each time you save a protocol, a copy is stored in the system. When you create a protocol report (see [7.5 Protocol Reports](#)), you need to select the date on which protocol was active. To avoid having multiple, redundant, protocol versions, save protocols only when you have finished configuration.

- 1 For new protocols, type in a protocol name and abbreviated name.
- 2 Optionally type in a protocol description.

- 3 Set the staining method of staining protocols (see [7.1.1 Staining Modes](#)).
- 4 Set the **Preferred** status of the protocol (see [7.2.1.2 Preferred Status](#)).
- 5 For staining protocols, select a detection system for use with the protocol, from the **Preferred detection system** drop-down list.
- 6 Add or remove protocol steps (see [7.4.2 Adding and Removing Protocol Steps](#)) until you have the required number of steps for the protocol.
- 7 For BOND-MAX and BOND-III only, change editable parameters in new and existing protocol steps by first double-clicking the parameter you want to change:

- a For BOND-MAX and BOND-III, select a reagent from the drop-down list.

For BOND-PRIME, refer to the rules in [7.4.2.1 Reagent Segments](#).

**Note:** Select \*MARKER to indicate the step where the primary antibody is used in IHC protocols. Only \*BOND Wash Solution or \*Deionized Water can be used for wash steps.

- b Set incubation time in minutes and seconds (mm:ss). This is the minimum time the slide sits before the following step. See [step 10](#) in [7.4.3 Protocol Rules](#) for incubation time limits.

In general:

- for BOND-MAX and BOND-III reagent application steps, Leica Biosystems recommends incubation times no greater than 30 minutes. If longer durations are required, create duplicate steps to dispense the same reagent (see [7.4.2.2 Duplicated Reagent Steps](#)). This does not apply to BOND-PRIME protocols.
- for BOND-PRIME reagent application steps, Leica Biosystems recommends incubation times no greater than 20 minutes for heated pre-treatment steps. For minimum incubation times, see [7.4.3.1 BOND-PRIME specific protocol rules](#).

- c Set temperature (for some steps in prestaining protocols).

If you want to set a temperature that is not ambient, first uncheck the **Ambient** parameter. Then, select the empty **Temperature** parameter and enter the temperature in degrees Celsius as a whole number.

If you want to change a temperature to ambient, select and then check the **Ambient** parameter.

See [step 8](#) in [7.4.3 Protocol Rules](#) for allowable temperature ranges.

- d Click on any other step to confirm the changed parameters.

## 7.4.2 Adding and Removing Protocol Steps

You can add and remove steps in user IHC and ISH protocols, but not in prestaining protocols. Add or remove steps with buttons below the protocol step table. The buttons are context sensitive and their availability and functions vary depending upon the step selected.

Refer to the following sections for detailed instructions:

- [7.4.2.1 Reagent Segments](#)
- [7.4.2.2 Duplicated Reagent Steps](#)
- [7.4.2.3 Wash Steps](#)

### 7.4.2.1 Reagent Segments

To add a new reagent segment (a reagent step and three compulsory wash steps (BOND-III and BOND-MAX) or two compulsory wash steps (BOND-PRIME)):

- 1 Select a reagent and click **Insert segment**. The new segment is inserted above that reagent.



If you select the last reagent, you can choose to insert the new segment below the reagent.

New protocol properties

Name: IHC Protocol F - 1  
 Abbreviated name: IHC F1  
 Description: BOND Polymer DAB system for IHC  
 Staining method:  Single  Preliminary  Final  Preferred

BOND-MAX BOND-III BOND-PRIME Import protocol Protocol type: IHC staining

Preferred detection system: Bond Polymer Refine Detection

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Peroxide Block	Leica Microsystems	<input checked="" type="checkbox"/>		5.00
2	<input checked="" type="checkbox"/>	*Bond Wash Solution	Leica Microsystems	<input checked="" type="checkbox"/>		0.00
3	<input checked="" type="checkbox"/>	*Bond Wash Solution	Leica Microsystems	<input checked="" type="checkbox"/>		0.00
4	<input checked="" type="checkbox"/>	*Bond Wash Solution	Leica Microsystems	<input checked="" type="checkbox"/>		0.00
5		*MARKER	Leica Microsystems	<input checked="" type="checkbox"/>		15.00
6	<input checked="" type="checkbox"/>	*Bond Wash Solution	Leica Microsystems	<input checked="" type="checkbox"/>		0.00
7	<input checked="" type="checkbox"/>	*Bond Wash Solution	Leica Microsystems	<input checked="" type="checkbox"/>		0.00
8	<input checked="" type="checkbox"/>	*Bond Wash Solution	Leica Microsystems	<input checked="" type="checkbox"/>		0.00
n						0.00

Show wash steps Insert segment | Duplicate | Delete segment

Save Cancel

A new segment (with reagent and wash steps) appears in the list. The wash steps have green bars to indicate a change from the saved protocol. The reagent step has a red bar to indicate that you must select a reagent for the step.

New protocol properties

Name: IHC Protocol F - 1  
 Abbreviated name: IHC F1  
 Description: BOND Polymer DAB system for IHC  
 Staining method:  Single  Preliminary  Final  Preferred

BOND-MAX BOND-III BOND-PRIME [Import protocol](#) Protocol type: IHC staining

Preferred detection system: Bond Polymer Refine Detection

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Peroxide Block	Leica Microsystems	✓		5.00
2	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
3	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
4	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
5		*MARKER	Leica Microsystems	✓		10.00
6	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
7	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
8	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00

Show wash steps [Insert segment](#) | [Duplicate](#) | [Delete segment](#)

[Save](#) [Cancel](#)

- Click the empty **Reagent** parameter and select the required reagent from the drop-down list.

Edit other parameters of the new reagent and wash steps as required.

- Click **Save**.

A confirmation dialog is display.

Save protocol

**Caution:**  
 The protocol you are saving has not been validated by Leica Biosystems.

If you have multiple types of BOND processing modules it is your responsibility to ensure that each version of the protocol provides equivalent staining performance.

Do you want to continue?

[Yes](#) [No](#)

- Click **Yes**.

To remove a segment, select the reagent and click **Delete segment**. To delete a segment with a duplicated reagent, delete the duplication first.

For best staining results in BOND-PRIME:

- DO NOT delete a chromogen segment
- DO NOT rename a reagent segment
- DO NOT sequence the Peroxide Block after the Polymer.

## 7.4.2.2 Duplicated Reagent Steps

A duplicate step is one where two or more identical reagents follow each other without wash steps in between.

- 1 From the step list, select the reagent step to duplicate.

Click **Duplicate**.

Edit protocol properties

Name:

Abbreviated name:

Description:

Staining method:  Single  Preliminary  Final  Preferred

[Import protocol](#) Protocol type: IHC staining

Preferred detection system:

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Peroxide Block	Leica Microsystems	✓		5:00
2	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
3	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
4	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
5		*MARKER	Leica Microsystems	✓		15:00
6	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
7	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
8	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
9		*Bond Wash Solution	Leica Microsystems	✓		0:00

Show wash steps [Insert segment](#) [Duplicate](#) [Delete segment](#)

- 2 A new step with identical parameters to the current step is added above the current step.

The new step has a green bar to indicate a change from the saved protocol.

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Peroxide Block	Leica Microsystems	✓		5:00
2	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
3	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
4	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
5	✓	*MARKER	Leica Microsystems	✓		15:00
6		*MARKER	Leica Microsystems	✓		15:00
7	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00
8	✓	*Bond Wash Solution	Leica Microsystems	✓		0:00

- 3 If required, edit the incubation time for the new step.



If you change the reagent type of a duplicated step, all other reagent steps in the sequence also change – duplicate steps must use the same reagent.

- 4 Click **Save**.

A confirmation window is displayed.

**Save protocol**

**Caution:**  
The protocol you are saving has not been validated by Leica Biosystems.

If you have multiple types of BOND processing modules it is your responsibility to ensure that each version of the protocol provides equivalent staining performance.

Do you want to continue?

Yes No

- 5 Click **Yes**.

To delete a duplicated step, select it and click **Delete duplicate**.

## 7.4.2.3 Wash Steps



Adding wash steps can change fluidic properties on slides and lead to poor staining. Always validate new or edited protocols before diagnostic use.

It is recommended that a deionized water wash step is in place before and after a chromogen or Hematoxylin step.



If you cannot see wash steps, select the **Show wash steps** option button below the step list area.

To insert an additional wash step:

- 1 From the step list, select an existing wash step (ISH and IHC protocols).
- 2 Click **Insert wash**.

The screenshot shows the 'Edit protocol properties' window for 'IHC Protocol F - 2'. It includes fields for Name, Abbreviated name, and Description. The 'Staining method' is set to 'Single' and 'Preferred'. The 'Preferred detection system' is 'Bond Polymer Refine Detection'. Below is a table of wash steps:

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Peroxide Block	Leica Microsystems	✓		5.00
2	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
3	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
4	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
5		*MARKER	Leica Microsystems	✓		15.00
6		*MARKER	Leica Microsystems	✓		15.00
7	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
8	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00

At the bottom of the table area, there are buttons for 'Show wash steps', 'Insert wash', 'Duplicate', and 'Delete wash'. The 'Insert wash' button is highlighted with a red box in the screenshot.

For both ISH and IHC protocols, a new wash step is added at the end of the current wash sequence.

The new wash step has a green bar to indicate a change from the saved protocol.

Dialog box: Edit protocol properties

Name: IHC Protocol F - 2  
 Abbreviated name: IHC F2  
 Description: BOND Polymer DAB system for IHC  
 Staining method:  Single  Preliminary  Final  Preferred

BOND-MAX BOND-III BOND-PRIME Import protocol Protocol type: IHC staining

Preferred detection system: Bond Polymer Refine Detection

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Peroxide Block	Leica Microsystems	✓		5.00
2	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
3	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
4	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
5	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
6		*MARKER	Leica Microsystems	✓		15.00
7		*MARKER	Leica Microsystems	✓		15.00
8	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00

Show wash steps Insert wash | Duplicate | Delete wash

Save Cancel

3 Modify the wash step parameters in the step list as required.

4 Click **Save**.

5 On the confirmation window, click **Yes**.

To delete a wash step, select it and click **Delete wash**. For both ISH and IHC protocols, you can only remove wash steps that follow the compulsory steps in a wash sequence.

Dialog box: New protocol properties

Name: IHC Protocol F  
 Abbreviated name: IHC F  
 Description: BOND Polymer DAB system for IHC  
 Staining method:  Single  Preliminary  Final  Preferred

BOND-MAX BOND-III BOND-PRIME Import protocol Protocol type: IHC staining

Preferred detection system: Bond Polymer Refine Detection

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Peroxide Block	Leica Microsystems	✓		5.00
2	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
3	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
4	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
5	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
6		*MARKER	Leica Microsystems	✓		15.00
7	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00
8	✓	*Bond Wash Solution	Leica Microsystems	✓		0.00

Show wash steps Insert wash | Duplicate | Delete wash

Save Cancel

## 7.4.3 Protocol Rules

Any protocol you create or edit must conform to some basic rules before it can be saved. Please note that these rules do not guarantee that the protocol will produce acceptable results when used.

- 1 The protocol name must:
  - a be unique;
  - b begin with a character other than a space or asterisk.
- 2 The protocol abbreviated name must:
  - a be unique;
  - b begin with a character other than a space or asterisk;
  - c have maximum 8 characters.
- 3 All IHC protocols must include at least one marker step.
- 4 All staining protocols must include at least one reagent from a Leica Biosystems detection system.
- 5 Reagent steps must be followed by either:
  - the same reagent, OR
  - at least three wash steps (for BOND-III and BOND-MAX)
  - at least two wash steps (for BOND-PRIME).
- 6 For staining protocols, the last three steps must be wash steps.
- 7 For IHC staining protocols, all step temperatures must be ambient and therefore cannot be changed.
- 8 For prestaining protocols, heated step temperatures must be within the ranges in the following table:

Protocol Step	Temperature Range (°C)	
	BOND-III and BOND-MAX	BOND-PRIME
Bake and Dewax, Bake step only	35–72	35–80
Heat pretreatment	35–100	28–105
Enzyme pretreatment	35–100	28–105
Denaturation	70–100	Not editable
Hybridization	37–65	28–105

- 9 For HIER protocols on BOND-PRIME, heated step temperatures may need to be adjusted from the default 104°C for installations at higher altitudes. Refer to [Setting HIER for altitude \(on page 183\)](#).

- 10 Step incubation times, which must be set in minutes and seconds (mm:ss), should be within the ranges in the following table. The ranges are not enforced:

Protocol Step	Incubation Range (minutes)
Bake and Dewax, bake step	0–60
Heat pretreatment (ambient steps)	0–15
Heat pretreatment (BOND-III and BOND-MAX heated steps)	5–60
Heat pretreatment (BOND-PRIME heated steps)	2–20
Enzyme pretreatment (step 1)	0
Enzyme pretreatment (enzyme steps)	0–15
Denaturation	5–20
Hybridization	20–950
Staining protocols, reagent steps	0–60
Staining protocols, wash steps	0–55

In general, for reagent application steps on BOND-III or BOND-MAX, avoid incubation times greater than 30 minutes. If longer durations are required, create duplicate steps to dispense the same reagent (see [7.4.2.2 Duplicated Reagent Steps](#)).

- 11 Each step must be fully defined with a reagent, incubation time and (where applicable) temperature.
- 12 Single-stain and sequential multiplex-stain protocols can have only one mixed reagent (e.g. mixed DAB) per protocol, used in a maximum of two steps in the protocol. A sequential multiplex-stain procedure can have up to four mixed reagents – one in each protocol – and up to eight application steps – two in each protocol.
- Parallel multiplex-stain protocols can include four mixed reagents, and each mixed reagent can be applied up to two times in the protocol.
- 13 All components required to make up the staining protocol's mixed reagent(s) must be sourced from the protocol's preferred detection system.

## 7.4.3.1 BOND-PRIME specific protocol rules

### Heat retrieval

A step within a user edited BOND-PRIME HIER protocol cannot exceed an incubation time of 20 minutes. To create a longer protocol, either use an existing HIER protocol e.g. \*HIER 40 min with ER2, or modify a longer protocol to shorten it to the desired incubation time. For example, to create a 25 minute ER2 HIER protocol:

- 1 Copy \*HIER 30 min with ER2.

New protocol properties

Name:

Abbreviated name:

Description:

Preferred

BOND-III BOND-PRIME [Import protocol](#) Protocol type: Heat pretreatment

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Bond ER Solution 2	Leica Microsystems	<input checked="" type="checkbox"/>		0:00
2		*Bond ER Solution 2	Leica Microsystems		104	20:00
3		*Bond ER Solution 2	Leica Microsystems		104	10:00

Show wash steps

- 2 Modify the second heated step from 10 minutes to 5 minutes, then click **Save**.

New protocol properties

Name:

Abbreviated name:

Description:

Preferred

BOND-III BOND-PRIME [Import protocol](#) Protocol type: Heat pretreatment

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
1		*Bond ER Solution 2	Leica Microsystems	<input checked="" type="checkbox"/>		0:00
2		*Bond ER Solution 2	Leica Microsystems		104	20:00
3		*Bond ER Solution 2	Leica Microsystems		104	5:00

Show wash steps

## Setting HIER for altitude

Due to the properties of reagents used in IHC, allowances may be required for the environmental conditions found at each site. In particular, the boiling point of Epitope Retrieval solutions varies with air pressure as experienced at different altitudes. This means that sites at or above 250 meters Above Sea Level (mASL) (820 feet Above Sea Level (ftASL)) may experience a lower Epitope Retrieval solution boiling point which could lead to an area of suboptimal chromogenic staining.

Each site at the altitude ranges listed below should therefore consider their altitude when setting Epitope Retrieval (ER) temperatures as part of optimization and validation.

The table below provides suggested temperature settings for different altitude ranges for Heat Induced Epitope Retrieval (HIER) protocols. If your laboratory consistently achieves high quality stains using alternate temperature settings to those proposed in [Table 7-1](#), there is no need to adopt the suggested temperatures.



BOND-PRIME is not suitable for altitudes above 2250 mASL (7381 ftASL).

**Table 7-1: Recommended BOND-PRIME HIER protocol temperature by altitude range**

Altitude range (mASL)	Altitude range (ftASL)	Temperature in software (°C)
0 – 249	0 – 819	104 (default)
250 – 449	820 – 1475	102
450 – 799	1476 – 2624	101
800 – 1149	2625 – 3772	100
1150 – 1499	3773 – 4920	99
1500 – 1849	4921 – 6069	98
1850 – 2250	6070 – 7381	96

Contact your Leica Biosystems representative for a step-by-step guide on modifying the HIER temperature for BOND-PRIME. You can also refer to [7.4 Editing User Protocols](#) for guidance on how to edit protocols.



Note that these are suggested temperatures only and each laboratory is responsible for validating assays in their environment as staining can be impacted by many factors. If you experience staining issues, contact your Leica Biosystems representative before making the changes to the predefined protocols.

## Staining

Each reagent step has a minimum incubation time in which the protocol would be accepted on the processing module. The table below illustrates the minimum incubation time for an acceptable protocol on the BOND-PRIME.

**Table 7-2: Minimum incubation time accepted on BOND-PRIME for \*IHC F, J, K, and Q, and \*ISH A and B**

*IHC Protocol F		*IHC Protocol J	
Step	Minimum Incubation Time (mins)	Step	Minimum Incubation Time (mins)
Marker	9:00	Marker	9:00
Post Primary	5:00	Post Primary AP	11:00
Peroxide Block	N/A	Polymer AP	16:00
Polymer	5:00	Mixed RED-PRIME	2:00
Mixed DAB-PRIME	2:00	Mixed RED-PRIME	2:00
Mixed DAB-PRIME	2:00	BOND-PRIME Hematoxylin	N/A
BOND-PRIME Hematoxylin	3:00		

*IHC Protocol Q		*ISH Protocol A	
Step	Minimum Incubation Time (mins)	Step	Minimum Incubation Time (mins)
Primary	9:00	Peroxide Block	N/A
Peroxide Block	N/A	Anti-Fluorescein Ab	9:00
Post Primary	5:00	Post Primary	5:00
Polymer	5:00	Polymer	5:00
Mixed DAB-PRIME	2:00	Mixed DAB-PRIME	2:00
Mixed DAB-PRIME	2:00	Mixed DAB-PRIME	2:00
BOND-PRIME Hematoxylin	3:00	BOND-PRIME Hematoxylin	3:00

*IHC Protocol K		*ISH Protocol B	
Step	Minimum Incubation Time (mins)	Step	Minimum Incubation Time (mins)
Marker	9:00	Stringency Wash Solution	N/A
Peroxide Block	N/A	Anti-Biotin Ab	9:00
Polymer mHRP	5:00	Anti-Biotin Ab	9:00
Polymer rAP	11:00	Post Primary	5:00
Mixed DAB-PRIME	2:00	Peroxide Block	N/A
Mixed DAB-PRIME	2:00	Polymer	5:00
Mixed Red-PRIME	2:00	Mixed DAB-PRIME	2:00
Mixed Red-PRIME	2:00	Mixed DAB-PRIME	2:00
BOND-PRIME Hematoxylin	N/A	BOND-PRIME Hematoxylin	3:00

If you set a BOND-PRIME protocol step for a time shorter than the time stated above, the BOND controller will allow you to save the protocol. However, when the slide is loaded into the Preload Drawer on the processing module, the following error message will be displayed:

“Unable to process slide. Invalid protocol definition. Remove the slide from the Preload Drawer then check the protocol. If the problem persists, contact Customer Support (29012)”.

Remove the slide from the Preload Drawer and check the protocol. If the name of the protocol has not changed, then there is no need to reprint the label.

## DAB Enhancer

In order to optimize ARC Covertile life when using BOND DAB Enhancer (AR9432) on BOND-PRIME, the following protocol settings are recommended:

- 1 Insert the \*Bond DAB Enhancer step after the \*Mixed DAB – PRIME step.
- 2 Set the \*Bond DAB Enhancer incubation time to 1 minute.
- 3 Ensure there are 4 \*Deionized Water steps between the \*Mixed DAB - PRIME step and the \*Bond DAB Enhancer step, and 2 \*Deionized Water steps after the \*Bond DAB Enhancer step.

Refer to [Figure 7-3](#).

- 4 The steps that follow should be as per the pre-defined protocols.

**Figure 7-3:** Example protocol that includes BOND DAB Enhancer

**New protocol properties**

Name:

Abbreviated name:

Description:

Staining method:  Single  Preliminary  Final  Preferred

BOND-III **BOND-PRIME** [Import protocol](#) Protocol type: IHC staining

Preferred detection system:

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)
15		*Mixed DAB - PRIME	Leica Microsystems	✓		5:00
16	✓	*Deionized Water		✓		0:00
17	✓	*Deionized Water		✓		0:00
18	✓	*Deionized Water		✓		0:00
19	✓	*Deionized Water		✓		0:00
20		*Bond DAB Enhancer	Leica Microsystems	✓		1:00
21	✓	*Deionized Water		✓		0:00
22	✓	*Deionized Water		✓		0:00
23		*BOND-PRIME Hematoxylin	Leica Microsystems	✓		4:00

Show wash steps [Insert segment](#) | [Duplicate](#) | [Delete duplicate](#)

With these DAB Enhancer protocol settings in place, the full ARC Covertile life (8 months/7500 slides) can be expected.

Using DAB Enhancer protocols that do not follow the above recommendations may reduce ARC Covertile life. ARC Covertiles should be replaced earlier if damage or staining degradation is observed. If there is a query around the performance or use of the ARC Covertiles contact your local Leica Biosystems representative.



DAB Enhancer products other than BOND DAB Enhancer (AR9432) are not recommended to be used on BOND-PRIME as their impact on instrument performance and reliability has not been assessed.

## 7.4.4 Multiple Processing Module Types and Protocol Versions

For BOND systems with BOND-III, BOND-MAX and BOND-PRIME Processing Modules, each protocol can have separate versions for the three processing module types.

Leica Biosystems protocols have been tested and optimized for use on the BOND systems. These protocols have been rigorously tested and validated by Leica Biosystems.

The different versions of the “same” protocol accommodate hardware differences such as the:

- faster cooling on BOND-III Processing Modules (protocol steps where slides are cooled are typically shorter in BOND-III protocol versions than the corresponding steps in the BOND-MAX versions)
- new core technology of the Active Reagent Control (ARC) Modules on the BOND-PRIME.

Some protocol version differences cannot be seen in the step list displayed in the software, e.g. BOND-III protocol versions include hidden instructions for the bulk fluid robots, not present on BOND-MAX Processing Modules.

All BOND systems have BOND-III, BOND-MAX and BOND-PRIME versions of all predefined protocols.

However, if a new processing module type is added to a system, you must create a new version of an existing user-defined protocols for the new processing module type. Do this by importing Leica Biosystems predefined protocols and then copy or modify steps as required (see [7.4.4.1 Importing a Protocol Version](#)).



For BOND-PRIME, if your laboratory requires further modification of the predefined Leica Biosystems protocols (e.g.\*IHC F or \*IHC J) , you **must**:

- Import/copy the predefined protocol into the laboratory’s current protocol. Refer to [7.4.4.1 Importing a Protocol Version](#).
- Follow the minimum incubation times listed in [Table 7-2 Minimum incubation time accepted on BOND-PRIME for \\*IHC F, J, K, and Q, and \\*ISH A and B](#).
- Follow the BOND-PRIME staining sequence as it has been optimized for use on the BOND-PRIME. Refer to [7.1.2 Protocol Sequences](#).

## 7.4.4.1 Importing a Protocol Version

To create a protocol version for a new processing module type, follow the instructions below. This method can also be used to overwrite existing protocol versions, however this should not usually be required after initial configuration.

Protocols can only be transferred to the same processing module types, for example, a BOND-III to a BOND-III and BOND-PRIME to BOND-PRIME.


- 1 On the **Protocol setup** screen select the user protocol you want to create a new version for.
- 2 Click **Open**.  
The **Edit protocol properties** dialog opens.
- 3 Click **Import protocol**.

The **Import protocol** dialog opens.

- 4 In the **Processing modules** drop-down list, select the new processing module type.

The list of protocols displayed in the dialog is updated to show only protocols with versions for the selected processing module type.

- 5 Optionally select or deselect **Preferred**, to show only preferred, or all, protocols.

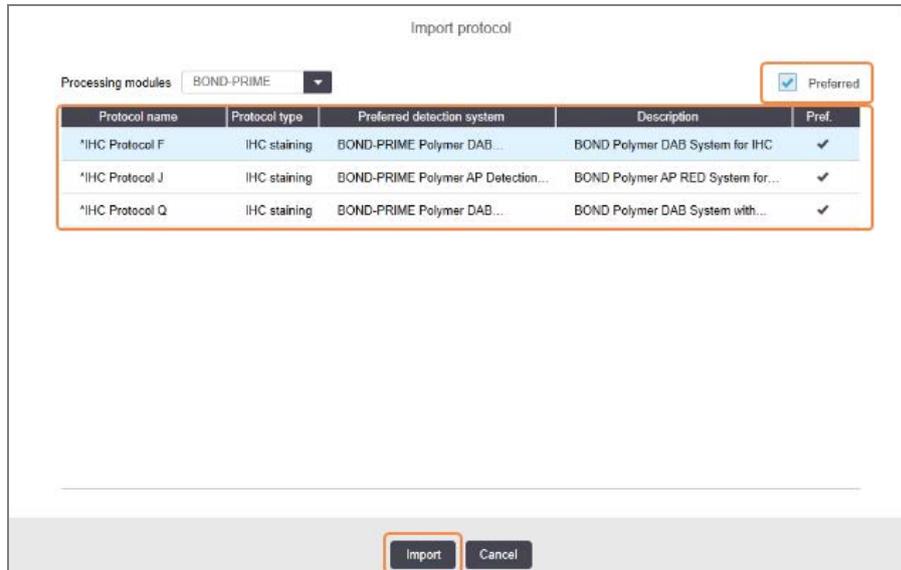

- 6 Select a protocol to import from the list.



Protocol best practices:

- If the protocol is for BOND Polymer DAB System for IHC, select \*IHC F.
- If the protocol is for BOND Polymer AP Red System for IHC, select \*IHC J.
- Select the default protocol for the detection kit required

To make later configuration easier, select a protocol as similar as possible to the protocol you are creating a new version for. For example, select a protocol that uses the same detection system and, if possible, has the same number of steps.

7 Click **Import**.

The **Import protocol** dialog closes. The tab in the **Edit protocol properties** dialog for the new processing module type is now populated with the imported protocol version.

**Edit protocol properties**

Name: Lab protocol  
 Abbreviated name: Import  
 Description: BOND Polymer DAB System for IHC  
 Staining method:  Single  Preliminary  Final  Preferred

BOND-MAX BOND-III **BOND-PRIME** Import protocol Protocol type: IHC staining

Preferred detection system: BOND-PRIME Polymer DAB Detection System

Step N°	Wash	Reagent	Supplier	Ambient	Temperature	Inc. (min)	Dispense type
1		*MARKER	Leica Microsystems	✓		15:00	Chamber Dispense
4		*Post Primary	Leica Microsystems	✓		8:00	Chamber Dispense
7		*Peroxide Block	Leica Microsystems	✓		3:00	Chamber Dispense
10		*Polymer	Leica Microsystems	✓		8:00	Chamber Dispense
14		*Mixed DAB - PRIME	Leica Microsystems	✓		5:00	Chamber Dispense
15		*Mixed DAB - PRIME	Leica Microsystems	✓		5:00	Chamber Dispense
18		*BOND-PRIME Hematoxylin	Leica Microsystems	✓		4:00	Chamber Dispense

Show wash steps Insert segment | Duplicate | Delete segment

Save Cancel



Only the tab for the selected processing module type is updated.

- 8 Edit the new protocol version as required (see [7.4.1 Editing Protocol Steps](#)). You can click between the processing module tabs without losing data.
- 9 Click **Save**.



It is the user's responsibility to verify that the protocols provide equivalent staining for both processing module types.

## 7.4.5 Deleting Protocols

To delete a user protocol, select it from the list in the **Protocol setup** screen and click **Delete**.

Predefined Leica Biosystems protocols (starting with an asterisk) cannot be deleted. You can however hide them – open the protocols and deselect **Preferred**, then set the **Preferred status** filter in the **Protocol setup** screen to "Preferred".

## 7.5 Protocol Reports

Protocol reports display step details for selected protocols. To generate a report, select a protocol from the list in the **Protocol setup** screen then click **Report**. If you have multiple processing module types in the system, select the processing module type for the protocol version you want. You can also choose a date from which to generate the report. When finished, click **Generate report**.

The report is displayed in a new window. The top right of the report shows the information in the following table:

Field	Description
Full name	The full name of the protocol.
ID	The unique identification number of the protocol.
Type	The protocol type (see <a href="#">7.1 Protocol Types</a> ).
Created by	The username of the person who created the displayed version.
Creation time	For predefined protocols, the date and time the protocol was imported in a BOND Data Definitions (BDD) update. For user-defined protocols, the date and time of creation.
Facility	The name of the facility as entered in the administration client <b>Laboratory Settings</b> screen (see <a href="#">10.5.1 Laboratory Settings</a> ).
Staining status	The roles the protocol is suited for with respect to multiplex or single staining (see <a href="#">7.2.1.1 Staining Method</a> ).

The body of the report displays the following for each step:

- Reagent and supplier
- Step type (reagent or wash)
- Incubation time
- Temperature
- Dispense type (describes Covertile position and dispense volume – may be requested by your service representative)

See [3.7 Reports](#) for further details about the report window and printing options.

## 7.6 Predefined Protocols

The following sections describe the predefined protocols that are supplied as part of the BOND software.



The protocols listed may change if updated before the next software release. The list below is current at the time of publication. Also note that some protocols may not yet be available for use on the BOND-PRIME Processing Module.

- [7.6.1 Staining Protocols](#)
- [7.6.2 Prestaining Protocols](#)

### 7.6.1 Staining Protocols

Each staining protocol is designed to use a particular BOND detection system.

For detailed information on each detection system please refer to the literature accompanying each product or visit the Leica Biosystems web site: [www.leicabiosystems.com](http://www.leicabiosystems.com).

You may use these protocols as the basic building blocks for your own tailored protocols by using the protocol editing functions (see [7.3 Creating New Protocols](#) and [7.4 Editing User Protocols](#)).



Some of the protocols listed below are for use with detection systems that may not have regulatory approval in your region. These protocols will not appear in your software.

#### 7.6.1.1 IHC

Name	Preferred Detection System	Detection System Notes
*IHC Protocol F	Bond Polymer Refine Detection	A high amplification, biotin-free detection system optimized for use on the BOND system. Gives sharp definition of target antigens with high intensity staining.
*IHC Protocol H	Bond™ Oracle™ HER2 IHC System  NOTE: Availability subject to regulatory approval.	A complete HER2 detection system comprised of HER2 primary antibody and HER2 negative control, partnered with a highly sensitive Compact Polymer based detection system.  The system includes HER2 profile-specific control slides enabling a fully automated, consistent, HER2 immunohistochemical profile through to counterstain.
*IHC Protocol J	BOND Polymer Refine Red Detection	For in vitro use, a highly sensitivity Compact Polymer system that provides bright red immunostaining through alkaline phosphatase, as well as hematoxylin counterstain (including bluing).
*IHC Protocol K	ChromoPlex™ 1 Dual Detection (100 test)	For in vitro use, for the detection of tissue-bound mouse and rabbit IgG primary antibodies.

Name	Preferred Detection System	Detection System Notes
		It is intended for staining sections of formalin-fixed, paraffin-embedded tissue on the BOND system.
*IHC Protocol K - 50 Test	ChromoPlex™ 1 Dual Detection (50 test)	For in vitro use, for the detection of tissue-bound mouse and rabbit IgG primary antibodies.  It is intended for staining sections of formalin-fixed, paraffin-embedded tissue on the BOND system.
*IHC Protocol Q	Bond Polymer Refine Detection	A high amplification, biotin-free detection system optimized for use on the BOND system. Gives sharp definition of target antigens with high intensity staining protocol specific for peroxide sensitive antigens.

### 7.6.1.2 ISH

Name	Preferred Detection System	Detection System Notes
*FISH Protocol A	Leica HER2 FISH System – 30 Test  <b>NOTE:</b> Availability subject to regulatory approval.	A complete dual probe LSI HER2/CEP17 FISH system comprised of RTU LSI HER2/CEP17 dual probe and post hybridization wash solution 2. Detects amplification of the HER2 gene via FISH in FFPE human breast cancer tissue specimens. For in vitro diagnostic use.  <b>NOTE:</b> LSI and CEP are trademarks of Abbott Molecular Inc. All rights reserved. Used under license.
*ISH Protocol A	BOND Polymer Refine Detection	A high amplification, biotin-free detection system optimized for use on the BOND system. Detects RNA by use of an anti-FITC linker.
*ISH Protocol B	BOND Polymer Refine Detection	A high amplification, biotin-free detection system optimized for use on the BOND system. Detects DNA by use of an anti-biotin linker.

## 7.6.2 Prestaining Protocols

Protocol Type	Protocol Name	Notes
Preparation	*Dewax	Preparation protocols use the BOND or BOND-PRIME Dewax Solution to remove paraffin wax, which is used to embed the tissue and rehydrates the sample.
	*Bake and Dewax	Prior to dewaxing, the tissue is baked to improve its adhesion to the slide.  For additional details see <a href="#">14.2.3 Dewaxing and Baking</a>

Protocol Type	Protocol Name	Notes
Heat Pretreatment	*HIER with ER1 or ER2	Heat induced epitope retrieval exposes the sectioned tissue to a heated buffer solution, which helps to change the conformation of the tissue structure and improve staining. There are a number of predefined heat pretreatment protocols available, which differ in length and temperatures used.
Enzyme Pretreatment	*Enzyme 1 *Enzyme 2 *Enzyme 3 *Enzyme 5	There are eight enzyme pretreatment protocols available. These protocols vary in the enzyme used and the incubation times.
ISH Denaturation	*Denaturation (10 min)	There is one (10 minute) predefined ISH denaturation protocol.
ISH Hybridization	*ISH Hybridization (2Hr) *ISH Hybridization (12Hr)	There are two predefined ISH hybridization protocols (2 hour and 12 hour).

# 8

## Reagent Management (on BOND Controller)

The BOND system keeps a record of all non-bulk reagents used on the system, tracking each reagent container and its contents. It also allows you to set up panels of slides with specified markers, to speed up case creation.

This chapter has the following sections:

- [8.1 Reagent Management Overview](#)
- [8.2 Reagent Setup Screen](#)
- [8.3 Reagent Inventory Screen](#)
- [8.4 Reagent Panels Screen](#)

## 8.1 Reagent Management Overview

Reagent management in the BOND system includes set up and maintenance of individual reagent details, inventory management for all reagent packages (excluding bulk reagents), and creation of sets of markers, known as “panels”, for use in slide creation.

To open the reagent management screens where these operations are carried out, click the **Reagent setup** icon on the function bar.



Click on the tabs at the top left of the screen to open the required screen (**Setup**, **Inventory** or **Panels**).

Figure 8-1: Reagent setup screen

Name	Abb. name	Type	Supplier	Pref.
*CD10 (56C6)	*CD10	Primary antibody	Leica Microsystems	✓
*CD15 (Carb-1)	*CD15	Primary antibody	Leica Microsystems	✓
*CD20 (MJ1)	*CD20	Primary antibody	Leica Microsystems	✓
*CD25 (4C9)	*CD25	Primary antibody	Leica Microsystems	✓
*CD30 (1G12)	*CD30	Primary antibody	Leica Microsystems	✓
*CD5 (4C7)	*CD5	Primary antibody	Leica Microsystems	✓
*CD56 (CD564)	*CD56	Primary antibody	Leica Microsystems	✓
*CD7 (LP15) *NEW*	*CD7.	Primary antibody	Leica Microsystems	✓
*Cytokeratin 20 (Ks20.8)	*CK20.	Primary antibody	Leica Microsystems	✓
*Cytokeratin 20 (PW31)	*CK20	Primary antibody	Leica Microsystems	✓
*Cytokeratin 7 (RN7)	*CK7	Primary antibody	Leica Microsystems	✓
*Estrogen Receptor (6F11)	*ER	Primary antibody	Leica Microsystems	✓
*Glial Fibrillary Acidic Protein (GA5)	*GFAP	Primary antibody	Leica Microsystems	✓
*Immunoglobulin A (N1CLA)	*IgA	Primary antibody	Leica Microsystems	✓
*Immunoglobulin D (DRN1C)	*IgD	Primary antibody	Leica Microsystems	✓
*Immunoglobulin G (Polyclonal)	*IgG	Primary antibody	Leica Microsystems	✓
*Melan A (A103)	*MelA	Primary antibody	Leica Microsystems	✓
*Negative	*Neg	Primary antibody	Laboratory Specified	✓

The **Reagent setup** screen can display a complete list of all reagents known to the BOND system. The list does not include any prepackaged reagent systems, e.g. BOND detection systems, but does show the constituent reagents in the systems. It also has mixed reagents, which are mixed on the processing module from components in detection systems. The screen is used to view reagent properties, create new reagents in the system, and set reagent options.

In contrast, the **Reagent inventory** screen shows inventory of reagent systems as well as individually packaged reagents. For any reagent or system type the list shows the total stock, with information about individual packages also available.

The **Reagent panels** screen allows creation of sets of markers typically used together for particular diagnoses. During slide creation in the BOND software, selection of a panel creates a slide for each marker in the panel, greatly speeding up this process.

## 8.1.1 General Information

- [8.1.1.1 Reagent Categories](#)
- [8.1.1.2 Reagent Workflow](#)
- [8.1.1.3 Reagent Identification](#)
- [8.1.1.4 Reagent Substitution](#)
- [8.1.1.5 BOND™ Oracle™ HER2 IHC System](#)

### 8.1.1.1 Reagent Categories



BOND reagent systems are for use only on BOND-III and BOND-MAX Processing Modules. BOND-PRIME reagent systems are for use only on BOND-PRIME Processing Modules.

Apart from bulk fluids, four different sorts of fluidics “package types” can be used on the BOND system:

- BOND detection systems: prepackaged trays of detection reagents for use in conjunction with markers selected by users during slide setup
- Bond™ Oracle™ HER2 IHC System: a prepackaged tray of marker, ancillary and detection reagents. The system includes control slides.
- BOND cleaning systems for BOND-III and BOND-MAX Processing Modules: prepackaged trays of cleaning solutions for use in processing module cleaning (see [12.6.1 Cleaning the Aspirating Probe](#)). For details of how to use BOND-PRIME cleaning systems, refer to the separate BOND-PRIME user manual.
- Reagent containers: individual reagent containers containing markers (primaries or probes) or ancillary reagents – in ready-to-use or open containers (see [2.6.5 Reagent Systems and Containers](#))

BOND detection systems, including the Bond™ Oracle™ HER2 IHC System, and cleaning systems are collectively referred to as “reagent systems”.

“Marker” refers to the primary antibody in IHC, or the probe in ISH.

Reagents are subdivided into the following “reagent types”:

- Primary: marker reagent used in IHC
- Probe: marker reagent used in ISH
- Ancillary: all non-marker reagents, used to process tissue before or after staining with a marker
- Mixed: ancillary reagents created during the running of a protocol from components in a reagent system, or from components in individual containers. There can never be stock of mixed reagents, but they must exist in the system for inclusion in protocol steps.

Reagent and reagent system lists on the **Reagent Setup** and **Reagent Inventory** screens can be filtered according to these classifications.

## 8.1.1.2 Reagent Workflow

Before the BOND system can use any reagent it must recognize it, in a three-step process:

- 1 The reagent type must be included in the reagents list on the **Reagent Setup** screen – all Leica Biosystems ready-to-use reagents and many Leica Biosystems ancillary reagents (including those in BOND detection and cleaning systems) are predefined, but other reagents must be added to the list by users.
- 2 On receipt of new stock, individual reagent containers and reagent systems are scanned into the BOND system, or “registered”, to add them to the inventory.
- 3 When ready to use a reagent or system, it is loaded onto the reagent tray where the BOND system identifies it and updates the inventory as reagent is used.

The BOND software keeps a record of the contents of each individual container and system, as well as the totals for each reagent type. For Leica Biosystems reagents you can set a reorder limit to warn you when stocks are low. See [8.3.2.1 Changing the Minimum Stock Setting](#).

## 8.1.1.3 Reagent Identification

Individual reagent containers have two barcodes for identification. The longer barcodes on the fronts of the containers are used to register the containers and identify them after registration (see [8.3.3 Registering Reagents and Reagent Systems](#)). Shorter barcodes on the tops of the containers (under the lids) encode the unique pack identifiers (UPI) used by the BOND system to identify the containers when they are loaded on processing modules. Use the UPI to manually identify a loaded reagent container that was not successfully scanned (see [5.1.3.5 Fixing Undetected Reagents](#)).


BOND reagent systems for use on BOND-III and BOND-MAX Processing Modules are identified with two barcodes on the sides of the trays. Use both barcodes to register the systems and identify them after registration.

BOND-PRIME reagent systems have a single 2D barcode on the side of the tray, and this is used to identify the reagent system after registration.

Individual containers within reagent systems have UPI barcodes on the tops and fronts. The BOND software uses these to identify the systems when they are loaded on processing modules. If automatic identification fails when the reagent system is loaded onto the BOND-MAX or BOND-III, these UPI numbers can be entered to manually identify the containers. This cannot be done on a BOND-PRIME Processing Module.

You can display information about any reagent or reagent system that has been registered, at any time, by rescanning the long barcode on the side of individual containers, or the two barcodes (or single 2D barcode) on the sides of reagent systems.

If the package will not scan, open the **Manual ID entry** dialog by clicking either the **Search** icon on the function bar or the **Enter ID** button on the **Reagent Inventory** screen.

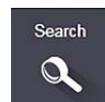

Type in the numbers associated with the long barcode(s) on the front of the individual containers / reagent systems, or the numbers associated with the 2D barcode, then click **Validate** (for reagent systems click **Validate** after entering each barcode).

## 8.1.1.4 Reagent Substitution

### BOND-PRIME

There is no reagent substitution on BOND-PRIME.

If BOND-PRIME detects that it has insufficient reagent, it will either:

- flag the affected slide(s), if it has already started processing the slide on an ARC Module
- reject the slide, if the slide is still in the Preload Drawer.

### BOND-III and BOND-MAX

Sufficient volume of all required reagents must be loaded onto the processing module before processing can start. Occasionally, however, a reagent that was initially present may not be available when needed. This may be because the operator has removed a reagent tray or a reagent container may have actually held less reagent than initially determined. If this occurs, the BOND system will attempt to substitute the missing reagent with reagent of the same type from a different container. The BOND system uses the following rules when substituting an unavailable reagent:

- The system initially tries to substitute the missing reagent with one of the same type from the same reagent system.  
If successful the run will continue without notification.
- The system then tries to substitute the missing reagent with an alternative source having the same type and the same Lot number.  
If successful the run will continue without notification.
- The system then tries to substitute the missing reagent with an alternative source having the same reagent type but with any Lot number.  
If successful, the run will continue but affected slides will have an event notification.
- If reagent substitution is not possible, the reagent will be replaced by a bulk reagent for all dispenses to affected slides until the end of the run.  
The run will continue but affected slides will have an event notification.
- If all slides are affected and need to be replaced by a bulk reagent, the run will be abandoned.

### 8.1.1.5 BOND™ Oracle™ HER2 IHC System



These are not available for use on BOND-PRIME Processing Modules.

The BOND™ Oracle™ HER2 IHC System consists of reagent systems and may include control slides. Standard bulk reagents and, for some systems, ancillary reagents, are also required.

Always follow the instructions that come with the product and note the following:

- Control slides supplied with the Bond™ Oracle™ HER2 IHC System are called Oracle control slides and are different to in-house control slides used with Oracle runs:
  - In-house control slides are created in the software using the standard **Tissue type** and **Marker** settings in the **Add slide** dialog, but *not* the **Oracle control** option.
  - Oracle control slides must be set up using the **Oracle control** option, in addition to the appropriate **Tissue type** option.
- Oracle control slides can only be used with the specific system they come from.
- Oracle slide labels use special Oracle label templates defined on the administration client **Labels** screen (see [10.3 Labels](#)).

## 8.2 Reagent Setup Screen

The **Reagent setup** screen displays a list of all reagents known to the BOND software, including those in reagent systems, and reagents mixed on the processing module from reagent system components. All BOND ready-to-use primaries are predefined in the list (and cannot be removed) as are BOND ready-to-use ISH probes and a number of common Leica Biosystems ancillary reagents.

Filters below the table allow you to set the type of reagent to display. You cannot filter for package types, but you can for reagent types (primaries, probes, ancillaries, mixed reagents, Oracle reagents, and parallel multiplex-stain primaries and probes), and on supplier and preferred status.

Buttons above the table allow you to: add new reagents to the list; open the reagent that is selected in the table, to view or edit its details; or delete the reagent that is selected in the table (you can only delete non-Leica Biosystems reagents).



You cannot register reagents that are not listed here, or user-defined reagents that do not have preferred status.

The table contains the following details for each reagent:

Name	The full name of the reagent. An initial "*" character indicates a predefined Leica Biosystems reagent.
Abb. name	The short name of the reagent, used on slide labels and the Status screen.
Type	The type of reagent, for example primary.
Supplier	The name of the supplier of the reagent.
Pref.	Ticked (preferred) markers are included in slide configuration lists elsewhere in the BOND software.

## Editable Reagent Properties

Besides name and supplier details the editable options for reagents are:

- 1 For markers:
  - a the protocols selected by default when the marker is chosen during slide creation (see [6.5.2 Creating a Slide](#)). Different protocols can be set for single marker applications and the preliminary and final applications in multiplex staining;
  - b preferred status – only preferred markers appear in the **Marker** drop-down list during slide creation (see [6.5.2 Creating a Slide](#)), and the **Available markers** list in the **Reagent panels properties** dialog during panel creation (see [8.4.1 Creating a Panel](#)). Reagent screen lists can also be filtered on this property;
  - c hazardous status – markers flagged as hazardous are washed out to the hazardous waste. This setting cannot be changed for predefined reagents.
- 2 For ancillary reagents
  - a the bulk reagents that are compatible with the reagent – the BOND system automatically prevents incompatible ancillary and bulk reagents coming into contact;
  - b preferred status – reagent screen lists can be filtered on this property;
  - c hazardous status – reagents flagged as hazardous are washed out to the hazardous waste. This setting cannot be changed for predefined reagents.

See sections:

- [8.2.1 Adding or Editing a Reagent](#)
- [8.2.2 Deleting a Reagent](#)

## 8.2.1 Adding or Editing a Reagent

To add reagents to the list, click **Add** in the **Reagent setup** screen. The BOND software displays the **Add reagent** dialog. See [Figure 8-2](#) below.

**Figure 8-2:** Add reagent dialog

To change the details of an existing reagent, select it and click **Open**, or double-click it. The **Edit reagent properties** dialog opens. This is the same as the **Add reagent** dialog with the details for the selected reagent entered.

Use the following directions to add or edit reagents:

- 1 If adding a new reagent, enter a descriptive name in the **Name** field.

New reagents cannot start with "\*", which is reserved for Leica Biosystems reagents.



Be careful not to use a name that may cause this reagent to be confused with another when creating protocols or slides.

- 2 For new reagents, enter a short name in the **Abbreviated Name** field. Abbreviated names are limited to eight characters.

This name appears on slide icons in the **Status** screen and is printed on slide labels.

- 3 If the BOND system is connected to an LIS, enter the name of the reagent used in the LIS, in the **Public name** field (not applicable to ancillary reagents).

- 4 If creating a new reagent, select the type of reagent from the **Type** drop-down list. The dialog changes, depending on the type you select.
- 5 Enter the name of the supplier of the reagent in the **Supplier** field.
- 6 If the reagent is a marker (primary antibody or RNA or DNA probe), select default protocols to use in different types of staining run that use the marker.
- 7 In the **Staining method** field, select **Single/Sequential multiplex** to set default protocols for markers in single stain runs, on the **Single** tab. For markers in sequential multiplex stain runs, set default protocols for all applications except the last on the **Preliminary** tab, and set the default protocol for the last application on the **Final** tab.
- 8 Select **Parallel multiplex** to set default protocols for the markers in parallel multiplex stain runs.



If the reagent is an RNA or DNA probe, additional protocols (denaturation and hybridization) appear on all the above tabs.

- 9 For predefined BOND markers, click **Restore factory default protocols** if you want to return the protocols to their factory defaults, recommended for the marker (you need to be logged on with a supervisor user role to restore factory defaults).
- 10 If the reagent is a user-created ancillary, check bulk solution compatibility and adjust if necessary.

Most systems will by default show BOND Wash Solution (\*BWash) and deionized water (\*DI) in the **Compatible bulks** list. This means that either of these solutions will be used in the fluidics system to draw and aspirate the reagent. While the bulk solutions should not come into direct contact with the ancillary reagent, there may be some slight contact in the aspirating probe. To avoid this possibility entirely, select the bulk solution you do not want to come in contact with the reagent and click << to move it to the **Available bulks** list.

There must be at least one bulk solution set as compatible.



**CAUTION:** Unsatisfactory staining results and potential damage to the processing module can occur if incompatible solutions are allowed to come in contact with each other. Contact Leica Biosystems to determine whether the solutions are compatible.

- 11 For markers, click **Preferred** to display the primary or probe in slide setup dialogs.  
For ancillary reagents, Preferred status is only used by the list filters on the **Reagent Setup** and **Inventory** screens.
- 12 If you want the reagent to be flushed to the hazardous waste container, click **Hazardous**.
- 13 Click **Save** to add the reagent details to the BOND system.

Click **Cancel** at any time during the process to exit without making any changes.

## 8.2.2 Deleting a Reagent

To delete a reagent, select it from the list in the **Reagent Setup** screen and click **Delete**. Predefined Leica Biosystems reagents (starting with an asterisk) cannot be deleted.



When you delete the details of a reagent, you also remove the inventory details for packages of this reagent. You cannot recover deleted reagent details or inventory details.

If you no longer need a reagent that you have previously used, you may be better to mark it as not preferred rather than delete it. This removes it from most screens in the software, but retains it in the system.

## 8.3 Reagent Inventory Screen

The **Reagent Inventory** screen lists all reagents and reagent systems that have ever been registered (and not deleted) on the BOND system and their current stock holding. Use the screen to view and manage inventory.

Figure 8-3: Reagent Inventory screen

Name	Supplier	Type	Catalog N*	Vol. (mL)	Min. (mL)
*Kappa Probe	Leica Microsystems	Probe RNA	PB0645	27.50	11.00
*CD15 (Carb-1)	Leica Microsystems	Primary antibody	PA0039	44.85	7.00
GFAP (ER2, Enzyme1)	AAA Antibodies	Primary antibody	Open container	0.00	0.00
*Anti-Fluorescein Antibody	Leica Microsystems	Ancillary	AR0222	30.00	15.00
*CD30 (1G12)	Leica Microsystems	Primary antibody	PA0153	0.00	1.00
*Melan A (A103)	Leica Microsystems	Primary antibody	PA0233	7.00	0.00
*CD7 (LP15) *NEW*	Leica Microsystems	Primary antibody	PA0017	0.00	14.00
*Lambda Probe	Leica Microsystems	Probe RNA	PB0669	16.50	5.50
*Estrogen Receptor (6F11)	Leica Microsystems	Primary antibody	PA0151	14.00	7.00
*CD5 (4C7)	Leica Microsystems	Primary antibody	PA0168	6.55	0.00
*Cytokeratin 20 (PW31)	Leica Microsystems	Primary antibody	PA0918	0.00	7.00
*Estrogen Receptor (6F11)	Leica Microsystems	Primary antibody	PA0009	0.00	10.00
*Immunoglobulin D...	Leica Microsystems	Primary antibody	PA0061	7.00	2.00
*Glial Fibrillary Acidic...	Leica Microsystems	Primary antibody	PA0026	0.00	5.00
*CD25 (4C9)	Leica Microsystems	Primary antibody	PA0305	47.50	14.00
*CD10 (56C6)	Leica Microsystems	Primary antibody	PA0131	0.00	0.00
*Immunoglobulin G...	Leica Microsystems	Primary antibody	PA0904	7.00	3.00
*CD20 (MJ1)	Leica Microsystems	Primary antibody	PA0906	47.65	14.00

Package type: Reagent containers | Reagent type: All | Inventory status: All | Supplier: All | Preferred status: Preferred

Leica Biosystems reagents with less than the minimum stock volume are highlighted with a red vertical bar on the left side of the screen.

Filters below the table allow you to set the type of reagent or system to display.

For BOND detection, Oracle and cleaning systems – selected in the **Package type** filter – you can filter just on **Inventory status**. This allows you to view all registered systems, just those in stock, or those below reorder levels.

For individual reagent containers you can also filter by **Supplier**, **Preferred status** and **Reagent type** (i.e. view “Primaries”, “Probes”, “Parallel cocktail primaries”, “Parallel cocktail probes”, “Ancillaries”, or “All” reagents).

Some or all of the following details may be displayed, depending on the reagent type:

Name	The full name of the reagent.
Supplier	The name of the supplier of the reagent. Not shown for reagent systems.
Type	The type of reagent, for example primary. Not shown for reagent systems.
Catalog No.	The reagent catalog number to quote when reordering. This is not shown for reagent systems (the column is present but all values are blank).
Vol. (mL)	The total amount of the reagent available. This includes all registered reagent packages, whether currently loaded on a processing module or not (see <a href="#">8.3.1 Determining Reagent Volume</a> ).
Runs rem.	For Oracle systems, the number of runs remaining in the system.
Cleans remaining	The number of cleans remaining in cleaning systems.
Min. (mL)	For Leica Biosystems reagents only, the stock volume at which you are prompted to reorder (refer to <a href="#">8.3.2.1 Changing the Minimum Stock Setting</a> ).
Min. (runs)	For Oracle systems, the number of runs remaining at which you are prompted to reorder (refer to <a href="#">8.3.2.1 Changing the Minimum Stock Setting</a> ).
Min. (cleans)	For cleaning systems, the number of cleans remaining at which you are prompted to reorder (refer to <a href="#">8.3.2.1 Changing the Minimum Stock Setting</a> ).

The control buttons above the reagent table allow you to manage the reagent inventory.

- Click **Details** to see information about individual reagent packages of the selected reagent type and set options for these.  
See [8.3.2 Reagent or Reagent System Details](#) for more information.
- Click **Enter ID** to add inventory of reagent to the system in the **Manual ID entry** dialog when the ID cannot be automatically recognized by the handheld scanner (BOND-III and BOND-MAX only).  
Refer to [8.3.3 Registering Reagents and Reagent Systems](#) for more information.
- Click **Details report** to generate a report of the reagents or reagent systems currently listed in the table.  
See [8.3.4 Inventory Details Report](#).
- Click **Reagent usage** to generate a report of reagent usage within a specified time period.  
See [8.3.5 Reagent Usage Report](#)

See also [8.3.1 Determining Reagent Volume](#) for a general description of how BOND tracks reagent inventory.

## 8.3.1 Determining Reagent Volume

The BOND system uses two methods to establish the volume of reagent in containers in the reagent tray: it calculates the volume based on the initial volume and subsequent usage, and it measures it directly using a liquid level sensor (LLS) for BOND-III and BOND-MAX, or an Ultrasonic Liquid Level Sensor (uLLS) for BOND-PRIME.

The volume calculation relies on the initial reagent volume, subtracting reagent as it is dispensed and adding for refills (open containers). Discrepancies can occur if reagent is lost through evaporation or spillage.

For BOND-MAX and BOND-III, the LLS system is integrated into the aspirating probe. It determines reagent volumes by detecting the height of the reagent when the aspirating probe dips into containers. Under default settings, LLS volume measurement (often referred to as a "dip test") is automatically carried out under a range of conditions such as, for example, when a container has not been measured for more than 30 days. Reagent may have evaporated or the container used on another system. These default dip tests are scheduled when they will not delay processing, so it is possible that a reagent initially thought to be available may later be shown to have insufficient volume for scheduled runs. When this occurs an alert activates and the operator must either refill the container (open containers only) or ensure a suitable alternative reagent is available (refer to [8.1.1.4 Reagent Substitution](#)).

For BOND-PRIME, the uLLS is integrated into the ARC Probe. If a discrepancy occurs, the uLLS will perform a dip test in the same way as is done on BOND-MAX and BOND-III.

Optionally, you can set the BOND system to dip test containers before every processing run. This is set independently for open containers, ready-to-use containers and reagent systems. The setting ensures that runs that are started have enough reagent to finish, however it delays processing while dip tests are carried out. Set these options in the administration client **Settings > Laboratory settings** pane (see [10.5.1 Laboratory Settings](#)).



Do not overfill reagent containers. An overfull reagent container will be reported as empty when it is dip tested

### 8.3.1.1 Reporting Volume for Detection Systems

To make the volumes reported for BOND detection systems comparable to those reported for individual containers (allowing estimation of the number of slides that a detection system can be used for) system volumes are reported in milliliters, in terms of a single container. However, since detection systems consist of containers with different volumes, a rule for reporting the volume must be applied, described in this section.



Note that this rule does not apply to Oracle or cleaning systems, which report the number of runs or cleans remaining, respectively.


For detection systems, volume is reported relative to the largest single container in the system. For example, if the largest container holds 30 mL, the system volume is reported relative to 30 mL. The BOND software assumes that all containers in new systems are full, so a system with its largest container of 30 mL is reported as having 30 mL volume when first registered.

As reagent is used, the value reported is the volume of the container with the lowest relative volume. If this container's volume is not the same as that of the largest container in the system, then the value is normalized to the volume of the largest container. For example, in a system with several containers of 30 mL and two containers of 2.4 mL, it may be that one of the 2.4 mL containers has, relative to initial volumes, the least volume of reagent. If it has 1.2 mL left (half of its initial volume), then the volume of the system as a whole is reported as half of 30 mL (15 mL).

## 8.3.2 Reagent or Reagent System Details

To display details of individual packages of a reagent or reagent system, double-click on the reagent type in the Reagent inventory table, or select it and click **Details**.

Figure 8-4: Reagent inventory details dialog

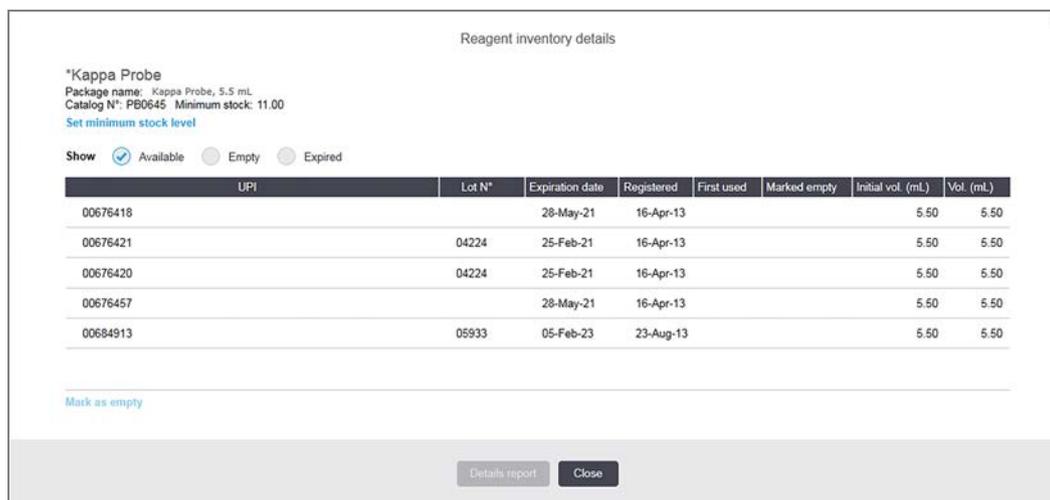

An inventory details dialog displays each individual package of the selected reagent or system. Dialog fields and options differ according to the reagent package type and supplier. By default only packages with available, non-expired, reagent are shown. You can also show empty packages (that have not reached their expiration date), or all packages that expired in the last month – select **Available**, **Empty** or **Expired** as appropriate in the dialog.

The reagent **Package name** is shown for all reagent package types. In addition, BOND reagents show the **Catalog N°** for reordering purposes, and BOND reagents (but not systems) also have **Package name**, which includes the package size.

BOND reagents and systems also have a **Minimum stock** field showing the stock level at which you are prompted to reorder the reagent (see [8.3.2.1 Changing the Minimum Stock Setting](#)).

Using the handheld scanner, you can scan the side barcode(s) or 2D barcode of a registered reagent container or reagent system to launch its inventory details dialog. The scanned inventory item will be highlighted in the details table, and the **Show** filters (Available, Empty or Expired) will be automatically set as appropriate.

The table in the dialog shows the following information for each reagent package:

UPI	The Unique Pack Identifier (see <a href="#">8.1.1.3 Reagent Identification</a> ).
Lot No.	The package lot number.
Expiration date	The package expiration date. Packages should not be used after this date.
Registered	The date the package was first registered on the BOND system.
First used	The date the package was first used on the BOND system.
Marked empty	The date the package was marked as empty. This may be set automatically by the software, or manually (see <a href="#">8.3.2.3 Marking a Package as Empty or Not Empty</a> ).
Initial vol. (mL)	The volume of reagent that was in the new, full package. Not shown for reagent systems.
Vol. (mL)	The current reagent volume in the container. For detection systems see <a href="#">8.3.1.1 Reporting Volume for Detection Systems</a> .
Refill (mL)	For open containers, the remaining volume of reagent that can be used to refill the container.
Cleans remaining	For cleaning systems, the number of cleans that can be performed with the remaining reagent.
Runs remaining	For Oracle systems, the number of runs that can be performed with the remaining reagent.

Buttons on the inventory details dialogs allow configuration of a range of inventory details (appropriate for the package type) and creation of a details report for the specific reagent or system. The sections below describe the configuration and report options.

### 8.3.2.1 Changing the Minimum Stock Setting

Predefined Leica Biosystems reagents and reagent systems can have a “minimum stock level” set. When total reagent stock falls below the set level the reagent is highlighted red in the **Reagent Inventory** screen to prompt the user to reorder the reagent or system.

To change the minimum stock setting, click **Set minimum stock level**. In the pop-up dialog, enter the required minimum stock level in the **Minimum stock** field. Use milliliters, runs or cleans, depending on the package type. Click **OK**.

### 8.3.2.2 Reagent Report

Click **Details report** to generate a report for just the selected reagent or reagent system. See [8.3.4 Inventory Details Report](#) for more details.

### 8.3.2.3 Marking a Package as Empty or Not Empty

You can mark a reagent package as empty, for example when it is discarded before being completely used. To do this, select the package in the table, then click **Mark as empty**. The software puts the current date in the **Marked empty** field.

To reinstate a reagent package marked empty, select it in the table and click **Mark not empty**. This can be done only when the package is not loaded on a processing module. The package shows the volume of reagent that it had prior to being marked empty.

Select the **Empty** radio button above the table to show items that are marked as empty.

### 8.3.2.4 Refilling an Open Reagent Container

You can reuse BOND open reagent containers to dispense up to 40 mL of a particular reagent. There is no limit on the number of times containers can be refilled if you fill with quantities less than the container volumes.

Use the following instructions to refill an open container.

- 1 Fill the container with the desired volume of reagent.
- 2 Scan the container (as described in [8.3.3 Registering Reagents and Reagent Systems](#)) then click **Refill**.  
The refill button will not be available if putting more reagent into the container will exceed the 40 mL limit.
- 3 Set an expiration date for the new reagent.



Note that when an open container is filled (either for the first time or a refill), the software assumes that the container is filled to the maximum available for that container, that is the volume (mL) specified by the user when the reagent is first registered, or the current volume plus the remainder of the allowable refill volume. The reported volume is corrected, if necessary, when a dip test is carried out. This may not occur until the container is used.



Each open container is locked to a particular reagent when it is first registered. Each open container must use the same reagent each time it is refilled.

### 8.3.3 Registering Reagents and Reagent Systems

Registering a reagent package adds it to the inventory. The reagent must be listed in the **Reagent Setup** screen before you can register a package of it.



You must register reagent packages before using them on BOND Processing Modules.

If you load an unregistered reagent container in the processing module, the software will not recognize it, and will display an information icon  in that reagent position on the **System status** screen.



For information about the status of reagent containers loaded on the BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual.



The BOND software will track reagent usage and will alert you when the reagent must be replaced.

Do not attempt to refill a ready-to-use BOND reagent container as the BOND software will recognize that this is a used container and refuse to use it.

If BOND does not recognize a new reagent package that you scan to register, then you might not have the latest BOND Data Definitions (BDD) file installed; check the web for the latest BDD file, then download and install it (via the Administration client **BDD update** screen) if its "Data version" is later than that shown in the **About BOND** dialog. After the latest BDD file has been installed, restart the clinical client and retry registering the new reagent container or reagent system.

The methods for registering different types of reagent packages are described in the following sections:

- [8.3.3.1 Registering Reagent Systems](#)
- [8.3.3.2 Registering BOND Ready-To-Use Reagents](#)
- [8.3.3.3 Registering Non-Ready-To-Use Reagents](#)
- [8.3.3.4 Manual ID Entry](#)

### 8.3.3.1 Registering Reagent Systems

To register a BOND detection or cleaning system, scan the two barcodes on the side of the reagent tray.




Some reagent systems have only one barcode on the reagent tray, for example systems with only one or two containers.

BOND-PRIME reagent systems have a single 2D barcode on the side of the tray.

The software will display the **Add reagent system** dialog.

**Figure 8-5:** Registering a BOND detection system

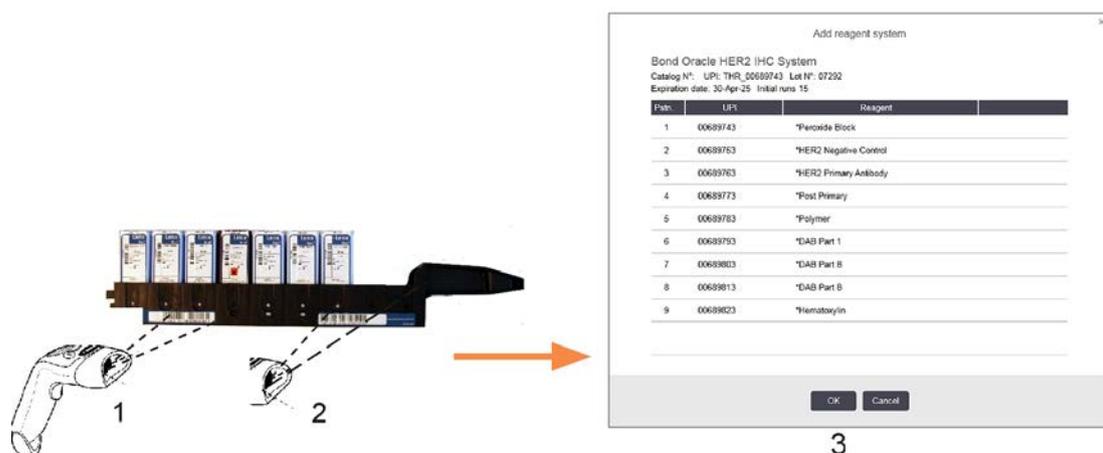

Check that the details in the dialog correspond to the details of the package, then click **OK**.



Do not attempt to register individual reagent containers that are part of a reagent system.

### 8.3.3.2 Registering BOND Ready-To-Use Reagents

To register a BOND ready-to-use reagent package, scan the barcode on the front of the container. The software will display the **Add reagent package** dialog.

**Figure 8-6:** Registering BOND reagent packages



Check that the details in the dialog correspond to the details of the package, then click **Add**.

### 8.3.3.3 Registering Non-Ready-To-Use Reagents

Reagents not supplied in BOND ready-to-use packages can be used on the BOND system, in BOND open or titration containers. After a non-ready-to-use reagent has been prepared and filled into a 7 mL or 30 mL open container, or 6 mL titration container, it is registered in much the same way as BOND reagents:

- 1 Ensure that the reagent has been created in the system and is preferred. The user-defined reagent must be preferred to register inventory. (see [8.2.1 Adding or Editing a Reagent](#)).
- Note that enzymes created with the BOND Enzyme Pretreatment Kit are predefined in the system, and do not require manual creation.
- 2 Scan the barcode on the front of the open or titration container to open the **Add open container** dialog.
  - 3 Select the name of the reagent from the **Reagent name** drop-down list. (The supplier name is shown in brackets beside the reagent name.)
- The list has all preferred non-BOND ancillaries and markers created in the system, as well as the four predefined enzymes that can be prepared from the BOND Enzyme Pretreatment Kit. If you have not created the reagent in the system cancel out of the **Add open container** dialog and do this first (see step 1 above).
- 4 Type in the lot number for the reagent, from the reagent supplier's documentation.

- 5 Click in the **Expiration date** field to set the expiration date with the calendar controls (or, you can type in a date).



You can enter partial dates such as D/M, DD/MM or DD/MMM; the current year is assumed. If you enter, for example, MM/YYYY or MMM/YYYY, the first day of that month is assumed.

If you enter an invalid date, a red border appears around the **Expiration date** field and a validation error message displays.

When you click away from the **Expiration date** field, a valid date entry is automatically reformatted to match the system date format. If at least one valid date was entered prior to entering an invalid date, the field will be reset to the last entered valid date when you click away from it.

- 6 Click **OK** to register the reagent.

### 8.3.3.4 Manual ID Entry

If the BOND system fails to read a reagent barcode, do the following from the **Reagent Inventory** screen:

- 1 Click **Enter ID**.

The BOND software displays the **Manual ID entry** dialog.

- 2 Type numbers associated with the long barcodes on the front of the container, or the numbers associated with the 2D barcode, into the top row in the dialog.

- 3 Click **Validate**.

If there is more than one barcode, as for detection systems, click **Validate** after entering the corresponding numbers for each barcode.

- 4 After verifying that the barcodes are legitimate, the software displays the appropriate **Add reagent package** dialog.

- 5 Verify package details or add details as required in the **Add reagent package** dialog, then click **OK** to register the package.

## 8.3.4 Inventory Details Report

You can generate a report of the inventory details of the reagents or reagent systems displayed in the table on the **Reagent Inventory** screen. The generated report shows information for each of the visible reagents or systems, including the total stock remaining. If the total stock is less than the minimum stock level (see [8.3.2.1 Changing the Minimum Stock Setting](#)) then it is flagged with “Low” in the report.

Set the filters at the bottom of the screen to show the reagents or reagent systems you are interested in, then click **Details report**. The report is generated and displayed in a new window.

The top right of the reagent inventory report shows the information in the following table:

Field	Description
Facility	The name of the facility as entered in the <b>Facility</b> field on the administration client <b>Settings &gt; Laboratory settings</b> screen – see <a href="#">10.5.1 Laboratory Settings</a>
Subject	The filter settings used to select the reagents or reagent systems in the report.

For each reagent listed in the table the body of the report displays:

- name
- total stock on-hand (flagged if less than the minimum stock level)
- catalog number (for BOND ready-to-use containers) or “open” (for open containers)
- type (primary, probe, ancillary, or reagent system type)
- supplier

For each individual reagent package the report displays:

- UPI
- lot number
- date of expiration
- date when registered
- date when first used
- date when last used
- quantity remaining

See [3.7 Reports](#) for further details about the report window and printing options.

## 8.3.5 Reagent Usage Report

The reagent usage report shows the quantity of reagent used and how many tests were processed with this reagent within a defined period. The information is itemized for individual containers as well as showing reagent totals.

The report covers all reagents used in the defined period, irrespective of the reagents currently displayed in the **Reagent Inventory** screen. Reagent system usage is not included.



BOND-PRIME bulk reagent usage is tracked and shown in the report.

Click **Reagent usage** to open a date selection dialog where you must set the period that you want the report to cover. Set **From** and **To** dates and times (see [Using the Date & Time Selectors \(on page 219\)](#)), and then click **Generate**. The report is generated and displayed in a new window.

The top right of the reagent usage report shows the information in the following table:

Field	Description
Facility	The name of the facility as entered in the <b>Facility</b> field on the administration client <b>Settings &gt; Laboratory settings</b> screen – see <a href="#">10.5.1 Laboratory Settings</a>
Time period	The “from” and “to” dates for the period that the report covers

For each reagent used in the period the report displays:

- Name (the reagent’s abbreviated name);
- UPI of each container used;
- Lot number of each container used;
- Expiration date of each container used;
- Number of slides processed, both per container and the total for the reagent;
- Volume of reagent used in the period, both per container and the total for the reagent.

See [3.7 Reports](#) for further details about the report window and printing options.

## 8.4 Reagent Panels Screen

A panel is a user-defined set of markers. You can use panels to quickly add a number of slides onto the system.

Panels can only be used for routine single-stain slides and parallel multiplex slides; they cannot be used to set up sequential-stain slides. You must have a supervisor user role to create panels.

To display the **Reagent Panels** screen, click the **Reagent setup** icon on the function bar, then click the **Panels** tab.

For more information see:

- [8.4.1 Creating a Panel](#)
- [8.4.2 Viewing or Editing Panel Details](#)
- [8.4.3 Removing a Panel](#)


### 8.4.1 Creating a Panel

To create a panel, do the following (you must have a supervisor user role):

- 1 Click **Add panel**.

The software will display the **Reagent panel properties** dialog.

Figure 8-7: The Reagent panel properties dialog

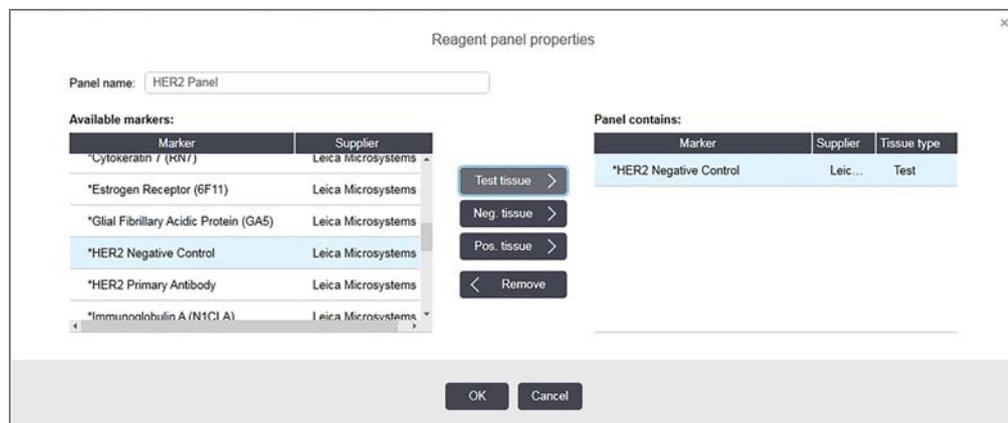

The table on the right of the **Reagent panel properties** dialog lists the contents of the panel, and the table on the left lists all of the available markers.


- 2 Enter a name for the panel in the **Panel name** field at the top of the dialog.

You cannot save a panel without a name.

- 3 To add a marker to the panel, select an item on the list of available antibodies or probes in the table at the left, then click **Test tissue >**.

To add a positive tissue control, click on the marker then click **Pos. tissue >**.

To add a negative tissue control, click on the marker then click **Neg. tissue >**.

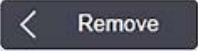- 4 To remove an item from the panel, select it in the table on the right and click .



Panels must have Test tissue. You cannot save a panel that does not have Test tissue.

- 5 When the panel is correct, click **OK** to save the details.

If you do not want to save the panel, click **Cancel**.

## 8.4.2 Viewing or Editing Panel Details

To view the details of a panel, select it in the table on the left of the **Reagent Panels** screen. The markers in the panel are displayed in the table on the right of the screen. To edit the panel, click **Panel properties** and edit as described in [8.4.1 Creating a Panel](#).

## 8.4.3 Removing a Panel

To remove a panel from the system, select it in the table on the **Reagent Panels** screen, then click **Remove panel**. You will be asked to confirm the removal.



Remove panels with care. You cannot recover details of deleted panels.

# 9

## Slide History (on BOND Controller)

The **Slide history** screen displays details of slides that are scheduled, currently running, or have been run, on the BOND system.

Runs that were scheduled but stopped before processing started (by unlocking the tray), have their individual slide records removed from the history list and replaced with a single row for the entire tray, showing status “Rejected”. Run events and run details reports can be generated for these runs.

This chapter has the following sections:

- [9.1 Slide History Screen](#)
- [9.2 Slide Selection](#)
- [9.3 Slide Properties and Slide Rerun](#)
- [9.4 Run Events Report](#)
- [9.5 Run Details Report](#)
- [9.6 Case Report](#)
- [9.7 Protocol Report](#)
- [9.8 Slides Summary](#)
- [9.9 Export Data](#)
- [9.10 Brief Slide History](#)

## 9.1 Slide History Screen

To see slide history details or to generate run events, run details, or case reports, select the **Slide history** icon on the function bar.



Figure 9-1: Slide history screen

**Slide history**

Slide filters: Date range: From: 01-Jan-13 9:46 AM To: 05-Apr-17 9:46 AM Last seven days Apply

Process date	Run ID	Slide ID	Marker	Patient name	Case ID	Type	Status
27-Aug-13	84	00000288	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000289	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000241	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000291	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000292	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000290	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000293	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000294	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000295	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
27-Aug-13	84	00000296	*Neg	Chirs P. Bacon	CS205 - 255790	Test	In progress
26-Aug-13	90	00000399	*CD5	Cherry Dale	CS3225 - 527991	Test	In progress
26-Aug-13	90	00000398	*Tyros	Jacob Dean	CS3225 - 527990	Test	In progress
26-Aug-13	90	00000396	*CD20	Jacob Dean	CS3225 - 527990	Test	In progress
26-Aug-13	90	00000395	*CD5	Jacob Dean	CS3225 - 527990	Test	In progress
26-Aug-13	90	00000394	*Tyros	Amanda Francis	CS3224 - 527909	Test	In progress
26-Aug-13	90	00000391	*CD5	Amanda Francis	CS3224 - 527909	Test	In progress
26-Aug-13	90	00000400	*CD20	Cherry Dale	CS3225 - 527991	Test	In progress
26-Aug-13	90	00000397	*MeIA	Jacob Dean	CS3225 - 527990	Test	In progress
26-Aug-13	90	00000393	*MeIA	Amanda Francis	CS3224 - 527909	Test	In progress

Run ID numbers may not increment sequentially

Slides summary Export data Brief slide history Slide properties Run events Run details Case report Protocol report

The slide history list displays the slides run in the period defined in the **Date range** filter above the list, or a specific slide found from the **Slide ID** filter (see [9.2 Slide Selection](#)).

Note that run ID numbers displayed on the screen may not increment sequentially. For the BOND-III and BOND-MAX Processing Modules, run ID numbers are allocated when slide trays are locked, so if a tray is locked, unlocked, and then locked again (before the run starts) the run ID number increments, and the number allocated after the first locking is skipped.

On the BOND-PRIME Processing Module, a run ID number is allocated to each slide.

Slide color-coding follows that used on the **Slide setup** screen (see [6.5.1 Description of Slide Fields and Controls](#)):

- White: slides created in the **Add slide** dialog
- Yellow: slides created in the **Slide identification** dialog (see [6.8 Impromptu Slide and Case Creation](#))
- Light gray: LIS slides
- Red: priority LIS slides (see [11.2.5 Priority Slides](#))

Each slide has the following values reported in the list:

- Process date (the date slide processing started)
- Run ID
- Slide ID
- Marker (name of the primary antibody or probe)
- Patient name
- Case ID
- Type (test tissue, or positive or negative control tissue)
- Status (in progress or done, and whether any unexpected events were noted; also possibly “Rejected” for runs that were stopped before processing began)



If the status is **Done (notification)**, inspect the Run Events Report to determine whether the unexpected events may have affected the staining. Unexpected events are displayed in bold text.

To view information about a slide, select it in the list, then click one of the buttons below the list.

## 9.2 Slide Selection

Filter the slides to list in the **Slide history** screen by showing all slides processed within a defined period, or display a specific slide by entering its slide ID. Click the drop-down menu and then choose the slide filter you want to use.

### Date range slide filter

Figure 9-2: Date range slide filter

The screenshot shows the 'Slide history' interface. At the top, there is a 'Slide filters' section with a dropdown menu set to 'Date range'. Below this, there are 'From' and 'To' date and time pickers. The 'From' field is set to '01-Jan-13 9:46 AM' and the 'To' field is set to '05-Apr-17 9:46 AM'. There are also 'Last seven days' and 'Apply' buttons. Below the filters is a table header with the following columns: Process date, Run ID, Slide ID, Marker, Patient name, Case ID, Type, and Status.

Use the **Date range** slide filter to specify the screen’s reporting period; only slides processed within the period are displayed. Set “From” and “To” dates and, if required, times, to define the time period to show. Then click **Apply** to display the slides.

If more than 1000 slides were processed in the period you define, only the first 1000 are displayed. To view details of the complete set you must export the slide data – see [9.9 Export Data](#).

The **To** field is initially set to the current date and time, and the **From** field to exactly one week prior. If you change settings you can return to this configuration by clicking **Last seven days**.

## Using the Date & Time Selectors

To set day, month and year, click the calendar icon and select a date. Scroll through months by clicking the arrows in the calendar title bar. Or click in the center of the title bar to select another month or scroll through years. Alternatively you can type the date directly in the field.

To set the time, click in the time field and use the up and down buttons (or keyboard up and down arrow keys). Depending where the cursor is placed the time changes by one hour, ten minutes or one minute. Alternatively you can type the time directly in the field.

## Slide ID slide filter

Use the **Slide ID** slide filter to locate information about a specific slide. Type the slide ID in the **Slide ID** field and click **Apply**.

## 9.3 Slide Properties and Slide Rerun

To view the properties of a slide in the **Slide history** list, select the slide then click **Slide properties** (or double-click). This is the same dialog opened from the **Slide setup** screen ([6.5.4 Editing a Slide](#)).

You cannot edit any of the patient or test details in the **Slide properties** dialog when it is opened from the **Slide history** screen (since the slide has been, or is being, processed) but you can add comments in the **Comments** field or rerun slides – see [9.3.1 Rerunning Slides](#).

### 9.3.1 Rerunning Slides

If the slide does not conform to requirements, then it may be flagged to be rerun. Use the following procedure to initiate a slide rerun from the **Slide properties** dialog:

- 1 Click **Copy slide**.  
The **Slide properties** dialog changes to the **Add slide** dialog, with editable fields.
- 2 Make any required changes and then click **Add slide**.
- 3 Confirm the case, patient and doctor for the copied slide to add the slide to the **Slide setup** screen.  
The **Add slide** dialog remains open to allow you to add more slides if you want.
- 4 Click **Close** to return to **Slide history** screen.
- 5 Run the newly created slides in the normal manner.

## 9.4 Run Events Report

Generated from the **Slide history** screen, this report shows all events for all the slides on the tray that the selected slide was run with. Click **Run events** to generate the report.

For the BOND-PRIME Processing Module, the report shows events for individual slides.

For BOND-III or BOND-MAX, Run Events Reports can also be generated while slides are being processed. Right-click on the appropriate run or list in the **System status** or **Protocol status** screens and select **Run events** from the menu. Events that initiated a slide notification are displayed in bold type so they can be easily found.

The top right of the Run Events Report shows the information in the following table:

Field	Description
PM serial No.	The serial number of the processing module used for the run
Processing module	The name of the processing module used for the run
Slide tray	The number of the slide staining assembly (on the BOND-III or BOND-MAX) used for the run
ARC Module	The number of the BOND-PRIME ARC Module used for the run (BOND-PRIME only)
Dispense volume	The volume of reagent dispensed (see <a href="#">6.5.8 Dispense Volumes and Tissue Position on Slides</a> )
Start time	The date and time that the run was started
Run progress	Whether the run is Finished or still Processing
Staining mode	The staining mode used, for example Single routine

Images of the slide labels for all the slides in the run are displayed at the top of the report. The body of the report displays the time, event number, and event description of the events for the run. The event number is used by Leica Biosystems for error tracking if the need arises.

See [3.7 Reports](#) for further details about the report window and printing options.

## 9.5 Run Details Report

Generated from the **Slide history** screen, this report shows the details of each slide on the same tray as the currently selected slide. The tray must have finished processing and be unlocked. Click **Run details** to generate the report. The top right of the report shows the information in the following table:

Field	Description
PM serial No.	The serial number of the processing module used for the run
PM name	The name of the processing module used for the run
Slide tray	The number of the slide staining assembly (on the BOND-III or BOND-MAX) used for the run

Field	Description
Staining location	The number of the BOND-PRIME ARC Module used for the run (BOND-PRIME)
Start time	The date and time that the run was started
Run started by	The username of the person that started the run
Slide loaded by	The username of the person that loaded the slide (BOND-PRIME)
Slide unloaded by	The username of the person that unloaded the slide (BOND-PRIME)

For each slide in the run the body of the report shows an image of the slide label and the following information:

Field	Description
Slide ID	The BOND system assigns a unique identifier to each slide
Slide created by	Username of the person who created the slide, or "LIS" where relevant
Case No.	A unique case identifier generated by the BOND software
Tissue type	Test tissue, positive control tissue, or negative control tissue
Dispense volume	The volume of reagent dispensed (see <a href="#">6.5.8 Dispense Volumes and Tissue Position on Slides</a> )
Patient name	Identification of the patient
Case ID	Case identification entered during slide setup
Staining protocol	The staining protocol used
Preparation	The preparation protocol used (if any)
HIER protocol	HIER protocol used (if any)
Enzyme protocol	Enzyme retrieval protocol used (if any)
Denaturation	For ISH only, denaturation protocol used (if any)
Hybridization	For ISH only, hybridization protocol used (if any)
LIS reference [2 to 7]	Additional LIS reference information for systems with LIS-ip installed (see <a href="#">11.2.6 LIS Slide Data Fields</a> )
Stain	The staining mode used, for example Single routine
Completion status	Indicates whether the slide is being processed, completed, or has been scored. Also whether any notification events were reported.
Comments	Comments can be entered into a slide's properties at any time
Sign off:	Sign off is a reserved space on the printed paper report where a supervisor can sign off each slide

Field	Description
<b>Reagents Used (or preferred kit containing ingredients of a mixed reagent)</b>	
UPI	Unique Pack Identifier of every reagent or the preferred kit used for this slide
Name	Name of every reagent or preferred kit used for this slide
Public name	Public name, for systems with LIS-ip installed
Lot No.	Lot number of every reagent or preferred kit used for this slide Bulk reagent lot numbers are included for BOND-PRIME
Expiration Date	Expiration date of every reagent or preferred kit used for this slide

See [3.7 Reports](#) for further details about the report window and printing options.

## 9.6 Case Report

This report shows the details of each slide in the same case as the currently selected slide. The report can be generated from the **Slide setup** screen, the **Slide history** screen, and the **Slide identification** dialog. The top right of the case report shows the information in the following table:

Field	Description
Case ID	Case identification entered during slide setup
Patient name	Patient name
Case comments	Additional case information
Doctor	Name of the doctor or referring pathologist in charge of the patient
Doctor comments	Additional doctor information
Created	Date and time that the case was created
Case No.	A unique case identifier generated by the BOND system

The body of the report shows the following information for each slide in the case:

Field	Description
Slide ID	The BOND system assigns a unique identifier to each slide
Slide created by	Username of the person who created the slide, or "LIS" where relevant.
Run	The number of the run in which the slide was processed
Run started by	The username of the person that started the run
Tissue type	Test tissue, positive control tissue, or negative control tissue

Field	Description
Dispense volume	The volume of reagent dispensed (see <a href="#">6.5.8 Dispense Volumes and Tissue Position on Slides</a> )
Staining protocol	The staining protocol used
Preparation	The preparation protocol used (if any)
HIER protocol	HIER protocol used (if any)
Enzyme protocol	Enzyme retrieval protocol used (if any)
Denaturation	For ISH only, denaturation protocol used (if any)
Hybridization	For ISH only, hybridization protocol used (if any)
LIS reference (2 to 7)	Additional LIS reference information for systems with LIS-ip installed (see <a href="#">11.2.6 LIS Slide Data Fields</a> )
Stain	The staining mode used, for example Single routine
PM Serial No	The serial number of the processing module that ran the slide (BOND-PRIME only)
Staining Location	The position in which the slide was processed (BOND-PRIME)
Completion status	Indicates whether the slide is being processed, completed, or has been scored. Also whether any notification events were reported.
Comments	Comments can be entered into a slide's properties at any time
Sign off:	Sign off is a reserved space on the printed paper report where a supervisor can sign off the Score and Comments
<b>Reagents Used</b>	
UPI	Unique Pack Identifier of every reagent used for this slide
Name	Name of every reagent used for this slide
Public name	Public name, for systems with LIS-ip installed
Lot No.	Lot number of every reagent used for this slide Bulk reagent lot numbers are included for BOND-PRIME
Expiration Date	Expiration date of every reagent used for this slide

See [3.7 Reports](#) for further details about the report window and printing options.

## 9.7 Protocol Report

To generate reports of the protocols used for selected slides, select a slide then click **Protocol report**. Select the protocol you want from those run on the slide, and then click **Report** to create the report. See [7.5 Protocol Reports](#) for a description of the report.

## 9.8 Slides Summary

The slide processing summary shows the number of slides started in a stipulated period. The information is displayed in both tabular and graphical format as the number of slides processed per unit time, within the stipulated period.

To report the number of slides processed, click **Slides summary** on the **Slide history** screen, to open the **Slides summary** dialog.

Choose either a particular processing module by its name or **All** (all processing modules, or in BOND-ADVANCE all processing modules in the pod that the client is currently connected to) from the **Processing module** drop-down list.

In the **Resolution** field select the time unit to be used to report the number of slides started, e.g. "Day" generates a report showing the number of slides started each day within the stipulated time period, while "Month" gives the number of slides started each month within the period.

Set **To** and **From** dates. The unit of time set in the **Resolution** field starts from the **From** date and continues in full units until near the **To** date, where a part-unit may be required to complete the period.

Click **Generate** to preview the report.

See [3.7 Reports](#) for further details about the report window and printing options.

## 9.9 Export Data

On the **Slide history** screen, click **Export data** to create a file containing the details of all slides that have completed processing in the selected date range. The exported file is in the standard "comma separated values" (csv) file format and the file can be easily imported into third-party spreadsheet applications such as Microsoft Excel. Once imported into a spreadsheet, the data is presented in a format that allows (depending on spreadsheet functionality) sorting, searching and the creation of customized reports and graphs.

For each slide in the selected date range, the following information will be included in the exported file:

- Process date
- PM serial number
- Slide ID
- Run started by
- Marker UPI
- Marker UPI 2
- Marker UPI 3
- Marker UPI 4
- Patient name
- Tissue type (test, or positive or negative control)
- Status
- Comments
- Processing module name
- Run ID
- Slide created by
- Stain
- Marker name
- Marker name 2
- Marker name 3
- Marker name 4
- Case ID
- Doctor
- Dispense volume

- Preparation protocol name
- HIER protocol name
- HIER protocol name 2
- HIER protocol name 3
- HIER protocol name 4
- Enzyme protocol name
- Enzyme protocol name 2
- Enzyme protocol name 3
- Enzyme protocol name 4
- Denaturation protocol name
- Denaturation protocol name 2
- Denaturation protocol name 3
- Denaturation protocol name 4
- Hybridization protocol name
- Hybridization protocol name 2
- Hybridization protocol name 3
- Hybridization protocol name 4
- Staining protocol name
- Staining protocol name 2
- Staining protocol name 3
- Staining protocol name 4
- Detection system name
- Detection system name 2
- Detection system name 3
- Detection system name 4
- Preparation protocol version
- HIER protocol version
- HIER protocol version 2
- HIER protocol version 3
- HIER protocol version 4
- Enzyme protocol version
- Enzyme protocol version 2
- Enzyme protocol version 3
- Enzyme protocol version 4
- Denaturation protocol version
- Denaturation protocol version 2
- Denaturation protocol version 3
- Denaturation protocol version 4
- Hybridization protocol version
- Hybridization protocol version 2
- Hybridization protocol version 3
- Hybridization protocol version 4
- Staining protocol version
- Staining protocol version 2
- Staining protocol version 3
- Staining protocol version 4
- Detection system serial number
- Detection system serial number 2
- Detection system serial number 3
- Detection system serial number 4



The columns with the number 2 to 4 in their title are relevant only to sequential multiplex-staining slides; they define the information related to the second and subsequent stains for that slide.

Use the following procedure to export slide details:

- 1 Select the required date range (refer to [9.2 Slide Selection](#)).
- 2 Click **Export data**.
- 3 Select to save the file when prompted.

The file is saved to the downloads folder (or select the **Save as** option to save to another folder).

The saved file can be opened in a standard spreadsheet program such as Microsoft Excel and manipulated according to the functions available in the application. When opening the file you may need to specify some file parameters. The file is in "csv" format, the parameters are as follows:

- The file type is **Delimited**
- The **Delimiter** or **Separator** is a **Comma**
- Use a **General** column format.



The processing start time in exported slide details will not exactly match the on-screen slide history start time. The start time displayed in the slide history screen is the time that the run start button  was pressed. However, the time reported in the exported data is the time that the run actually started processing on the processing module.

## 9.10 Brief Slide History

The brief slide history report displays information about all slides in the pod that were processed (or are still being processed) within the time frame used to select the slides on the **Slide history** screen. The report has a sign off area, and can be used as a record of slides processed.

To create a brief slide history report open the **Slide history** screen and set **From** and **To** dates and times, to populate the screen with all slides in the pod processed in that time (refer to [9.2 Slide Selection](#)). Click **Brief slide history** to generate the report.



In laboratories with high turnovers, the default time range on the **Slide history** screen (one week) may include thousands of slides. A report for this many slides will take minutes to generate – consider defining shorter time ranges if possible, rather than accepting the default.

The report includes the following details for each slide:

- |                |                                       |                   |
|----------------|---------------------------------------|-------------------|
| • Case ID      | • Marker                              | • Dispense volume |
| • Patient name | • Tissue type                         | • Status          |
| • Slide ID     | • Staining location (BOND-PRIME only) | • Sign off        |

# 10 Administration Client (on BOND Controller)

All general BOND system configuration (apart from protocols and reagents) is carried out in a separate software application, the “administration client”. Only users with administrator role can run the administration client, where all functionality is available to them.


The administration client has the following screens, opened from icons on the function bar across the top of the client:



- [10.1 Users](#)
- [10.2 LIS](#)
- [10.3 Labels](#)
- [10.4 BDD](#)
- [10.5 Settings](#)
- [10.6 Hardware](#)


# 10.1 Users

BOND system users are managed on the administration client **User management** screen. You can create, edit and disable users. You cannot delete users – they remain in the system forever. However, you can disable users, disallowing them access to either client.

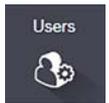

Enabled users have roles that give them different rights within the software. Only users with the administrator role can open the administration client (where they can perform all functions). Users with the operator role can register reagents, set up and process slides, and generate reports, but cannot edit reagent details, reagent panels or protocols. Users with the supervisor role have all operator rights, but can also edit reagent details, panels and protocols. Users can have more than one role.

Figure 10-1: User management screen

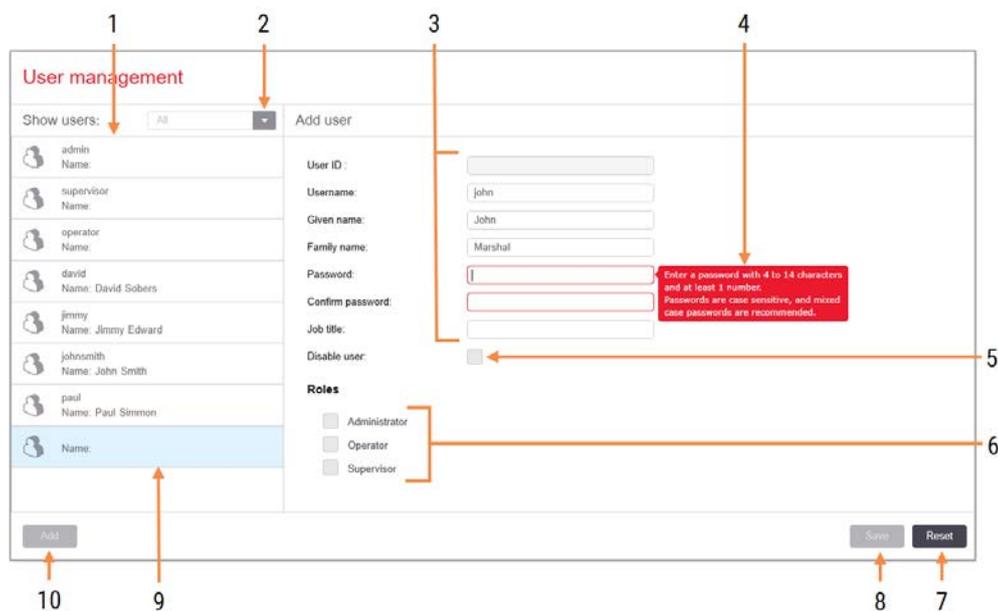

## Legend

- |   |  |
|---|--|
| <p>1 List of all BOND users</p> <p>2 Filter to show all users, or just enabled or disabled users</p> <p>3 Details of the selected user</p> <p>4 Password requirements message</p> <p>5 <b>Disable user</b><br/>Disable (or re-enable) the currently selected user</p> <p>6 <b>Roles</b><br/>Select the user's roles</p> | <p>7 <b>Reset</b><br/>Undo unsaved changes</p> <p>8 <b>Save</b><br/>Save changes for the current user</p> <p>9 The currently selected user – their details are shown on the right of the screen</p> <p>10 <b>Add</b><br/>Click to clear the fields on the right of the screen, to add details for a new user</p> |
|---|--|

Each new user requires a username and password. Both of these are required to log in to the clinical client and administration client. Once a user has been created the username cannot be changed, but the password can be. Users can change their own passwords at any time from BOND login dialogs, and administrators can also change them from the **User management** screen. Passwords must have 4–14 characters and include at least one number.



Passwords are case sensitive, and mixed-case passwords are recommended. The BOND software validates passwords as they are being changed; you cannot save a password until it fulfills the minimum requirements. Do not share passwords with other staff. Always log out of your account when you are away from the processing module.

Other user details (given and family names, and job title) are optional. These appear in logs and reports. The User ID is automatically assigned and appears in logs and reports.

## 10.2 LIS

Most LIS configuration is carried out by service staff when BOND LIS-ip is installed, however a small number of configuration options are available to users in the **LIS configuration** screen. The screen also has a log of error messages.



Figure 10-2: LIS configuration screen

 The screenshot shows the 'LIS configuration' web interface. At the top, it says 'LIS configuration' and 'You require a license for the BOND LIS-ip, activated with a password provided by Leica Biosystems.' Below this are several configuration options:
 

- 1 License: A text input field containing 'AAAAAAAA'.
- 2 Duplicate case ID: A dropdown menu with 'Resurrect existing case' selected.
- 3 Force LIS printing in BOND: An unchecked checkbox.
- 4 Enable LIS to update LIS slides: An unchecked checkbox.
- 5 Enable unprocessed LIS slide lifetime: An unchecked checkbox with a sub-field '(hrs):' and a value of '1'.

 To the right of these options are three buttons: 'Edit LIS data fields', 'Save', and 'Reset'. Below the configuration section is a 'Log messages' section with a table header: 'Created at | Level | Log entry | Source'. The table is currently empty. At the bottom right of the screen is a 'View log' button.
 

Numbered callouts in the image:
 

- 1 points to the License input field.
- 2 points to the Duplicate case ID dropdown.
- 3 points to the Force LIS printing in BOND checkbox.
- 4 points to the Enable LIS to update LIS slides checkbox.
- 5 points to the Enable unprocessed LIS slide lifetime checkbox and its sub-field.
- 6 points to the Log messages table area.
- 7 points to the 'Edit LIS data fields' button.
- 8 points to the 'View log' button.

### Legend

- |   |   |
|---|---|
| <p><b>1 License</b><br/>Shows the LIS-ip license password.</p> <p><b>2 Duplicate case ID</b><br/>Set the action for cases with the same case ID as existing cases.</p> <p><b>3 Force LIS printing in BOND</b><br/>Enforce that all LIS slides are printed by BOND. Refer to <a href="#">11.7 Slide Labels</a>.</p> <p><b>4 Enable LIS to update LIS slides</b><br/>Overwrite (update) unprocessed slides if slides having the same barcode ID are resent by the LIS. If this setting is disabled, BOND will reject any attempt by the LIS to reuse the same barcode ID.</p> | <p><b>5 Enable unprocessed LIS slide lifetime (hrs)</b><br/>Delete slides received from an LIS that are not processed within the number of hours entered.</p> <p><b>6 Log Messages</b><br/>Are displayed as a list when you click View log (see right).</p> <p><b>7 Edit LIS data fields</b><br/>Configure the display of slide data in BOND.</p> <p><b>8 View log</b><br/>Display a list of errors resulting either from LIS messages sent to BOND, or replies from BOND to LIS messages. Click again to update the list with recent errors.</p> |
|---|---|

## License

You require a license for the BOND LIS-ip, activated with a password provided by Leica Biosystems. Typically the password is entered for you by the service staff who set up the LIS-ip connection, but if not then only the **License** field appears on the screen. Enter the password to turn on the LIS-ip functionality and to show the configuration options and log shown in [Figure 10-2](#).

## Duplicate Case ID

Use the **Duplicate case ID** setting to set how to handle cases received from the LIS with the same case ID as an expired or deleted LIS case, already in the BOND system. (If an LIS case has the same case ID as an existing BOND case, that is, one created in the BOND system, it is automatically rejected.) There are two options:

- **Resurrect existing case:** when the new case is received, provided it has the same patient name as the existing case, the existing case is resurrected (that is, it is re-used). If the new case has the same case ID but a different patient name then it is rejected.

If the doctor's name has changed, the new name is used.

- **Reject message:** the new LIS case is not transferred to the BOND system. A message reporting this is logged in the LIS. You must change the case ID in the LIS and resend the case.

For discussion of handling duplicate case IDs in non-LIS cases, see [6.3.4 Case Duplication, Resurrection and Expiration](#). For general information about LIS cases see [11.2.2 LIS Cases](#).

## LIS Slide Data Fields

The BOND LIS-ip installation can be configured for the LIS to send the BOND system up to seven parameters for each slide. These are for viewing only, and are displayed on the **LIS** tab in the **Slide properties** dialog. While basic configuration of these parameters is carried out by a service technician, you can choose to hide any of the parameter fields, and set the names of the fields.

Check fields that you want to display and type in field names.

## 10.3 Labels

Use the **Label templates** screen to create and edit slide label templates, and to select the templates to use.



There are eight 2D template types, for use with the eight slide types in the BOND system:

- BOND single stain
- BOND Oracle
- BOND sequential multiplex stain
- BOND parallel multiplex stain
- LIS single stain
- LIS Oracle
- LIS sequential multiplex stain
- LIS parallel multiplex stain

The “BOND” templates are for slides created in the BOND system, and the “LIS” templates for slides created in an LIS but printed from the BOND system.

These predefined templates cannot be edited or deleted.

BOND 7 can read 1D, 2D, and OCR barcodes, but create only 2D barcodes.



If your BOND system was upgraded from 5.1 or earlier, you cannot continue to use the existing barcode scanner as this earlier model does not support 2D barcodes.


To use another template for a slide type, copy the default template and edit the resulting “user template”. Then “activate” it, to make it the template that the BOND system will use for slides of that type. You can create any number of templates for each slide type, but only one can be activated at a time.



**WARNING:** Always include sufficient information on labels to ensure that, in the case that automatic label identification fails, the labels can be identified manually. Leica Biosystems recommends that all slides include the following fields:

- Case ID or Patient name
- Slide ID
- Tissue type – to identify control tissues; and
- Marker – the primary antibody or probe to be applied.

Figure 10-3: Label templates screen

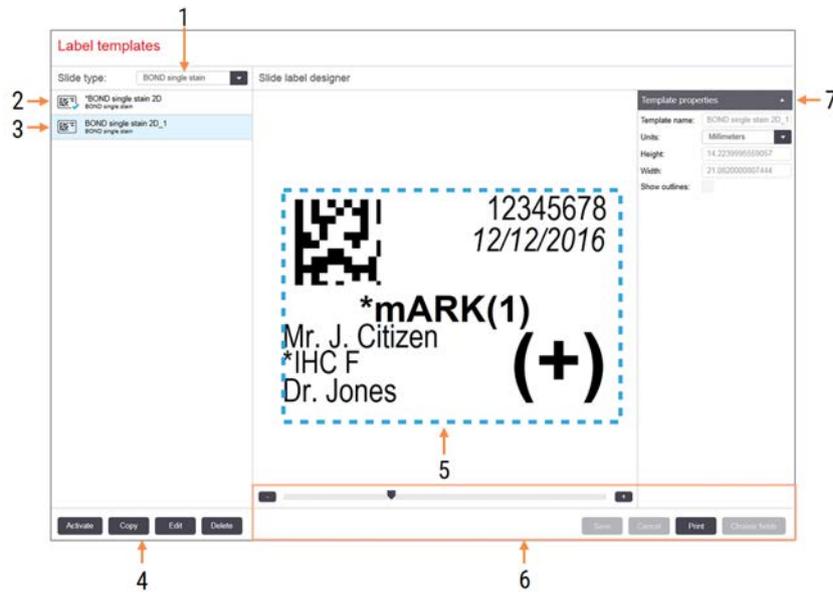

## Legend

- |  |  |
|--|--|
| <p>1 <b>Slide type</b><br/>Select a slide type – all templates for the type are shown in the pane below</p> <p>2 Active template (with blue check mark)</p> <p>3 Selected template, displayed in editing pane to the right</p> <p>4 Template management commands – see <a href="#">Figure 10-4</a></p> | <p>5 Editing pane with layout of the template selected at left</p> <p>6 Template editing commands – see <a href="#">Figure 10-5</a></p> <p>7 <b>Template properties</b><br/>Properties of the currently selected template layout as a whole (view-only until you click the Edit button in left pane)</p> |
|--|--|


Figure 10-4: Label template management commands



## Legend

- |  |   |
|--|---|
| <p>1 Set the currently selected template to be used for all slide labels for the currently selected slide type.</p> <p>2 Copy the currently selected template to create a new “user” template.</p> | <p>3 Edit the currently selected template using the editing pane and commands in the right of the screen. Default templates cannot be edited.</p> <p>4 Delete the currently selected template. Default templates cannot be deleted.</p> |
|--|---|

Figure 10-5: Label template editing commands

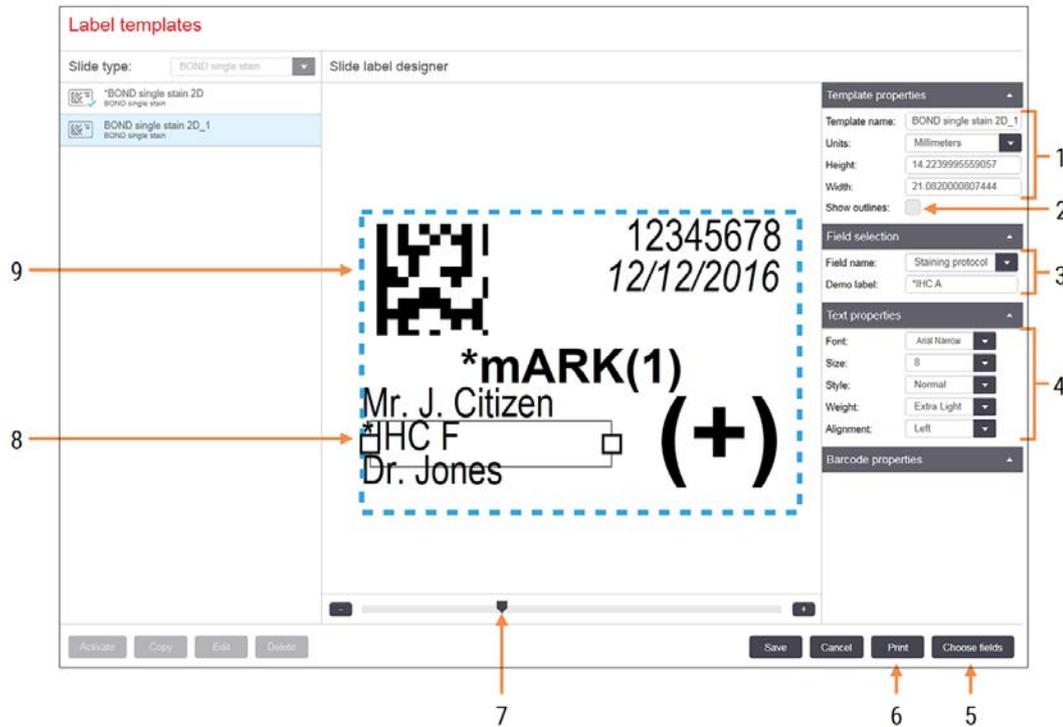

## Legend

- |   |   |
|---|---|
| <p><b>1 Template properties</b><br/>Enter the template name and size</p> <p><b>2 Show outlines</b><br/>Display field outlines in the editing pane</p> <p><b>3 Field selection</b><br/>Select a field type to highlight the field in the editing pane. Enter demo text for the field.</p> <p><b>4 Text properties</b><br/>Configure text properties for the selected field</p> | <p><b>5 Choose fields</b><br/>Open the Choose fields dialog to add or remove fields from the layout</p> <p><b>6 Print</b><br/>Print the current layout on a selected printer</p> <p><b>7 Sliding control</b> to zoom the demo label in and out</p> <p><b>8 The currently selected field</b> – configure in the Text Properties pane to the right. Drag the boxes at either end to change the width, or the whole field to reposition.</p> <p><b>9 The Label ID or barcode field</b> – must not be resized</p> |
|---|---|

See also:

- [10.3.1 Create, Edit, and Activate Label Templates](#)
- [10.3.2 Information Types](#)

## 10.3.1 Create, Edit, and Activate Label Templates

Create new templates by copying existing ones and editing them, or you can edit existing user templates (but not the default templates). Activate a template to make it the one used for labels printed from the BOND system.

- [10.3.1.1 Create a New Template](#)
- [10.3.1.2 Edit a Template](#)
- [10.3.1.3 Activate a Template](#)

### 10.3.1.1 Create a New Template

- 1 Select the slide type the new template is for.  
All existing templates for the slide type are displayed.
- 2 Select a template to copy (select the template most similar to the one you want to create).
- 3 Click **Copy**.



Copying a template with a 2D barcode will create a new “user template” with a 2D barcode.

### 10.3.1.2 Edit a Template

- 1 Select a template in the left hand pane and click **Edit**.  
The editing pane, buttons, and properties lists on the right of the screen are enabled for you to edit the template layout, displayed in the editing pane.
- 2 Optionally select **Show outlines** (in **Template properties** section, top right) to view field boundaries in the editing pane.
- 3 Enter the template name in the **Template properties** section.



There is a 64-character limit for label template names, also all names used in the same slide type category must be unique.

- 4 Edit the layout:
  - a Add or remove fields – click **Choose fields** and select the slide properties to show (see [10.3.2 Information Types](#) for a list of all the properties available).  
Note that you cannot remove the **Label ID** field, which is used for automatic identification.
  - b Position fields – select and drag the fields in the editing pane.

- c Resize field widths – drag the boxes at either end of the fields. (Field heights are set by the text font size.)  
If the field width you set is not long enough for the value on a particular label when the template is used, the text is truncated and ellipsis points appended so that it is clear that truncation has occurred.



You must not resize the **Label ID** field – it must remain at its default setting so it can be read by the processing module imager.

- d Set text properties – select a field and set its font and font size, style and weight in the **Text properties** section. Also set the text alignment in the field.

5 Click **Save**.



Make sure there is clear space around the **Label ID** field. If text from any other fields impinge on this area it can interfere with automatic identification.

### 10.3.1.3 Activate a Template

- 1 Select a template in the left hand pane and click **Activate**.

The template is marked with a blue check mark, indicating it is now active.

## 10.3.2 Information Types

Label templates can be configured to show any of the following slide information, selected from the **Choose fields** dialog on the **Labels** screen.

The **Label ID** field, used for automatic identification, cannot be removed from any template. It appears as a 2D barcode.

Field	Description
Case ID	The case ID for the slide (N.B. not the Case No. – see <a href="#">6.3.2 Case Identification</a> ).
Slide created by	Username of the person who was logged into the client when the slide was created, or "LIS" where relevant.
Denaturation protocol	Abbreviated name of the denaturation protocol.
Denaturation protocol 2	Abbreviated name of the second denaturation protocol (may be required for multiplex staining protocols).
Denaturation protocol 3	Abbreviated name of the third denaturation protocol (may be required for multiplex staining protocols).
Denaturation protocol 4	Abbreviated name of the fourth denaturation protocol (may be required for multiplex staining protocols).
Dispense volume	100 µL or 150 µL dispense volume.

Field	Description
Doctor comment	A comment recorded in the BOND system for the referring doctor (see <a href="#">6.4 Manage Doctors</a> ).
Doctor	The name of the referring doctor.
EIER protocol	Abbreviated name of the enzyme protocol.
EIER protocol 2	Abbreviated name of the second enzyme protocol (may be required for multiplex staining protocols).
EIER protocol 3	Abbreviated name of the third enzyme protocol (may be required for multiplex staining protocols).
EIER protocol 4	Abbreviated name of the fourth enzyme protocol (may be required for multiplex staining protocols).
Facility	The name of the facility as entered in the <b>Facility</b> field on the administration client <b>Laboratory settings</b> screen – see <a href="#">10.5.1 Laboratory Settings</a> .
HIER protocol	Abbreviated name of the HIER protocol
HIER protocol 2	Abbreviated name of the second HIER protocol (may be required by multiplex staining protocols).
HIER protocol 3	Abbreviated name of the third HIER protocol (may be required by multiplex staining protocols).
HIER protocol 4	Abbreviated name of the fourth HIER protocol (may be required by multiplex staining protocols).
Hybridization protocol	Abbreviated name of the ISH hybridization protocol.
Hybridization protocol 2	Abbreviated name of the second ISH hybridization protocol (may be required for multiplex staining protocols).
Hybridization protocol 3	Abbreviated name of the third ISH hybridization protocol (may be required for multiplex staining protocols).
Hybridization protocol 4	Abbreviated name of the fourth ISH hybridization protocol (may be required for multiplex staining protocols).
LIS doctor comment	For LIS-ip systems, the comment for the doctor in the LIS system.
LIS doctor	For LIS-ip systems, the doctor name.
LIS reference [2–8]	LIS slide properties imported into the BOND system.  See <a href="#">11.2.6 LIS Slide Data Fields</a> .
Marker	Abbreviated name of the primary antibody or probe for a single stain, parallel multiplex stain, or the first stain of a sequential multiplex stain.


Field	Description
Marker 2	Abbreviated name of the primary antibody or probe for the second stain of a multiplex stain.
Marker 3	Abbreviated name of the primary antibody or probe for the third stain of a multiplex stain.
Marker 4	Abbreviated name of the primary antibody or probe for the fourth stain of a multiplex stain.
Patient comment	Case comment (see <a href="#">6.3.3 Adding a Case</a> ).
Patient	The patient name.
Preparation protocol	Abbreviated name of the preparation protocol.
Public name	For LIS-ip systems, the public name of the primary antibody or probe (see <a href="#">11.2.4 Public Marker Names</a> ), for a single stain or the first stain of a multiplex stain.
Public name 2	For LIS-ip systems, the public name of the primary antibody or probe (see <a href="#">11.2.4 Public Marker Names</a> ), for the second stain of a multiplex stain.
Public name 3	For LIS-ip systems, the public name of the primary antibody or probe (see <a href="#">11.2.4 Public Marker Names</a> ), for the third stain of a multiplex stain.
Public name 4	For LIS-ip systems, the public name of the primary antibody or probe (see <a href="#">11.2.4 Public Marker Names</a> ), for the fourth stain of a multiplex stain.
Slide comment	Slide comment (see <a href="#">6.5.2 Creating a Slide</a> ).
Slide date	The date that the label was printed (short format as set in the Windows Regional and Language Options (Control Panel)).
Slide ID	8-digit numeric slide ID, unique to the slide within the BOND system.
Slide priority	For LIS-ip systems, the priority rating for the slide.
Staining mode	Single stain, multiplex stain, or Oracle slide.
Staining protocol	Abbreviated name of the staining protocol for a single stain or the first stain of a multiplex stain.
Staining protocol 2	Abbreviated name of the staining protocol for the second stain of a multiplex stain.
Staining protocol 3	Abbreviated name of the staining protocol for the third stain of a multiplex stain.
Staining protocol 4	Abbreviated name of the staining protocol for the fourth stain of a multiplex stain.
Tissue type	Test tissue, or positive or negative control tissue. BOND prints “(-)” for negative control, “(+)” for positive control, and nothing for test tissue.

## 10.4 BDD

Use the **BDD update** screen to update the BOND Data Definitions and to generate audit trail files.



Figure 10-6: BDD update screen

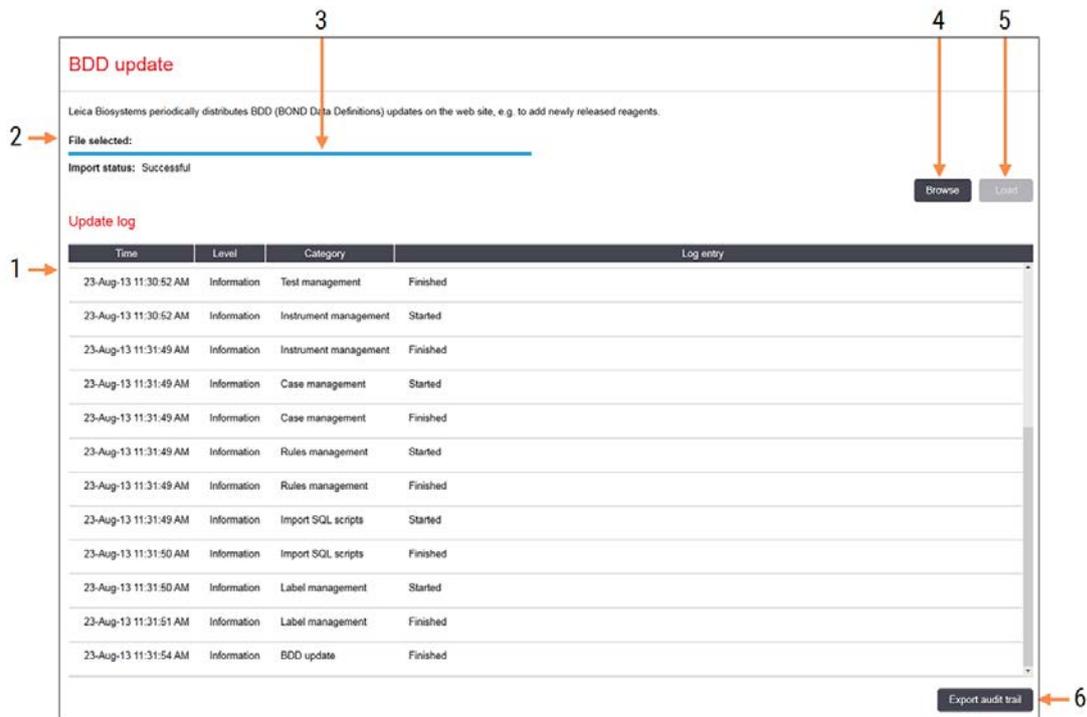

### Legend

- |   |  |   |  |
|---|--|---|--|
| 1 | Log of BDD update                                      | 5 | Load   |
| 2 | The selected BDD update file                           |   | Click to install the BDD update file in field at left                    |
| 3 | BDD update progress bar and status                     | 6 | Export audit trail   |
| 4 | <b>Browse</b>  |   | Click to generate audit trail files – <a href="#">10.4.2 Audit Trail</a> |
|   | Locate BDD update file and open into the field at left |   |  |

See:

- [10.4.1 BDD Updates](#)
- [10.4.2 Audit Trail](#)

## 10.4.1 BDD Updates

Leica Biosystems periodically distributes BDD (BOND Data Definitions) updates on the web site, e.g. to add newly released reagents. BDD update files for BOND 7 have “\*.bdd” file extension. Install these updates from the **BDD update** screen.



**CAUTION:** There are different BDD update files for different world regions, reflecting different regulations in those regions. Be sure to install the correct update file for your region (the **About BOND** dialog displays region information, see [3.9 About BOND](#)). If unsure of the correct file to use, contact customer support.

You can install a BDD update at any time.

- 1 Download the update file from the Leica Biosystems website and save to a virus-free USB stick.
- 2 Insert the USB stick into the BOND or BOND-ADVANCE Controller (or, alternatively, any BOND terminal in BOND-ADVANCE systems).
- 3 Open the **BDD update** screen in the administration client.
- 4 Click **Browse** and locate the update file in the Windows **Open** dialog.
- 5 Click **Open** to display the BDD file in the field near the top-left of the screen.
- 6 Click **Load** to update the definitions with the new data.

Messages are written to the **Update Log** as the update proceeds. The final row displays “BDD update: Finished” when the update is finished, and status “Successful” appears under the progress bar in the top pane.



The process takes only a few minutes, therefore we recommend that you wait until the update completes before navigating to a different screen.

- 7 Open the **About BOND** screen to check that the BDD has been updated to the latest released.



If an update is unsuccessful, the data definitions revert to the pre-update condition, and a message to this effect appears in the Update Log. Contact customer support if an update fails.

## 10.4.2 Audit Trail



This section does not apply to the BOND-PRIME Processing Module. The BOND-PRIME audit trail is captured in the Service Log report.


You can generate an audit trail of all changes to the system, including who made the changes and when. The audit trail is written to multiple CSV files, each recording a different category of information. Files are written to folder: BOND Drop-box\Audit\YYYYMMDD-HH:mm:ss on the controller.

To create audit trail files:

- 1 Open the **BDD update** screen and click **Export audit trail**.
- 2 Select **All data** to report all changes in the entire life of the system, or **Custom date range** to define a specific period, then define **From** and **To** dates and times.
- 3 Click **Export**.

## 10.5 Settings

The **Settings** screen has general laboratory-wide settings for the BOND system (**Laboratory settings**) and default case and slide settings and workflow options (**Case and slide settings**).

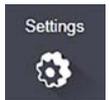


- [10.5.1 Laboratory Settings](#)
- [10.5.2 Case and Slide Settings](#)
- [10.5.3 Database Backups](#)

## 10.5.1 Laboratory Settings

Set general laboratory options on the **Laboratory settings** pane:

Figure 10-7: Settings screen, Laboratory settings pane

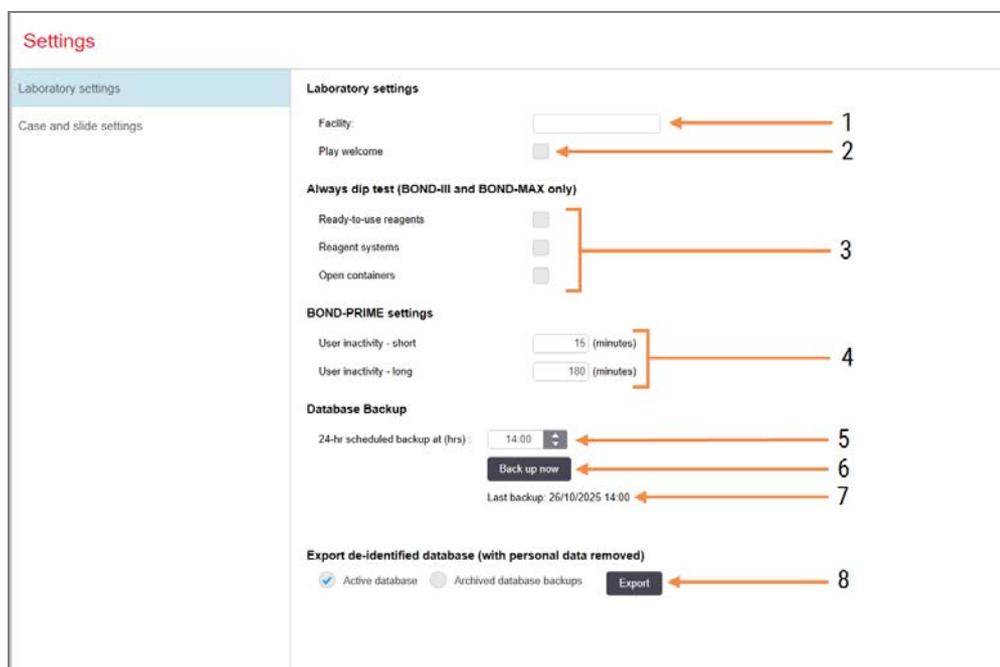

### Legend

- |  |   |
|--|---|
| <p><b>1 Facility</b><br/>Type in the name of your laboratory, to appear in reports</p> <p><b>2 Play welcome</b><br/>Play a welcome message when the BOND software is started</p> <p><b>3 Always dip test</b><br/>Check to dip test reagent containers of the specified types before every run – see <a href="#">8.3.1 Determining Reagent Volume</a></p> <p><b>4 User inactivity</b><br/>BOND-PRIME only.<br/><b>Short-</b> set the inactivity period (minutes), after which a user must re-enter their PIN.<br/><b>Long-</b> set the inactivity period (minutes), after which a user must log in again.</p> | <p><b>5 24-hr scheduled backup at (hrs)</b><br/>Set a time to run daily automatic database backups (24-hour time format) – see <a href="#">10.5.3 Database Backups</a>.</p> <p><b>6 Back up now</b><br/>Run a database backup immediately – <a href="#">10.5.3 Database Backups</a>.</p> <p><b>7</b> Information about last backup, or progress bar while a backup is in progress.</p> <p><b>8 Export de-identified database</b><br/>Select whether you want to export de-identified data from the active database or from a database backup.</p> |
|--|---|

## 10.5.2 Case and Slide Settings

The case and slide settings allow you to set:

- defaults for a number of configurable values in case and slide creation
- workflow options in case and slide creation.

See [Figure 10-8](#) and [Figure 10-9](#) for descriptions of the case and slide options.

**Figure 10-8:** Case settings on the **Case and slide settings** pane

The screenshot shows a 'Case settings' pane with five numbered items:

- 1 Default preparation: \*Dewax
- 2 Default dispense volume: 150 µL
- 3 Create impromptu cases or slides: Cases and slides
- 4 Processed case lifetime: 30 (days)
- 5 Create daily case:

### Legend

- |  |  |
|--|--|
| <p><b>1 Default preparation</b><br/>Default preparation protocol for new cases.</p> <p><b>2 Default dispense volume</b><br/>Default dispense volume for new cases.</p> <p><b>3 Create impromptu cases/slides</b><br/>Set options to create cases and/or slides after loading slides – see <a href="#">6.8.2 On-Board Slide Identification Options</a>.</p> | <p><b>4 Processed case lifetime</b><br/>The number of days a case remains on the <b>Slide setup</b> screen after the last slide in the case has been started – see <a href="#">6.3.4.2 Processed Case Lifetime</a>.</p> <p><b>5 Create daily case</b><br/>Automatically create one case daily for all slides processed on that day – see <a href="#">6.3 Working with Cases</a>.</p> |
|--|--|

**Note:** Not applicable to BOND-PRIME Processing Modules.

Figure 10-9: Slide settings on the **Case and slide settings** pane

## Legend

- |  |  |
|--|--|
| <p><b>1 Staining mode</b><br/>Default setting for new slides – see <a href="#">6.5.2 Creating a Slide</a>.</p> <p><b>2 BOND label ID</b><br/>The label identifiers for slides created in BOND are 2D barcodes.</p> | <p><b>3 Force printing in BOND</b><br/>Allow only slides with labels printed in BOND to be processed – see <a href="#">6.8.2 On-Board Slide Identification Options</a>.</p> <p><b>Note:</b> Not applicable to BOND-PRIME Processing Modules.</p> |
|--|--|

## 10.5.3 Database Backups

The database stores critical patient information and is essential to the proper operation of the BOND system, so to ensure you can recover if the database is corrupted, the BOND system has a system of automatic and manual backups:

- Automatic daily backups
- “Manual”, on-request backups

All backup files are saved on the BOND controller in sub-folders of folder:

```
B:\BOND Drop-box\Backups
```

For each type of backup two files are generated, always with the same name format:

```
[Facility name]_BOND_YYYY-MM-DD-HH-mm-ss
```

where the facility name is as entered in the administration client **Settings** screen (see [10.5.1 Laboratory Settings](#)) (or it defaults to “Facility” if no facility name is entered). The name includes the date and time the backup was run. The main backup file has extension “.dump” and there is also a log file, with extension “.log”.

The automatic daily backup runs at a time set in the administration client **Settings** screen ([10.5.1 Laboratory Settings](#)). The most recent backup is in folder “Scheduled\_Latest”. It is moved to folder “Scheduled\_1\_Days\_Old” when the next day’s backup runs, and so on for another six days (to folder “Scheduled\_7\_Days\_Old”) after which it is deleted.

If the BOND controller is off at the scheduled backup time, the backup is not run. Ensure you set a time when the controller will be on, and when it is unlikely that processing runs will be in progress.

You can run a manual backup at any time (except when an automatic backup is running), from the administration client **Settings** screen. Click **Back up now** in the **Database backup** section (see [10.5.1 Laboratory Settings](#)).

A dialog informs you when the backup is finished. The backup and log files are saved in folder “Manual”. At the next manual backup the files are transferred to folder “Manual\_Previous”. The files are deleted after a third manual backup – that is, only the two most recent manual backups are saved.

If any type of backup fails to complete successfully an icon (right) appears at the right of the function bar in the administration and clinical clients. The icon remains until a successful backup is run. If the icon appears, attempt a manual backup as soon as possible. If that also fails, contact customer support immediately.



Especially on older BOND systems, where more data will have accumulated, check occasionally that there is enough room for the backup files. Usually, one backup file is deleted when a new one is written, so drive usage will increase in only relatively small increments. However, at some point you may need additional drive space – if so, contact customer support.

For additional security, back up the backup files to a different location (off the BOND controller) on a regular basis. If possible, organize with your IT department for automatic backups. If not, copy the files manually once a week (more often for laboratories with high turnovers). The BOND controller runs a secure FTP server so that the IT department can log in and download the backup files from the BOND Drop-box folder via secure FTP.

Contact customer support if you need to restore a database.

## 10.6 Hardware

Use the **Hardware configuration** screen to configure processing modules, pods (groups of processing modules controlled from one client), and slide label printers.



Hardware configuration is carried out on three tabs:

- [10.6.1 Processing Modules](#)
- [10.6.2 Pods](#)
- [10.6.3 Slide Labelers](#)

### 10.6.1 Processing Modules

View the processing modules in the BOND system and configure their bulk reagent containers on the **Processing modules** tab.

When a processing module is physically connected to the BOND controller with a network cable, it automatically appears in the left pane on the **Processing modules** tab.




The BOND controller will only allow compatible processing modules to be connected. If an incompatible processing module is connected, an icon and error message are displayed (see table of icons and meanings on next page).

Select the processing module to show its details on the right of the tab. Give the processing module a unique name and, if required, disable some of the bulk containers (see [10.6.1.1 Disabling Bulk Reagent Containers](#)). When you save these settings the processing module is said to be “commissioned”.

It remains on the tab, including when it is turned off or disconnected, until you decommission it (see [10.6.1.2 Decommission a Processing Module](#)).

Figure 10-10: Processing modules tab on the Hardware configuration screen

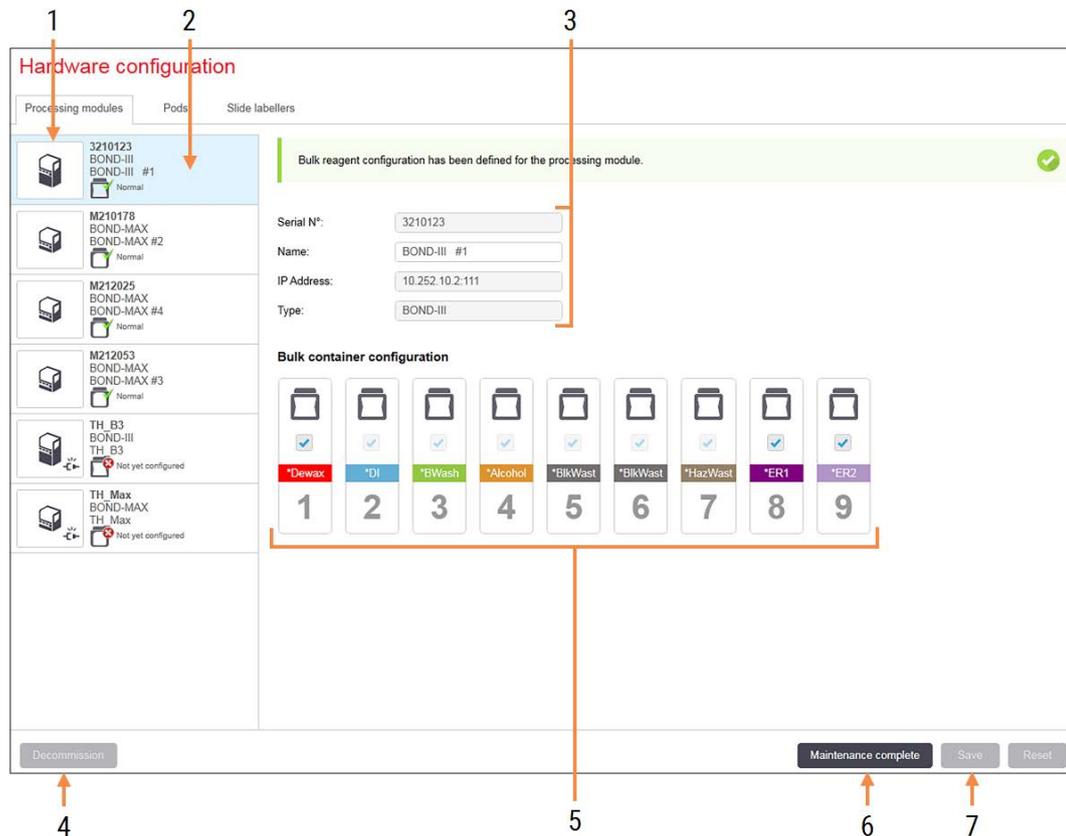


## Legend

- 1 All connected processing modules.
- 2 The currently selected processing module – its details are shown on the right of the screen.
- 3 Serial number, name (editable), IP address, and processing module type for the selected processing module.
- 4 **Decommission**  
Decommission the selected processing module – see [10.6.1.2 Decommission a Processing Module](#).
- 5 Bulk container configuration – you can uncheck some stations if they will not be used – see [10.6.1.1 Disabling Bulk Reagent Containers](#) below.
- 6 **Maintenance complete**  
Click to reset day and slide counts following preventative maintenance – see [Preventative Maintenance \(on page 275\)](#).
- 7 **Save**  
You must save the configuration settings in order to commission a newly-connected processing module. In order to save a processing module's configuration settings, you must first ensure that all its slide staining assemblies are unlocked.

**Note:** Not applicable to BOND-PRIME Processing Modules.

Icons beside the processing module images in the left pane indicate when the modules are in various states:

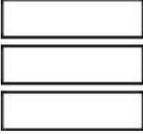Icon	Meaning	Icon	Meaning
	The processing module is not connected.		The processing module is undergoing a maintenance operation.  This icon is also displayed (together with an error message) if the connected processing module is incompatible with the BOND system.
	The processing module is initializing.		The bulk reagent configuration has <b>not</b> been received by the processing module. Click <b>Save</b> to send the configuration.
	The processing module is currently being serviced.		The bulk reagent configuration has been received by the processing module.

### 10.6.1.1 Disabling Bulk Reagent Containers



This section does not apply to the BOND-PRIME Processing Module.

Laboratories that do not carry out epitope retrieval and/or dewaxing on the BOND system can disable the containers in the software and remove the relevant containers from the processing module. The containers do not then have to be maintained with reagent in them, and processing module initialization is sped up as the fluid lines to the containers are not primed. To disable bulk containers uncheck them in the **Bulk container configuration** pane and click **Save**. When prompted, restart the processing module for the changes to take effect. You can remove the disabled containers or leave them in position on the processing module.

### 10.6.1.2 Decommission a Processing Module


If you no longer need a processing module, decommission it to remove it from the **Processing modules** tab. Make sure that the processing module is turned off, then select it on the **Processing modules** tab and click **Decommission**. If the processing module is still in a pod, it will be automatically removed from the pod when it is decommissioned.

To recommission a processing module, reconnect its network cable.

## 10.6.2 Pods

Pods are collections of processing modules (and slide label printers) that can be controlled from a single clinical client – see [3.1 System Architecture](#). Create a pod even for single-seat installations where all processing modules are controlled from the BOND controller. Create and edit pods on the **Pods** tab.

Figure 10-11: Pods tab on the Hardware configuration screen

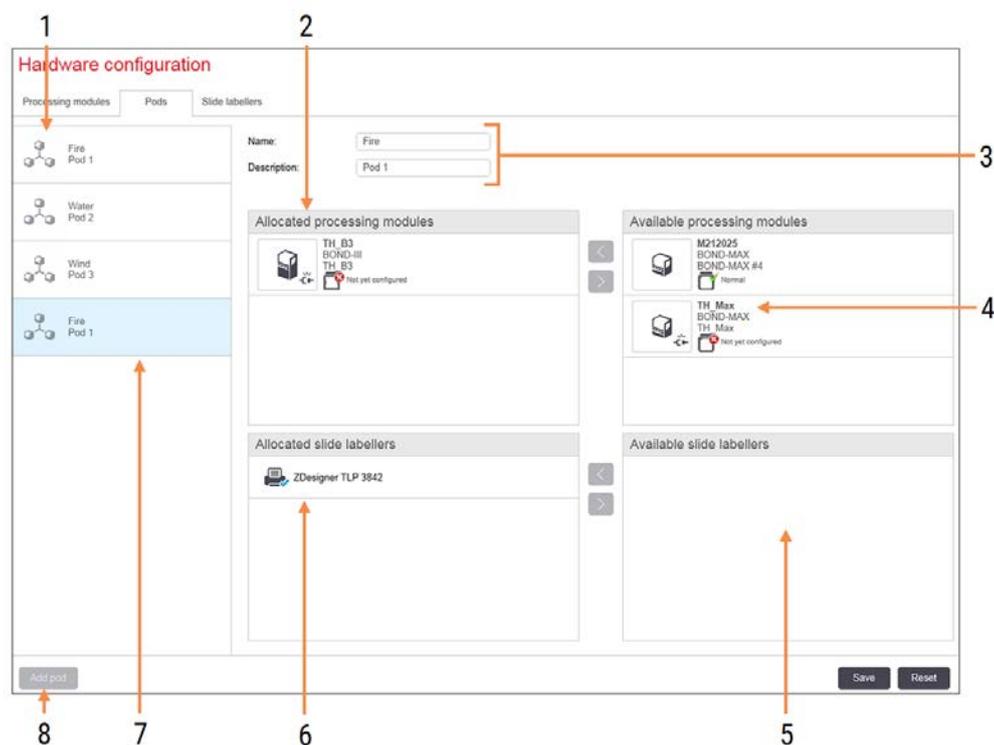

### Legend

- 1 List of all pods
- 2 Processing modules in the selected pod. The same ordering is used in the clinical client – see [10.6.2.1 Create a New Pod](#) below.
- 3 Name and description (both editable) of the selected pod.
- 4 All processing modules that are not in pods.
- 5 All slide labelers that are not in pods.
- 6 Slide label printers in the selected pod. The default printer is marked with a blue check mark – see [10.6.2.1 Create a New Pod](#) below.
- 7 The currently selected pod – its details are shown on the right of the screen.
- 8 **Add pod**  
Click to configure a new pod – see [10.6.2.1 Create a New Pod](#) below.

### Delete

Right-click an empty pod and click **Delete** to delete it.

To make processing modules available for inclusion in a pod, configure them on the **Processing modules** tab (see [10.6.1 Processing Modules](#)). To make slide labelers available for inclusion in a pod, configure them on the **Slide labelers** tab (see [10.6.3 Slide Labelers](#)).

## 10.6.2.1 Create a New Pod

- 1 Click **Add pod**.
- 2 Enter a unique pod name and optionally, description.
- 3 Select processing modules from the **Available processing modules** pane (top right) and click the left-arrow button  to add them to the **Allocated processing modules** pane (top left).

If adding multiple processing modules, add them in the order that you want the tabs to appear in the clinical client, e.g. if you select processing module A first and processing module B second, A will appear above B in the pane, and in the **System status** tabs in clients connected to the pod. To reorder processing modules, remove them with the right-arrow button  and then replace in the correct order.

- 4 Select one or more slide label printers from the **Available slide labelers** pane (bottom right) and add to the **Allocated slide labelers** pane (bottom left).

If you add multiple printers they are all available for selection when printing slides. Set the default printer by right-clicking and clicking **Set as default printer**. The default printer has a blue check mark.


- 5 Click **Save**.

To delete a pod, remove all processing modules and printers then right-click on the pod in the left pane and click **Delete**.

## 10.6.3 Slide Labelers

Slide labelers used by the BOND system must be located, identified and activated in the administration client **Hardware configuration** screen, **Slide labelers** tab. This makes them available to be included in pods (see [10.6.2 Pods](#)).

Figure 10-12: Slide labelers tab on the **Hardware configuration** screen

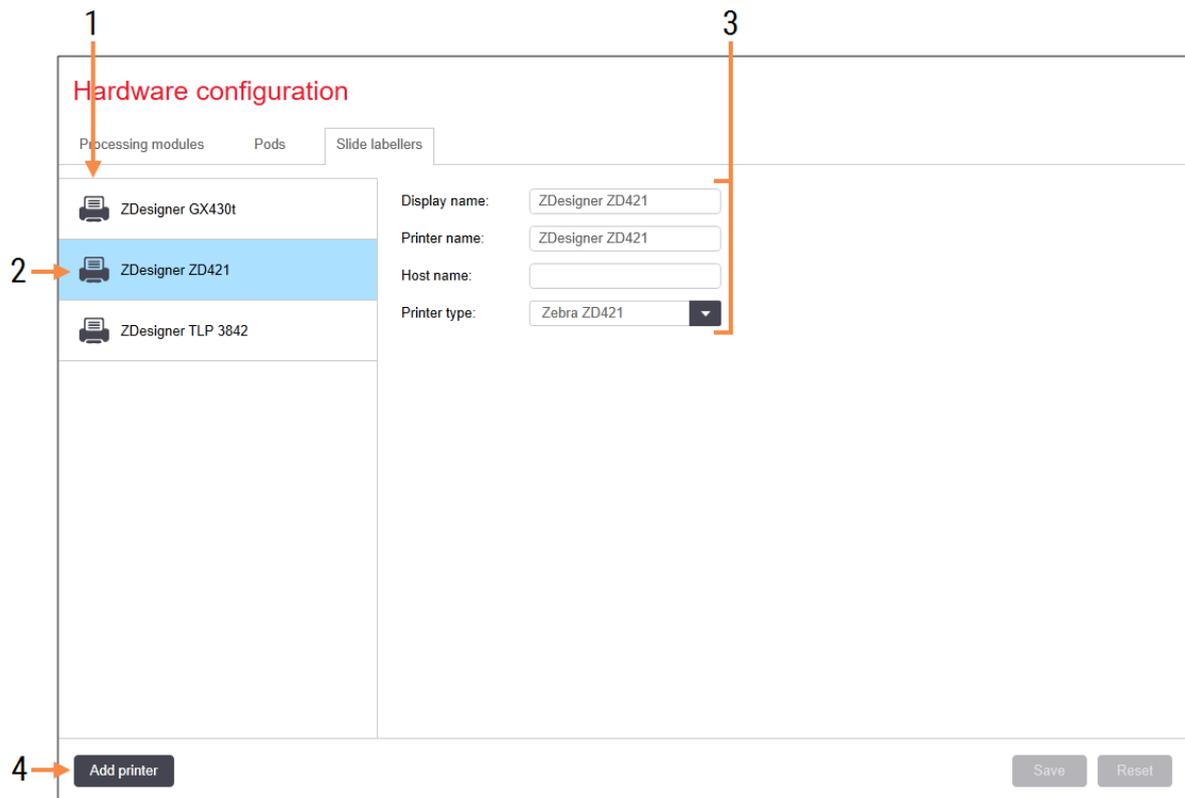

### Legend

- |  |   |
|--|---|
| <p>1 List of all slide labelers.</p> <p>2 The currently selected slide labeler – its details are shown on the right of the screen.</p> | <p>3 Slide label printer details – see <a href="#">10.6.3.1 Slide Label Printer Details</a> below.</p> <p>4 <b>Add printer</b><br/>Click to add a new slide labeler – configure on the right of the screen.</p> |
|--|---|

To make a newly connected slide labeler available for inclusion in a pod, click **Add printer** then enter the printer details on the right of the screen.



Not all installations have pods. If there are no pods then the default printer is the first printer in the list.



If a slide labeler is replaced you do not need to add a new labeler – you can replace the details of the old labeler with those of the new one.

To remove a labeler from the list, right-click it and select **Delete**.

## 10.6.3.1 Slide Label Printer Details

The BOND system requires the following details for each slide label printer:

- **Display name:** a name for the labeler that will appear in the BOND software
- **Printer name:** the name of the printer used by Windows




The printer name in BOND-ADVANCE installations is actually the printer **Share name** displayed in the Windows **Printers and Faxes** dialog.

- **Host name:** leave blank unless it is a **Zebra** printer (for example **ZDesigner ZD421**) on a BOND-ADVANCE installation, in which case enter the **Computer name** of the terminal that the slide labeler is connected to.



You can find the **Computer name** in the Windows **System** dialog (see [Figure 10-13](#)).

**Figure 10-13:** Computer name in Windows System dialog

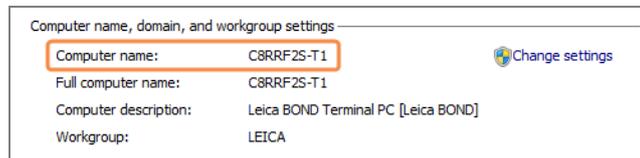

- **Printer type:** the printer model (for example **Zebra ZD421**)


## 10.6.3.2 Print Test Labels

To check print alignment:

- 1 In the administration client, open the **Labels** screen.
- 2 Select a label in the left panel, and click **Print**.



Figure 10-14: Print a test label

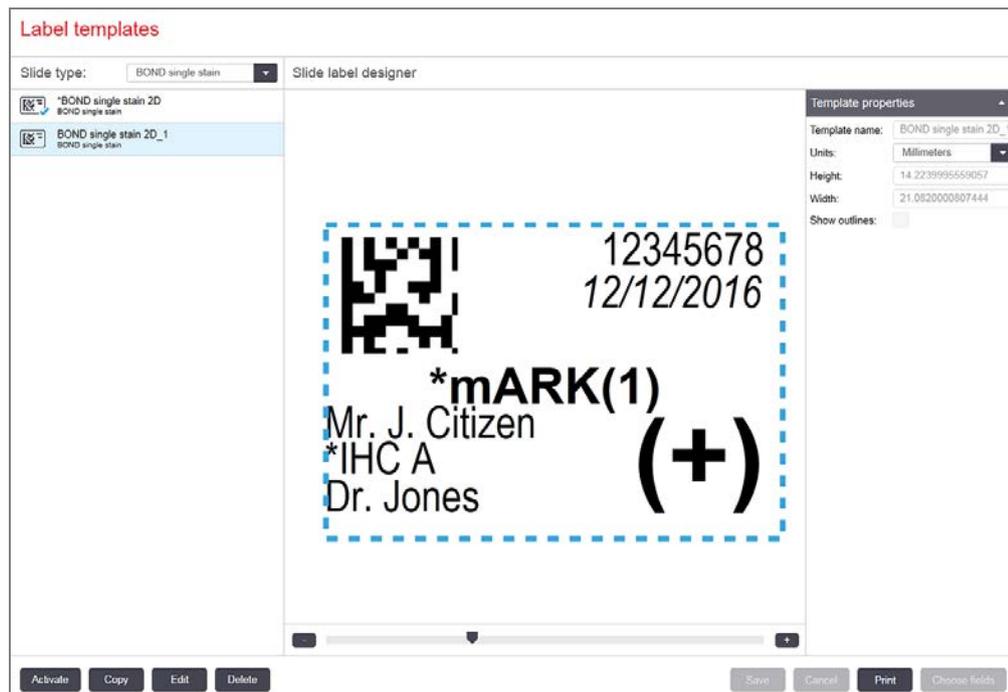

- 3 In the **Select a Printer** dialog box, select the relevant printer and click **Print**.
- 4 Repeat Step 3, three to five times. Make sure all the characters are clearly and exactly printed on the label.
- 5 If the position of the image on the label is not correct refer to [10.6.3.3 Adjust Zebra Printer Calibration](#) or [10.6.3.4 Adjust Cognitive Printer Calibration](#).

## 10.6.3.3 Adjust Zebra Printer Calibration



The following procedure applies to all supported Zebra printers: TLP 3842, GX430t, and ZD421. There are some differences, which are described in the relevant settings.




For a BOND-ADVANCE installation, perform the following procedure on a BOND-ADVANCE terminal.

- 1 On the Windows taskbar, click the **Start** button and select **Devices and Printers**.
- 2 Right-click on the printer icon (for example **ZDesigner TLP 3842**) and select **Printer Properties**.

The system displays the Printer Properties dialog box as shown in [Figure 10-15](#).


- 3 Select the **Advanced** tab.

Figure 10-15: Printer Properties

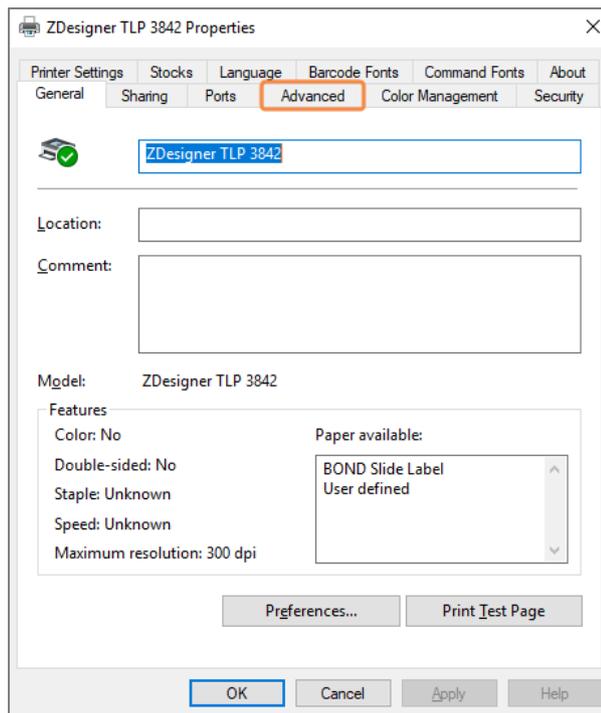

- 4 Click the **Printing Defaults...** button.

Figure 10-16: Printer Properties - Advanced tab

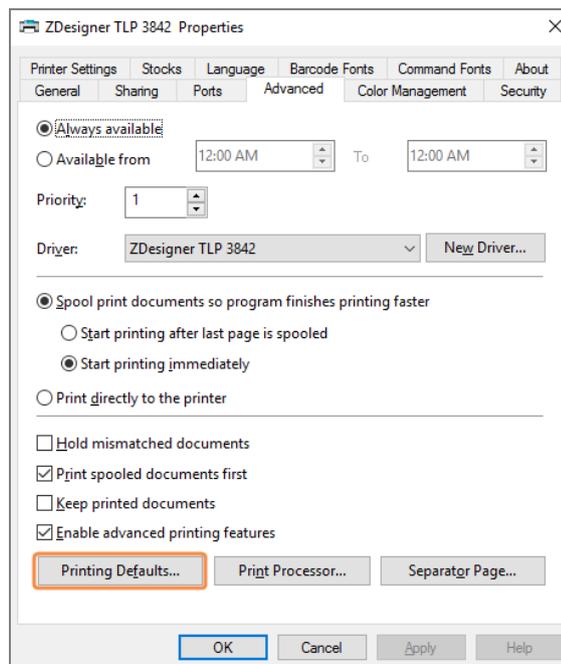


The system displays the Printing Defaults dialog box as shown in Figure 10-17.

- 5 This document refers to the printer settings in millimeters. Therefore, set the **Paper Format** to **mm**.

- 6 Select "BOND Slide Label" from the **Stocks** drop-down list.


Figure 10-17: Printing Defaults

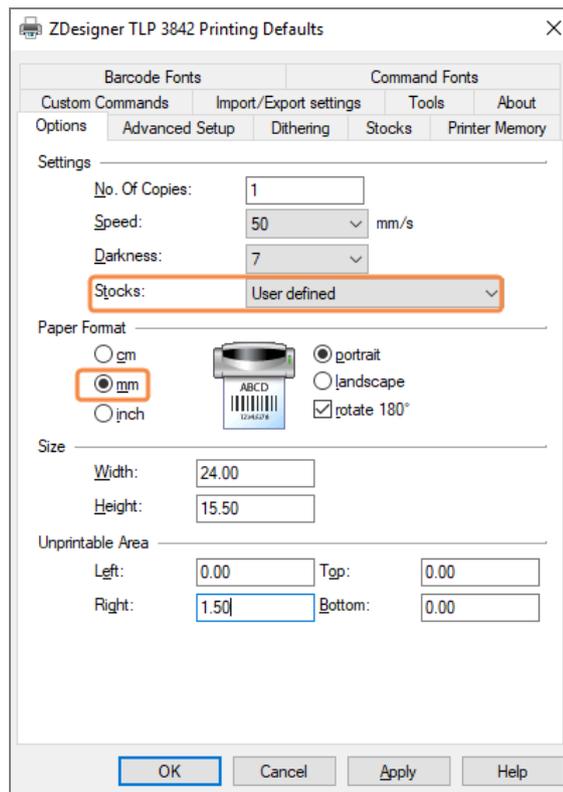

- 7 Select the **Stocks** tab.

- 8 Click the **Change...** button.

**Figure 10-18:** Printing Defaults - Stocks tab

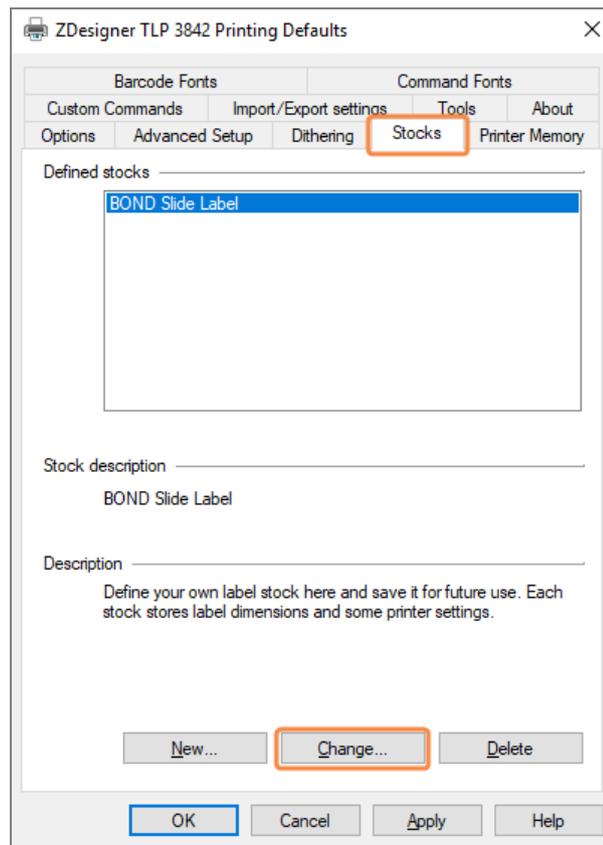

The system displays the **Define Stock** window as shown in [Figure 10-19](#).

- 9 Before changing the settings, it is recommended to return the printer to the default settings, as shown in the table below, and print some test labels.

Setting	TLP 3842	GX430t	ZD421
Label Width	24.00 mm	40.00 mm	22.00 mm
Label Height	15.50 mm	15.00 mm	18.00 mm
Unprintable Area - Left	0.00 mm	4.50 mm	0.00 mm
Unprintable Area - Right	1.50 mm	0.00 mm	0.00 mm
Unprintable Area - Top	0.00 mm	0.00 mm	0.00 mm
Unprintable Area - Bottom	0.00 mm	0.00 mm	0.00 mm

Figure 10-19: Define Stock dialog box

- If the left edge is clipped off, slightly decrease the value of **Right** under **Unprintable Area**, for example, from 1.50 mm to 1.00 mm.
- If the right edge is clipped off, slightly increase the value of **Right** under **Unprintable Area**, for example, from 1.50 mm to 2.00 mm.


- 10 Click **OK**.

- Repeat the label printing and adjustment procedure until the label is acceptable (no text is clipped off).



You might get an error message **Stock name already used by system form database** after clicking **OK**. In this case modify the **Name** in the **Define Stock** dialog box as shown in [Figure 10-20](#), then click **OK**.

Figure 10-20: Rename Label Stock

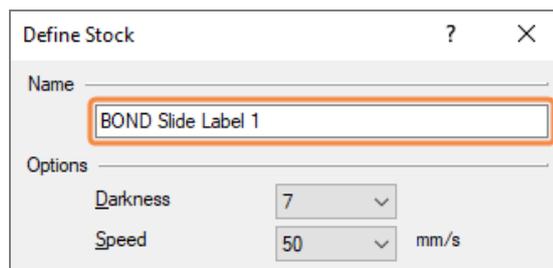


### 10.6.3.4 Adjust Cognitive Printer Calibration



For a BOND-ADVANCE installation, log in to the BOND-ADVANCE Controller as BONDDashboard. If the Dashboard is currently displayed, press **Alt+F4** to close it.

- On the Windows taskbar, click the **Start** button and select **Devices and Printers**.
- Right-click the printer icon (for example: **Cognitive Terminal 1**) and select **Printer Properties**.

Figure 10-21: Select Printer Properties

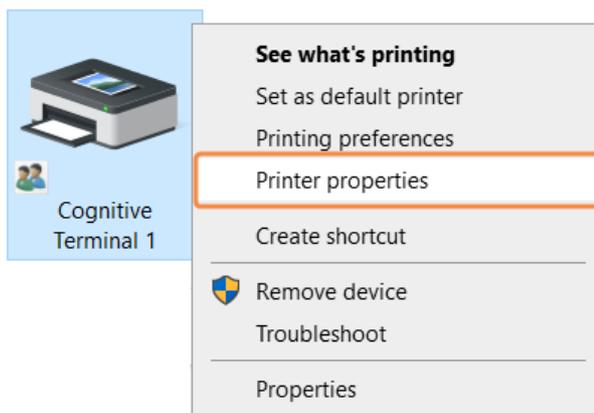


Do not select **Printing Preferences**, the dialog boxes are similar, but the settings do not update correctly.

The system displays the **Cognitive Printer Properties** dialog box as shown in [Figure 10-22](#).


- 3 Select the **Advanced** tab.

Figure 10-22: Cognitive Printer Properties

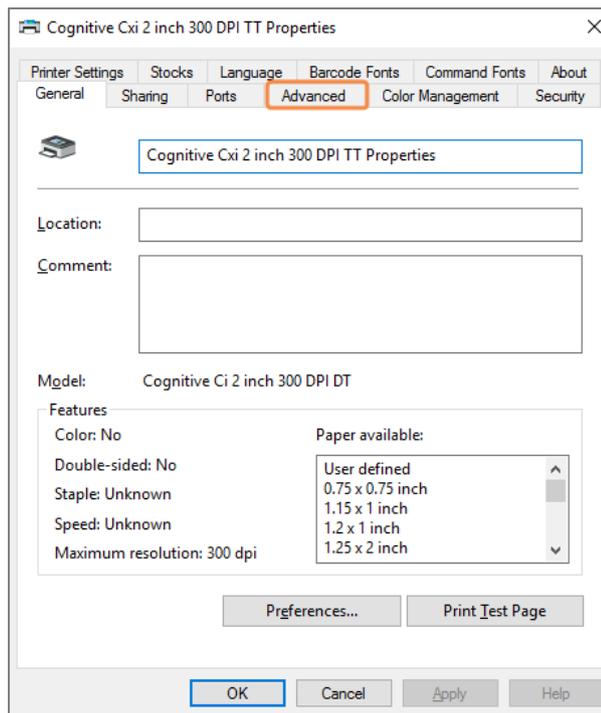

- 4 Click the **Printing Defaults...** button.


Figure 10-23: Advanced tab

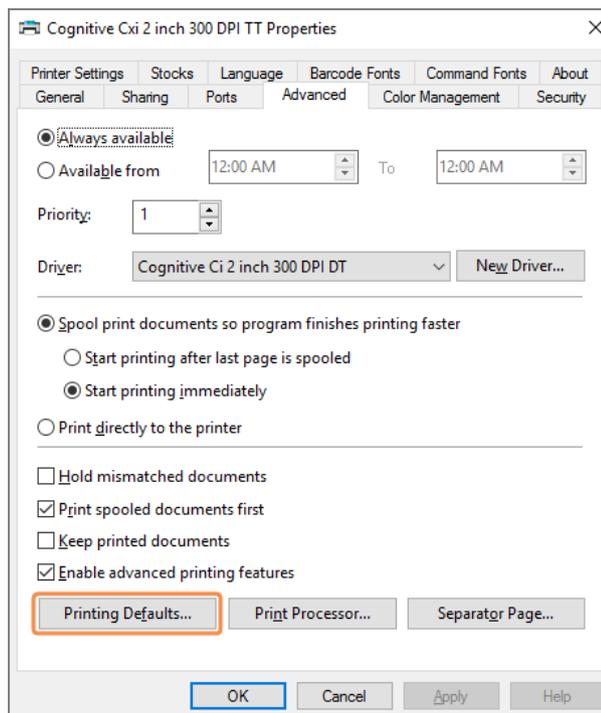

The system displays the **Printing Defaults** dialog box as shown in [Figure 10-24](#).

- 5 This document refers to the printer settings in millimeters. Therefore, set the **Paper Format** to **mm**.
- 6 Select "BOND Slide Label" from the Stocks drop-down list.


Figure 10-24: Printing Defaults dialog box

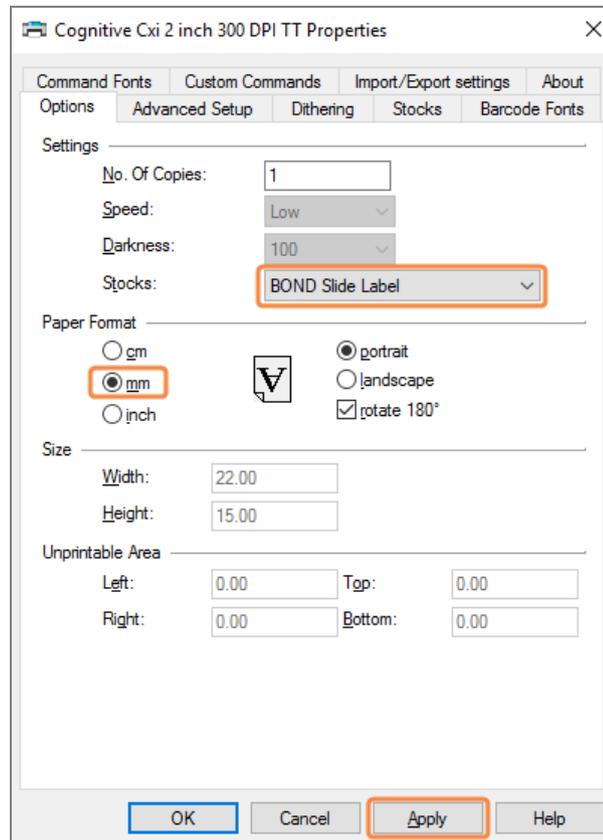

- 7 Select the **Stocks** tab.

8 Click the **Change...** button.

**Figure 10-25:** Printing Defaults - Stocks tab

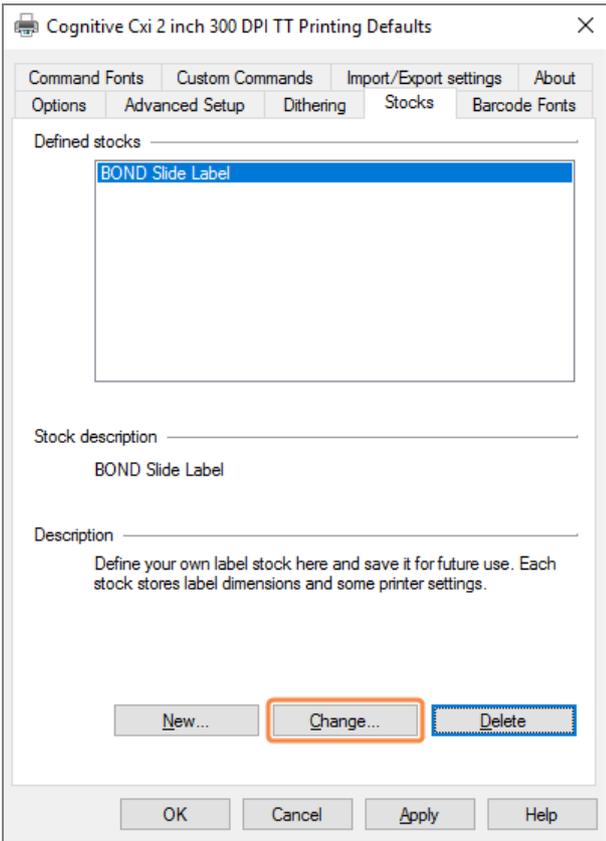

- 9 The system displays the **Define Stock** dialog box as shown in [Figure 10-26](#).
- If the left edge is clipped off, slightly decrease the value of **Right** under **Unprintable area**, for example, from 0.50 mm to 0.30 mm.
  - If the right edge is clipped off, slightly increase the value of **Right** under **Unprintable area**, for example, from 0.50 mm to 0.70 mm.
  - If the top or bottom edge is clipped off, refer to [10.6.3.5 Adjust Vertical Label Position on Cognitive Cxi Printer](#).

Figure 10-26: Define Stock dialog box

- 10 Click **OK**.



You might get an error message **Stock name already used by system form database** after clicking **OK**. In this case, modify the **Name** in the **Define Stock** dialog box as shown in [Figure 10-27](#), then click **OK**.

Figure 10-27: Rename Label Stock

- 11 Print a label to check the result. Repeat the procedure until the label is acceptable (no text is clipped off).


## 10.6.3.5 Adjust Vertical Label Position on Cognitive Cxi Printer

- 1 If the position of the label is too high or low, select the **Advanced Setup** tab on the **Printing Defaults** dialog box as shown in [Figure 10-28](#).
  - If the top edge is clipped off, slightly increase the value of **Distance Advance** under **Present Label**, for example, from 0.00 mm to 1.00 mm.
  - If the bottom edge is clipped off, slightly increase the value of **Distance Reverse** under **Present Label**, for example, from 0.00 mm to 1.00 mm.



Apply the adjustments to one setting only. If there is already a value in **Distance Advance**, and the bottom edge is clipped off, decrease the **Distance Advance** value rather than increasing the value of **Distance Reverse**. One value remains at zero and the other value controls the position.

Figure 10-28: Advanced Setup tab

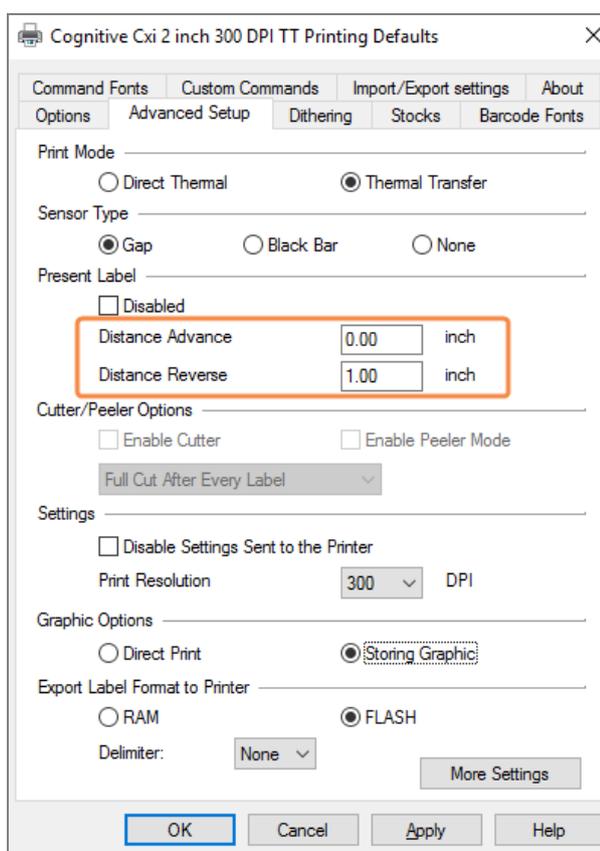

- 2 Click **OK**.
- 3 Print a label to check the result. Repeat the procedure until the label is acceptable (no text is clipped off).

# 11 LIS Integration Package (on BOND Controller)

The optional BOND LIS integration package (LIS-ip) connects the BOND system to any compatible Laboratory Information System (LIS). The LIS-ip passes case and slide information from the LIS to the BOND system and the BOND system returns processing information via the LIS-ip to the LIS.

The LIS-ip is highly configurable and can work with many different LIS types and laboratory workflows. The LIS-ip can be configured to provide seamless integration between the LIS and the BOND system allowing automatic recognition of LIS slides, which eliminates the need for slide relabeling. See [11.8 Workflows](#) for a general overview of the workflows available.

Leica Biosystems arranges comprehensive site-specific training for each installation.

Refer to the following sections for BOND LIS-ip information:

- Terms relating to LIS-ip operation  
Refer to [11.1 LIS Terminology](#)
- Details of additional software functions  
Refer to [11.2 Additional Software Features](#)
- An overview of LIS connection and configuration  
Refer to [11.3 LIS Connection and Initialization](#)
- A description of LIS error indication and recovery  
Refer to [11.4 LIS Notifications](#)
- A reference list of case and slides data  
Refer to [11.5 Case and Slide Data Requirements](#)
- A description of slide status data the BOND LIS-ip is able to report to the LIS  
Refer to [11.6 Sending Slide Data back to the LIS](#)
- A reference to slide label requirements  
Refer to [11.7 Slide Labels](#)
- An overview of typical LIS implementations  
Refer to [11.8 Workflows](#).

## 11.1 LIS Terminology

A number of new terms are required to describe LIS functionality and to differentiate between normal BOND system elements and LIS elements. These terms are described in the following list.

- LIS – Laboratory Information System; software that manages information related to a laboratory’s work.
- LIS-ip – the BOND LIS integration package, an optional add-on that enables the BOND system to work with an LIS.
- LIS slide – a slide created by the LIS and sent to the BOND system for processing.
- LIS case – a case created by the LIS and sent to the BOND system.
- Auto-ID slide label – a slide label that can be automatically recognized by the BOND system. These can be printed by the BOND system or the LIS, so long as a recognizable barcode format is used. See [11.3 LIS Connection and Initialization](#).
- Assisted-ID slide label – any slide label that cannot be automatically recognized on the BOND system.
- LIS slide label – a slide label from a printer connected to the LIS. An LIS slide label shows the LIS barcode and any other information configured for the label in the LIS.
- BOND-LIS slide label – a slide label for a slide created in the LIS but printed on a printer connected to the BOND system. A BOND-LIS label uses the BOND LIS slide label configuration, which can be edited using the BOND software.
- Accession number – a common LIS term for a number or other ID that identifies a particular case. Accession number is equivalent to the BOND system “case ID”.
- Patient data – patient details that form a “case” on the BOND system.
- Demographic data – a common LIS term for patient data or case data.
- LIS barcode – a barcode assigned by the LIS that uniquely identifies each LIS slide.

## 11.2 Additional Software Features

LIS-enabled BOND systems have additional software features not found in the standard version. BOND LIS-ip systems retain all the features and functions of standard BOND software.

See:

- [11.2.1 LIS Status Icon](#)
- [11.2.2 LIS Cases](#)
- [11.2.3 LIS Slides](#)
- [11.2.4 Public Marker Names](#)
- [11.2.5 Priority Slides](#)
- [11.2.6 LIS Slide Data Fields](#)
- [11.7 Slide Labels](#)

## 11.2.1 LIS Status Icon

**Figure 11-1:** LIS status icon at the top right of the BOND software screen



BOND software with the LIS-ip includes the LIS status icon at the far right of the standard function bar. This shows the following:

- LIS connection status (refer to [11.3 LIS Connection and Initialization](#))
- LIS error indication (refer to [11.4 LIS Notifications](#))

## 11.2.2 LIS Cases

LIS cases are cases that are created in the LIS and then sent to the BOND system. In contrast, BOND cases are cases created in the BOND system.

- LIS cases contain the same property fields as BOND cases but no information can be edited once a case has been sent to the BOND system.
- The BOND system automatically allocates a unique case number to every LIS case.
- The LIS accession number or case ID becomes the case ID within the BOND system.
- If this case ID is the same as that of an existing BOND case the new LIS case is rejected. You must change the case ID in the LIS.
- If the case ID and patient name of a new LIS case are the same as those of an active LIS case, already listed on the **Slide setup** screen, the existing case is automatically used. The slides in the “new” case are added to those in the existing case. If the case IDs are the same but the patient names different, the new case is rejected.
- If the case ID and patient name of an LIS case are the same as those of an expired or deleted LIS case in the BOND system, either the existing case is resurrected or the new case rejected, depending on your setting in the administration client LIS screen (see [Duplicate Case ID \(on page 231\)](#)).
- Slides added to an LIS case using the BOND software are created as BOND slides.
- LIS cases have the same default preparation protocol and dispense volume as BOND cases, as set in the administration client (see [10.5.2 Case and Slide Settings](#)).

## 11.2.3 LIS Slides

LIS slides are slides that were created in the LIS and then sent to the BOND system. In contrast, BOND slides are slides created in the BOND system, either in a BOND case or an LIS case.

LIS slides can be identified in the slide list by their label color: LIS slides have a gray label.

**Figure 11-2:** LIS slide (left) and single-stain routine BOND slide (right)



The following points apply to LIS slides:

- Labels printed from the LIS typically include a barcode. Provided the barcode is in one of the six formats supported by the BOND system, and the BOND system has been configured to read that format, then the BOND system can identify the slide when loaded. Refer to [11.3 LIS Connection and Initialization](#).
- Labels printed from the BOND system for LIS slides use the BOND LIS slide label configuration. Refer to [10.3 Labels](#).
- LIS slides can include additional LIS-specific fields. Refer to [11.2.6 LIS Slide Data Fields](#).
- Slide properties originating from the LIS cannot be edited using the BOND software.
- When the BOND software is used to copy an LIS slide, the copy is created as a BOND slide with a BOND slide label configuration. All LIS-specific fields are removed and all fields become editable.

## 11.2.4 Public Marker Names

Public marker names (for primary antibodies and probes) provide the link between markers specified by an LIS and those registered on the BOND system. When an LIS specifies a marker for a test, the BOND system uses the reagent with the identical public marker name for that test. The BOND system will reject an LIS-specified test if there is no public name corresponding to the LIS marker name.

Public marker names are specified using the **Public name** field in the **Edit reagent properties** dialog (refer to [8.2 Reagent Setup Screen](#)). This field only becomes visible when the LIS-ip is installed.

Each public name must be unique. Public names can be swapped between BOND reagents at any time and when this occurs slides already created are not affected.

## 11.2.5 Priority Slides

The LIS can specify priority slides that require urgent processing. Any case that includes a priority slide appears with a red bar on the **Slide setup** screen.



To prioritize a slide on BOND-PRIME Processing Module, load only the priority slides into the Preload drawer and then wait until those slides are transferred for processing, before loading other slides into the Preload drawer.

**Figure 11-3:** A case with priority slides highlighted red on the **Slide setup** screen

Case ID	Patient name	Doctor name	Slides
LS0012 - 45216	Shady, Albert	Joseph	1
20130416-ISHRefine	Benjamin Hightower	Kevin Pannell	10
20130416-IHC	Fannie Hurley	Arthur Josey	10



Currently, a priority LIS case is initially added to the bottom of the list. The case only displays at the top of the list in subsequent sessions of the clinical client.

The priority slides are marked with a red "P".

**Figure 11-4:** A priority LIS slide as it appears in the **Slide setup** screen



## 11.2.6 LIS Slide Data Fields

In addition to the standard slide properties, BOND LIS-ip has seven configurable data fields that can be set up to display selected information from the LIS. Basic connectivity is set up by the Leica Biosystems service representative during installation, however once this is in place users can choose to display the fields or not, and can set the name of each field – see [LIS Slide Data Fields \(on page 231\)](#).

The fields are displayed on a special **LIS** tab in the **Slide properties** dialog, and can also be printed on slide labels (see [10.3 Labels](#)). They are for reporting purposes only and have no effect on slide processing.

## 11.3 LIS Connection and Initialization

Each BOND LIS-ip module must be installed by an authorized Leica Biosystems representative who will customize the operation in accordance with individual laboratory requirements.

The BOND system can be configured to read any of the following barcode formats:

2D Barcodes	
QR	
Aztec	
Data Matrix	

When the LIS module is installed, an LIS icon appears at the top right of the BOND software screen to indicate connection status ([Figure 11-5](#)).

**Figure 11-5:** LIS not connected (left) and connected (right)



## 11.4 LIS Notifications


The BOND software indicates LIS connection or data errors by displaying the LIS status icon at the top right of the BOND software screen (refer to [11.2.1 LIS Status Icon](#)). If there are any outstanding LIS notifications then a counter of the number of outstanding notifications is displayed. When a new notification event occurs the counter briefly flashes.

**Figure 11-6:** LIS status icon



To find notification details, right-click the status icon and select **Show LIS report** to open the **LIS service events** dialog. The dialog displays errors and any slides that were not successfully transferred. The reason for the error is also listed. Typical LIS errors include missing data, data conflicts (e.g. the same accession number used for different cases), or instances where the public marker is not registered on the BOND system (refer to [11.2.4 Public Marker Names](#)).

Figure 11-7: LIS service events dialog

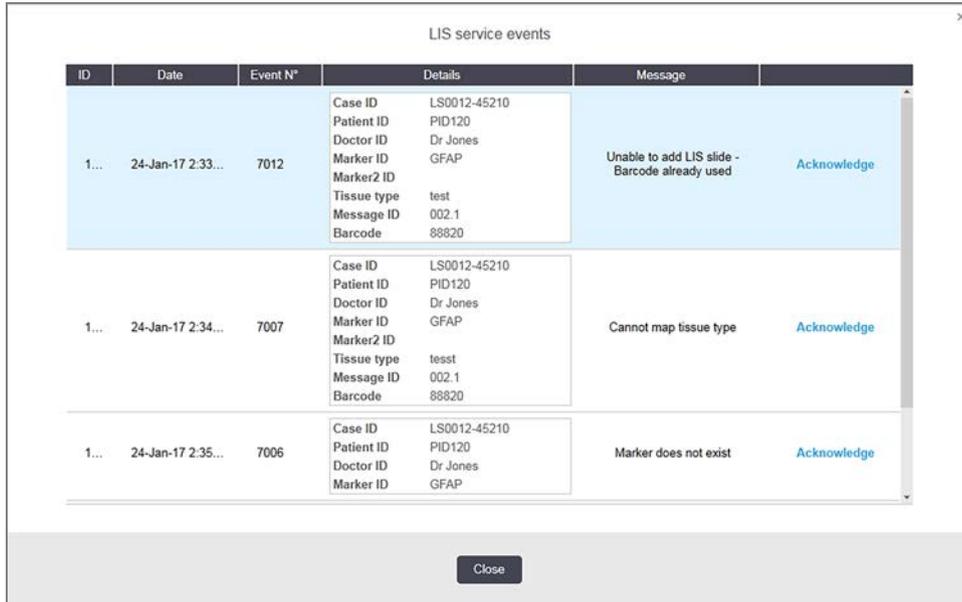

ID	Date	Event N°	Details	Message	
1...	24-Jan-17 2:33...	7012	Case ID LS0012-45210 Patient ID PID120 Doctor ID Dr Jones Marker ID GFAP Marker2 ID Tissue type test Message ID 002.1 Barcode 88820	Unable to add LIS slide - Barcode already used	Acknowledge
1...	24-Jan-17 2:34...	7007	Case ID LS0012-45210 Patient ID PID120 Doctor ID Dr Jones Marker ID GFAP Marker2 ID Tissue type tesst Message ID 002.1 Barcode 88820	Cannot map tissue type	Acknowledge
1...	24-Jan-17 2:35...	7006	Case ID LS0012-45210 Patient ID PID120 Doctor ID Dr Jones Marker ID GFAP	Marker does not exist	Acknowledge

Close

Depending on the LIS configuration, it may be possible to correct the errors and resubmit the case or slide. Where the LIS is unable to re-send the information, the case or slides can be created directly using the BOND software.

When you have read each error message click the associated **Acknowledge** button to remove the notification from the dialog.

When all error messages are cleared from the dialog, the notification counter disappears from the screen.



If required, you can still view the messages in the LIS service log by first clicking the Leica Biosystems logo at the top right of the administration client screen, to display the **About BOND** dialog. Then click **Service log** and select **\*LIS\*** from the drop-down **Serial No.** list. Optionally set a time span and then click **Generate** to generate the LIS service log.

## 11.5 Case and Slide Data Requirements

The data required by the BOND system from the LIS to import cases and slides is provided in the sections below (see [11.5.1 Case Data](#) and [11.5.2 Slide Data](#)).



Data in LIS cases and slides cannot be changed using the BOND software, except for slide comments.

### 11.5.1 Case Data

#### 11.5.1.1 Mandatory Fields

BOND Field Name	Description	Common LIS Terms
Case ID	A number or name identifying the case	Accession number Order number

#### 11.5.1.2 Optional Fields

BOND Field Name	Description	Common LIS Terms
Patient name	The name of the patient	Patient name Lab assigned ID (labAssId)
Doctor	The referring physician	Doctor name and/or ID Attending doctor Ordering physician

## 11.5.2 Slide Data

### 11.5.2.1 Mandatory Fields

BOND Field Name	Description	Common LIS Terms	Comments
Marker	Primary antibody (IHC) or Probe (ISH)	Primary antibody (IHC) Probe (ISH) Marker (either) Stain	<p>The public name provides the link between markers specified by an LIS and those registered on the BOND system. A public name must be specified for each marker that will be specified in the LIS. See <a href="#">11.2.4 Public Marker Names</a>.</p> <p>Each marker has default staining and pretreatment protocols, which can be changed using the BOND software if required.</p>

### 11.5.2.2 Optional Fields

BOND Field Name	Description	Common LIS Terms	Comments
[LIS barcode] <b>Note:</b> The barcode is not visible to the user on the BOND system	A unique ID barcode given to each LIS slide (IDs of deleted slides cannot be reused)	Barcode	A complete ID barcode must be supplied for the BOND system to recognize a slide. This is required when using the LIS workflow 1 (see <a href="#">11.8 Workflows</a> ).
Tissue type	Test or control tissue (positive or negative)	Test type	If this information is not supplied by the LIS, it defaults to "Test". See <a href="#">6.2.1 Control Tissue</a> .
Comments	Any comment or instruction relating to the slide	Comment	If an update to an LIS slide is sent by the LIS, then any new slide comments will be appended to existing slide comments.

## 11.6 Sending Slide Data back to the LIS

The BOND LIS-ip is able to report slide status to the LIS. BOND LIS-ip can report the following information:

- Slide created – the specified slide has been created within the BOND software
- Slide printed – a label has been printed for the specified slide
- Slide in progress – the specified slide is being processed
- Slide processed – the specified slide has completed processing (with or without errors)
- Slide deleted – the specified slide has been deleted from the BOND system.

## 11.7 Slide Labels

Each physical slide requires an identification label so that it can be matched to the correct case and test information. In the most convenient workflow LIS slides have labels printed by the LIS (“LIS slide labels”) and these labels are recognized by the BOND system. However, this is only possible if:

- 1 the LIS provides a unique barcode for each slide to the BOND system, and
- 2 the LIS printer uses one of the barcode formats supported by the BOND system.

If your LIS does not meet these requirements, then the BOND system can create its own labels for LIS slides – “BOND-LIS slide labels”. In this case you can optionally set the BOND system so that it will only process LIS slides if they have had labels printed by the BOND system. This is set in the administration client **LIS** screen – see [10.2 LIS](#).

Alternatively, labels from a third party labeler or handwritten, can be used. These labels need to be manually identified on the BOND system before processing (see [5.1.5.2 On-Board Manual Slide Identification](#)).

## 11.8 Workflows

While each LIS-ip implementation is highly customized, it is still helpful to provide some general descriptions of BOND LIS-ip workflows based on the major LIS-ip options. The following table shows four workflows. Other workflows are also possible. Comprehensive site-specific training is provided for each installation.

Workflow	Data from LIS	Data entered on the BOND system	Labels printed on	Identification
1	Case and slide data (with LIS barcode)	None	LIS	Automatic
2	Case and slide data	None	BOND system	Automatic
3		Additional slide	BOND system	Automatic
4		None	External	Assisted

Workflow 1 is the most convenient as it provides seamless integration between the LIS and the BOND system. The BOND system automatically recognizes LIS slides and processing can begin immediately without having to relabel the slides or enter additional information.

# 12 Cleaning and Maintenance (BOND-III and BOND-MAX only)



For cleaning and maintenance procedures related to the BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual.



**WARNING:** Always switch the processing module off when performing cleaning or maintenance tasks (except when running an aspirating probe clean or bulk fluid robot clean).



**WARNING:** Some of the reagents used in immunohistochemistry and in situ hybridization are hazardous. Ensure you have received adequate training for this procedure before continuing:

- 1 Wear latex or nitrile gloves, safety glasses, and other suitable protective clothing when handling reagents or cleaning the processing module.
- 2 Handle and dispose of reagents and condensate in accordance with all procedures and government regulations that apply at the laboratory facility.



**WARNING:** The processing modules have heaters and heated surfaces that can be ignition dangers if flammable materials are placed in close proximity:

Do not place flammable materials on or near the heaters.

Do not place flammable materials on any hot surfaces on the processing module.

Ensure all bulk container caps are properly sealed after refilling or emptying.



**WARNING:** Avoid contact with slide staining assemblies and their surrounds. These may be very hot and cause severe burns. Allow twenty minutes after the cessation of operation for the slide staining assemblies and their surrounds to cool.



**CAUTION:** Clean all removable components by hand only. To avoid damage, do not wash any component in an automatic dishwashing machine. Do not clean any part with solvents, harsh or abrasive cleaning fluids, or harsh or abrasive cloths.

This chapter gives procedures for cleaning and maintenance. In the clinical client there is a maintenance screen for each processing module in the system. Click a processing module tab at the left-hand side of the main window to display its **System status** screen, and then click the **Maintenance** tab.

For more information, see [5.3 Maintenance Screen](#). Whenever you use the BOND system, look out for leaks or worn or damaged parts. If there are instructions in this chapter to repair or replace the worn or faulty part, follow these. Otherwise, contact customer support.

## Preventative Maintenance

In addition to the regular maintenance tasks listed in this chapter (carried out by users), BOND-III and BOND-MAX processing modules should be serviced regularly by a Leica Biosystems service representative.

For BOND-III and BOND-MAX, the BOND software notifies you to organize a preventative maintenance service for each processing module once a year or every 15600 slides (whichever comes first).



The count is reset with the **Maintenance complete** button on the **Processing modules** tab in the administration client ([10.6.1 Processing Modules](#)).

This chapter has the following sections:

- [12.1 Cleaning and Maintenance Schedule](#)
- [12.2 Bulk Containers](#)
- [12.3 Covertiles](#)
- [12.4 Slide Staining Assembly](#)
- [12.5 Restart Processing Module](#)
- [12.6 Aspirating Probe](#)
- [12.7 Wash Block and Mixing Station](#)
- [12.8 Covers, Doors and Lid](#)
- [12.9 ID Imager](#)
- [12.10 Drip Trays](#)
- [12.11 Slide Trays](#)
- [12.12 Bulk Fluid Robot Probes \(BOND-III only\)](#)
- [12.13 Syringes](#)
- [12.14 Power Supply Fuses](#)

## 12.1 Cleaning and Maintenance Schedule



Use the schedule below if you stain up to about 300 slides a week per processing module. If you process more than this contact customer support for a customized schedule.

Task	Section
<b>Daily – Start of Day</b>	
Check bulk waste containers are no more than half full*	12.2
Check bulk reagent containers are filled with adequate reagent for the days staining*	12.2
<b>Daily – End of day</b>	
Clean Covertiles	12.3
<b>Weekly</b>	
Clean slide staining assemblies*	12.4
Check Covertile clamps	12.4
Restart processing modules	12.5
Wipe the main robot aspirating probe	12.6
Check wash blocks and mixing station– clean or replace if necessary	12.7
Clean covers, doors (where fitted) and lid	12.8
Clean ID imager	12.9
Clean handheld barcode scanner	13.1
<b>Monthly</b>	
Clean all drip trays*	12.10
Replace mixing station	12.7
Clean bulk reagent containers	12.2
Clean bulk waste containers	12.2
Clean slide trays	12.11
Clean bulk fluid robot probes (BOND-III)	12.12
Clean slide labeler	13.2
Check syringes	12.13
<b>When prompted</b>	
Clean main robot aspirating probe	12.6.1
Replace syringes (Contact Leica Biosystems customer support)	12.13

\* Carry out these tasks more frequently than scheduled if required.

## 12.1.1 Cleaning and Maintenance Checklists

On the next page the maintenance schedule is reproduced in a table designed to print and use as a checklist. Areas are provided to record the lot numbers for BOND Wash, ER1, ER2 and Dewax solution. Check or initial the remaining cells as the tasks are completed.

# Cleaning and Maintenance Schedule

	Mon	Tues	Wed	Thurs	Fri	Sat	Sun
<b>DAILY</b>							
Check bulk reagent containers	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
BOND wash lot number							
ER1 lot number							
ER2 lot number							
Dewax solution lot number							
Check waste containers	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Clean Covertiles	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<b>WEEKLY</b>		For BOND-MAX:					
Clean slide staining assemblies*	<input type="checkbox"/>	<ul style="list-style-type: none"> <li>If there is only one cap on the external waste container, disconnect the cable and fluid lines before unscrewing.</li> <li>If bulk containers are opaque, lift the ends of the containers in position to estimate the volume – it is not necessary to remove containers from the processing module.</li> </ul>					
Check Covertile clamps	<input type="checkbox"/>						
Restart PMs	<input type="checkbox"/>						
Wipe the aspirating probe	<input type="checkbox"/>						
Check wash block & mixing station	<input type="checkbox"/>						
Clean covers, doors (where fitted) and lid	<input type="checkbox"/>						
Clean ID imager	<input type="checkbox"/>						
Clean handheld scanner	<input type="checkbox"/>						
<b>MONTHLY</b>		*Clean more frequently than scheduled if required					
Clean drip trays*	<input type="checkbox"/>						
Replace mixing station	<input type="checkbox"/>						
Clean bulk reagent containers	<input type="checkbox"/>						
Clean bulk waste containers	<input type="checkbox"/>						
Clean slide trays	<input type="checkbox"/>						
Clean bulk fluid robot probes (BOND-III only)	<input type="checkbox"/>						
Clean slide labeler	<input type="checkbox"/>						
Check syringes	<input type="checkbox"/>						
<b>WHEN PROMPTED</b>		For week starting _____					
Clean aspirating probe	<input type="checkbox"/>	to _____					
Replace syringes (Contact Leica Biosystems customer support)	<input type="checkbox"/>	For month of _____					

## 12.2 Bulk Containers



**WARNING:** Some of the reagents used in immunohistochemistry and in situ hybridization are hazardous. Ensure you have received adequate training for this procedure before continuing:

- Wear latex or nitrile gloves, safety glasses, and other suitable protective clothing when handling reagents or cleaning the processing module.
- Handle and dispose of reagents and condensate in accordance with all relevant procedures and government regulations that apply at the laboratory facility.



**WARNING:** Some of the reagents used on BOND Processing Modules are flammable:

- Do not place a flame or ignition source near the processing modules.
- Ensure all bulk container caps are properly sealed after refilling or emptying.

Check bulk container levels daily (at least), and clean the bulk containers every month. See details:

- [12.2.1 Checking Container Levels](#)
- [12.2.2 Replenishing or Emptying Bulk Containers](#)
- [12.2.3 Cleaning Bulk Containers](#)
- [12.2.4 External Waste Container \(BOND-MAX only\)](#)

### 12.2.1 Checking Container Levels

Check bulk container levels at the start of each day. Also check before starting overnight or extended runs. High-turnover laboratories may need to schedule two bulk container checks daily.

On BOND-III and current-model BOND-MAX Processing Modules (and all BOND-MAX external waste containers), liquid levels are visible through the container walls. For BOND-MAX models with opaque containers, lift the ends of the containers in position to estimate the volume – it is not necessary to remove them from the processing module, as this will trigger a fluidics prime when they are returned.

Icons on the **System status** screen give an indication of bulk container levels for BOND-III, and are used for notifications of high waste or low reagent levels on the BOND-MAX. Use the icons only to confirm levels and/or for viewing notifications – they do not replace daily physical checks.



BOND-III Processing Modules are fitted with a bulk container lighting system (see [Bulk Container Lighting System \(BOND-III\) \(on page 52\)](#)).

Fill or empty containers under the following conditions:

- Empty waste containers that are more than half full
- Refill reagent containers to ensure there is adequate reagent.

See [12.2.2 Replenishing or Emptying Bulk Containers](#).



**WARNING:** Check bulk container levels and empty or fill, as appropriate, at the start of each day (more frequently if required – see instructions above). Failure to do so can result in runs being paused, which can compromise staining.

## 12.2.2 Replenishing or Emptying Bulk Containers

When you check bulk container levels, empty waste containers that are more than half full, and fill reagent containers to ensure there is adequate reagent. Always wipe any spills that occur when filling or emptying bulk containers. Clean the outside of the containers and caps before returning to the processing module.

See separate emptying and refilling instructions below. The [12.2.2.5 During Runs](#) section has instructions if you need to empty or fill a container during a run.

- [12.2.2.1 Refill Bulk Reagent – BOND-III](#)
- [12.2.2.2 Empty Hazardous Waste – BOND-III](#)
- [12.2.2.3 Empty Standard Waste – BOND-III](#)
- [12.2.2.4 Empty Hazardous Waste or Refill Bulk Reagent – BOND-MAX](#)
- [12.2.2.5 During Runs](#)

See [12.2.4 External Waste Container \(BOND-MAX only\)](#) for instructions to empty the BOND-MAX external container.



**WARNING:** Always return refilled or emptied containers to the same locations on the processing module. Failure to do so can contaminate reagents and compromise staining.



**WARNING:** Do not change the type of reagent in bulk reagent containers. Doing so could lead to contamination and compromise staining.



**CAUTION:** Do not force bulk containers back into position, as this can damage the container and liquid sensor.

### 12.2.2.1 Refill Bulk Reagent – BOND-III

BOND-III bulk reagent containers can be filled whilst in the processing module. There is no need to remove them from the bulk container cavity.

- 1 Unscrew the bulk reagent container cap and fill the container.
- 2 When container is full, replace the cap and tighten.



**WARNING:** If you use a funnel when adding reagent to containers on BOND-III Processing Modules, ensure that the funnel is clean. Failure to do so can contaminate reagents and compromise staining.

## 12.2.2.2 Empty Hazardous Waste – BOND-III

- 1 Ensure the processing module is not in operation. (However, if there is a notification that the waste container is full during a run, follow these instructions to empty the container – see also [12.2.2.5 During Runs.](#))
- 2 Pull the container out of the bulk containers cavity.
- 3 Open the cap and dispose of the waste in accordance with approved procedures at your facility.
- 4 Replace the cap and tighten.
- 5 Return the container to the processing module. Push in gently until you feel the container connector align with the connector at the back of the cabinet. Then push the container firmly until the connector fully engages, to ensure a leak-tight connection.

## 12.2.2.3 Empty Standard Waste – BOND-III

As there are two standard waste containers you can remove a full container (with the container icon showing full on the **System status** screen) at any time, including during processing (see [5.1.3.6 Bulk Container Status](#)). However, never remove both bulk waste containers while the processing module is in operation, and if a container is not showing as full on the **System status** screen we recommend to wait until processing is finished before removing it. When it is safe to remove a bulk waste container, follow instructions as for emptying hazardous waste from step (2) above.


**Figure 12-1:** Returning the waste container to its position



## 12.2.2.4 Empty Hazardous Waste or Refill Bulk Reagent – BOND-MAX

- 1 Ensure the processing module is not in operation. (However, if there is a notification that the waste container is full during a run, follow these instructions to empty the container – see also [12.2.2.5 During Runs.](#))
- 2 Pull the container out of the bulk containers cavity.

**Figure 12-2:** BOND-MAX hazardous waste container (left) and bulk reagent container (right)

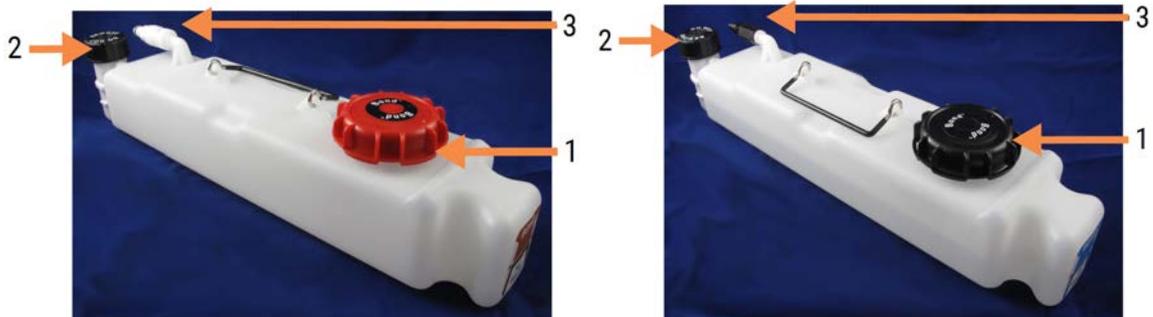

### Legend

- 1 Fill/empty cap (blue cap on later hazardous waste containers)
- 2 Liquid level sensor cap
- 3 Connector

- 3 Fill or empty the container:

- For waste, open the fill/empty cap (item 1 in [Figure 12-2](#)) and dispose of the waste in accordance with approved procedures at your facility.
- For bulk reagent, place the container on a level surface, open the fill/empty cap (item 1 in [Figure 12-2](#)), and fill to just below the bottom of the neck that the cap screws onto.



**CAUTION:** Do not remove the liquid level sensor cap from a bulk container as it can be damaged. Empty and refill bulk containers through the fill/empty cap only.

- 4 Replace the cap and tighten.
- 5 Return the container to the processing module. Push in gently until you feel the container connector align with the connector at the back of the cabinet. Then push the container firmly until the connector fully engages, to ensure a leak-tight connection.

## 12.2.2.5 During Runs

If daily bulk container checks are made (with additional checks before overnight and extended runs, and regular additional checks for high turnover laboratories) waste containers should never fill up and reagent containers never run out during processing. However, if either of these occur during a run, you must empty or fill the containers concerned. Read the instructions below to be sure of the correct procedure.

### Waste Container Full – BOND-MAX

If a waste container becomes nearly full during a run, an Information symbol  will display on the relevant container icon on the **System status** screen.

Act immediately to empty the container. Observe all standard safety precautions and waste disposal procedures at your facility. By acting quickly you may avoid having the run pause, or reduce the time it is paused. Pausing a run can compromise staining.

If a run pauses while you are emptying a container, or you continue to operate until the processing module is automatically paused, an alarm  (flashing) or warning symbol  appears on the container icon. Return the emptied container as soon as possible, taking note of the instructions and precautions mentioned above.

Generate a Run Events Report to see the effects the pause had on the run.

### Reagent Container Empty – BOND-MAX

If a bulk reagent container becomes nearly empty, an Information symbol  will display on the relevant container icon on the **System status** screen.

- 1 Open the **Protocol status** screen and view the current and upcoming steps for each run on the processing module.
- 2 If any runs are currently using the bulk reagent that is low, or will use it soon, wait for the steps that use the reagent to finish.
- 3 Once steps that use the bulk reagent have finished, remove the container, refill, and replace as quickly as possible (while observing all standard safety precautions).

To save time, you may not need to fill the container up to its usual, maximum level



**WARNING:** If a BOND-MAX bulk container needs filling during processing always check the **Protocol status** screen and confirm that the container is not being used, or is not about to be used. Failure to do so may compromise slides being processed. Return the container immediately after filling.

## 12.2.3 Cleaning Bulk Containers

The following cleaning procedures should be completed monthly.

### 12.2.3.1 ER1, ER2, BOND Wash and Deionized Water Containers

- 1 Empty the ER1, ER2, BOND Wash and the deionized water bulk reagent containers.
- 2 Wash containers with an industrial strength detergent, then rinse thoroughly with deionized water.
- 3 Allow the containers to dry before refilling with fresh reagent and returning to the processing module.

### 12.2.3.2 Dewax and Alcohol Containers

- 1 Empty the dewax and alcohol bulk reagent containers. Dispose of the dewax and alcohol in the bulk reagent containers in accordance with approved procedures at your facility.
- 2 Pour a small volume of fresh reagent into each container and move the liquid around the container walls to remove any contaminants. Empty the container when completed. Dispose of the waste in accordance with approved procedures at your facility.



Never put water or detergents in the alcohol or dewax containers.

- 3 Refill the bulk container with fresh reagent and return to the processing module.

### 12.2.3.3 Bulk Waste Containers

- 1 Empty all waste from containers. Dispose of the waste in accordance with approved procedures at your facility.
- 2 Clean waste containers using a 0.5% bleach solution (w/v) or industrial strength detergent and rinse thoroughly with deionized water.
- 3 Return waste containers to the processing module.

## 12.2.4 External Waste Container (BOND-MAX only)

Empty the BOND-MAX 9L external standard waste container at the start of each day and check the level before overnight or extended runs. Empty when half full or over; use the white horizontal line on the container label as a guide to the half-full level - see [Figure 12-3](#).

**Figure 12-3:** BOND-MAX 9L external standard waste container



### Legend

- 
- 1 Fill/empty cap
  - 2 Half-full level

Clean the container monthly, as for other bulk containers (see [12.2.3 Cleaning Bulk Containers](#)).

- 1 Ensure that the processing module is not in operation. (However, if there is a notification that the waste container is full during a run, follow these instructions to empty the container – see also [12.2.2.5 During Runs](#).)
- 2 The container has connectors like those in [Figure 12-4](#) (note that some sensor connectors are black, not silver as shown):

**Figure 12-4:** External waste container connections



### Legend

- 
- 1 Liquid level sensor connector
  - 2 Fluid connector

- a Use your thumb to raise the red latch on the sensor connector (1) and pull the connector away from the cap.
- b Press the metal button on the fluid connector (2) and pull the connector away from the cap.

- 3 Remove the fill/empty cap to empty the container. Do not remove the cap with connectors. Dispose of the waste in accordance with approved procedures at your facility.
- 4 Replace the fill/empty cap and tighten firmly, and return to the processing module.
- 5 Press the fluid connector back onto the cap connection until it clicks into place.
- 6 Reconnect the sensor connector. Push the connector down to the base of the cap connection.



**WARNING:** When full, the external waste container is heavy.

Use correct lifting techniques when emptying the external waste container.



**CAUTION:** Always disconnect the sensor and fluid connectors before emptying a container, to avoid damage.

## 12.3 Covertiles

Clean Covertiles after each use (the Leica Biosystems Covertile Cleaning Rack can be used for this). Covertiles can be reused up to 25 times provided they are not damaged or heavily discolored, and provided they are cleaned properly. Discard Covertiles if damaged or if staining quality deteriorates.

### 12.3.1 Remove DAB Residue (Optional)

- 1 Soak for a minimum of 30 minutes in a fresh solution of 0.5% W/V sodium hypochlorite in DI water.
- 2 Remove, and dip in fresh DI water 10 times.
- 3 Complete a standard clean (see below).

### 12.3.2 Standard Cleaning (Mandatory)

- 1 Soak for a minimum of 10 minutes in 100% IMS (industrial methylated spirits), ethanol, or reagent-grade alcohol.
- 2 Agitate for 30 seconds and remove.
- 3 Dry:
  - wipe dry with lint-free cloth, or;
  - air dry.
- 4 Carefully inspect Covertiles for chips, cracks or warping. Discard if damaged in any way.

## 12.4 Slide Staining Assembly



**WARNING:** The processing modules have heaters and heated surfaces that can be ignition dangers if flammable materials are placed in close proximity:

- Do not place flammable materials on or near heaters.
- Do not place flammable materials on any hot surfaces on the processing module.
- Ensure all bulk container caps are properly sealed after refilling or emptying.



**WARNING:** Avoid contact with slide staining assemblies and their surrounds. These may be very hot and cause severe burns. Allow twenty minutes after the cessation of operation for the slide staining assemblies and their surrounds to cool.



**CAUTION:** Clean specified components by hand only. To avoid damage, do not wash any component in an automatic dishwashing machine. Do not clean any parts with solvents, harsh or abrasive cleaning fluids, or harsh or abrasive cloths.



**CAUTION:** Ensure the bulk fluid robots (BOND-III) are in the home position at the rear of the processing module, and not positioned along the slide staining assemblies before cleaning or removing the top plate.



**CAUTION:** Do not use Q-tips or other cotton-tipped applicators to clean inside the wash block holes or the slide staining assembly wicking posts, as the cotton tip can come off and cause a blockage.

### 12.4.1 Standard Cleaning

Clean the slide staining assemblies weekly, or more frequently if there is buildup visible.

Use a lint-free cloth moistened with 70% alcohol (as little as possible). For difficult-to-remove precipitate use BOND Wash Solution (as little as possible) then rinse with DI water.


For BOND-III wipe the bulk fluid robot guide rail (Item 3 in [Figure 12-6](#)).

Swing open the top plate (see [Removing a Top Plate \(on page 288\)](#)) and clean:

- Heater pads
- Drainage ports and wicking posts
- The areas between the heater pads
- The drip tray surrounding the pads

Always check that the drainage ports (including the small wicking posts on the rims of the ports) are clear of foreign material and have no scratches or other damage. Contact customer support if there is damage to these or any other components of the slide staining assemblies.

**Figure 12-5:** Slide staining assembly with top plate open

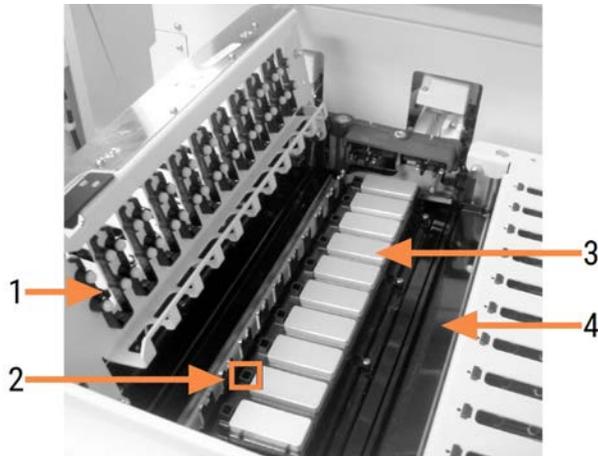

#### Legend

- 1 Covertile clamps
- 2 Drainage port and wicking posts
- 3 Heater pads
- 4 Drip tray

While the top plate is open inspect the Covertile clamps on the underside of the plate and ensure the spring feet move freely. If the clamp springs do not spring back when pressed contact customer support for replacement.

## Removing a Top Plate

- 1 Ensure the processing module is idle and turn the power off and there is no slide tray loaded.
- 2 Open the top plate by pushing down on the top plate and twisting the blue twist fasteners at either end (items 1 in [Figure 12-6](#) and [Figure 12-7](#)) a quarter turn anti-clockwise. Swing the top plate back on its hinges (when facing the processing module the right side of the top plate will lift open).

**Figure 12-6:** BOND-III top plate



#### Legend

- 1 Twist fasteners
- 2 Pivot hinges
- 3 Bulk Fluid Robot Guide Rail


Figure 12-7: BOND-MAX top plate

**Legend**

- 
- 1 Twist fasteners
  - 2 Pivot hinges

- 3 To fully remove the top plate (not required for routine cleaning), pull the spring-loaded pivot fasteners at each end of the plate (items 2 in [Figure 12-6](#) and [Figure 12-7](#)), then lift the plate away from the slide staining assembly.

Figure 12-8: Releasing the top plate pivot fastener

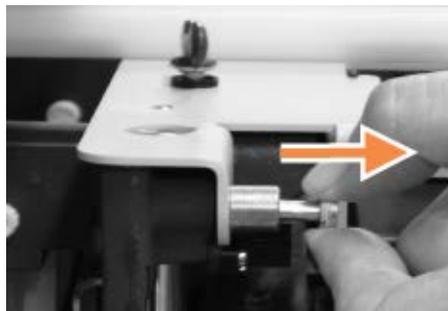

## Replacing a Top Plate



The BOND-III slide staining assembly top plates are numbered, always place the correct top plate on the correct slide staining assembly (when facing the processing module the slide staining assembly on the left is number one).

- 1 Locate the pivot points in the slide staining assembly. Hold the top plate in the open position, and place one of the pivot fasteners into the pivot point of the slide staining assembly.
- 2 Pull the other pivot fastener and place the end of the plate in position, and then release the fastener.
- 3 Close the top plate, checking that holes at each end of the plate correctly engage the locating pins.
- 4 Hold down the top plate and turn the twist fasteners clockwise. They should clamp firmly with a quarter turn clockwise.

## 12.4.2 Manually Unlocking Slide Staining Assemblies

Each slide staining assembly can be unlocked manually, for example to remove slides in a power failure.



**WARNING:** The slide staining assemblies contain moving parts that can cause serious injury. Before attempting to manually unlock the slide staining assemblies: turn the processing module power switch off, turn the mains power off, and disconnect the mains power supply plug at the wall.

- 12.4.2.1 BOND-III
- 12.4.2.2 BOND-MAX

### 12.4.2.1 BOND-III



**WARNING:** The syringe pump module (BOND-III) is heavy and can fall forward when released. Only operators who have been warned of the potential hazards and have received adequate training should carry out this procedure.

To manually unlock a slide staining assembly on the BOND:

- 1 Turn off the mains power and remove the power cable.
- 2 Unscrew the four hex screws attaching the syringe module cover using the 3 mm hex key provided. Remove the cover, for better access to the release pins and module handle.
- 3 Locate the two release pins next to syringe pumps one and four.

Figure 12-9: Location of release pins with unit open for access



- 4 Pull the two pins forwards towards you until they click and lower the module. Be careful not to pull or pinch any of the fluidics tubing on the syringe heads as the module moves forwards.
- 5 The syringe pump module will open enough to allow access to the slide staining assemblies.

- 6 Locate the manual release knob beneath the slide staining assembly.

**Figure 12-10:** Manual release knob



- 7 Turn the knob in the direction shown in [Figure 12-10](#). As you do the Covertiles will move over the slides and the whole assembly and tray move up.
- 8 Continue turning the release knob until you feel resistance. At this point it should be possible to remove the slide tray from the assembly.
- 9 Store your slides according to procedures at your facility.
- 10 Gently push the syringe pump module back into position, be careful not to pull or pinch any of the fluidics tubing on the syringe heads.
- 11 Ensure the two pins on either side of the module click back into the locked position.



**CAUTION:** Ensure the syringe module (BOND-III) is fully closed before starting a run or initializing the processing module. Failure to do so can result in damage to the syringes during operation.

- 12 Refit the syringe module cover and secure using the four hex screws.

**Protocol status** should be checked (see [5.2 Protocol Status Screen](#)) before powering on the processing module.

When the processing module is powered on, it will initialize, detect the state of the assemblies and take any actions necessary to ready them for use.

After initialization the slide staining assembly state will be unlocked and no steps will be displayed on the Protocol status screen. It may be possible to complete processing on the BOND-III, or finish the remaining steps manually.

## 12.4.2.2 BOND-MAX

To manually unlock a slide staining assembly for the BOND-MAX, do the following:

- 1 Turn off the mains power and remove the power cable.
- 2 Open the bulk containers door and remove the bulk containers.
- 3 Slide the tray at the top of the bulk containers cavity out.
- 4 Locate the manual release knob (see [Figure 12-10](#)) beneath the slide staining assembly.

- 5 Turn the knob in the direction shown in [Figure 12-10](#). As you do the Covertiles should be moved over the slides and the whole assembly and tray will move up.
- 6 Continue turning the release knob until you feel a resistance. At this point it should be possible to remove the slide tray from the assembly.
- 7 Store your slides according to procedures at your facility.
- 8 Clean the lower and upper drip trays, if necessary, then re-insert the upper tray into the bulk containers cavity – the end of the tray with the 45 degree bend goes to the front, with the angle upwards.
- 9 Re-insert the bulk containers.
- 10 Close the bulk containers cavity door.

**Protocol status** should be checked (see [5.2 Protocol Status Screen](#)) before powering on the processing module.

When the processing module is powered on, it will initialize, detect the state of the assemblies and take any actions necessary to ready them for use.

After initialization the slide staining assembly state will be unlocked and no steps will be displayed on the Protocol status screen. It may be possible to complete processing on the BOND-MAX, or finish the remaining steps manually.

## 12.5 Restart Processing Module

Each processing module should be turned off and restarted weekly. This is important as it allows the processing module to complete a self-diagnostic check of the system.

The single-seat BOND controller does not need to be turned off and restarted on a regular basis. However, if there is a noticeable slowing in the BOND software, you may need to restart the controller via the Windows Start Menu.

However, if you have a BOND-ADVANCE system, see [16.1 Restarting the BOND-ADVANCE System](#).

### Processing Module

For processing modules, ensure no runs are loaded, scheduled or processing, and turn off with the power switch on the right hand side of the processing module. Wait 30 seconds then turn back on. On startup the BOND system primes the fluidics system and runs a number of system tests (see [2.2.2 Processing Module Initialization](#)).

Note that you can run a partial prime of the fluidics system without powering down the processing module (see [Clean Fluidics](#)).

## Clean Fluidics

The **Clean fluidics** button on the **Maintenance** screen primes the fluidics lines from the bulk containers (part of the processing module initialization run at startup). Run the routine if you suspect blockages or air in the fluidics delivery system.

- 1 Ensure that the processing module is idle, with no runs loaded, scheduled, or processing.
- 2 In the clinical client, select the processing module's tab to display its **System status** screen.
- 3 Click the **Maintenance** tab, and then click the **Clean fluidics** button.
- 4 Click **Yes** at the confirmation prompt.
- 5 The fluidics system is primed, which may take several minutes.

## 12.6 Aspirating Probe

The aspirating probe is automatically cleaned in the wash block between contact with each reagent as part of normal operation. However, additional weekly wiping, and cleaning with the BOND Aspirating Probe Cleaning System, should also be carried out. The cleaning system's reagents are optimized for the BOND system, and the BOND software uses a cleaning protocol designed to maximize wash efficiency. The BOND software warns users when probe cleans and replacements are due.



**WARNING:** Do not move the main robot arm while the processing module is switched on. The robot can become misaligned, resulting in poor staining.

If the robot has been moved: power down the processing module, wait 30 seconds and then reinitialize.

See:

- [12.6.1 Cleaning the Aspirating Probe](#)
- [12.6.2 Running an Aspirating Probe Clean](#)

### 12.6.1 Cleaning the Aspirating Probe

Always turn off the processing module before wiping and take care not to bend the probe. Wipe the exterior of the aspirating probe weekly using a 70% alcohol solution on a lint-free cloth or with an alcohol pad. Inspect the tubing attached to the aspirating probe, and ensure that there are no kinks or objects inside the tubing. The tubing should be clean.

The BOND software notifies you to clean the probe with the BOND Aspirating Probe Cleaning System every 300 slides (see [12.6.2 Running an Aspirating Probe Clean](#)). The count is automatically reset when a clean is run or the probe is replaced successfully.



BOND Aspirating Probe Cleaning Systems should be registered with the BOND system when received in the same way as detection systems (see [8.3.3 Registering Reagents and Reagent Systems](#)). The software keeps a record of cleaning system usage, allowing 15 cleans from each system.



To maintain the efficacy of the reagents in cleaning systems only load them onto processing modules when they are to be used. You cannot clean the aspirating probe while any other reagents or reagent systems are loaded on the processing module, and it is not possible to start slide processing while a cleaning system is loaded on the processing module.

## 12.6.2 Running an Aspirating Probe Clean

Follow the instructions below to clean the aspirating probe with the BOND Aspirating Probe Cleaning System.


The cleaning protocol takes approximately 20 minutes to run.

- 1 Ensure that the processing module is idle, with no runs loaded, scheduled, or processing.
- 2 Remove all reagent or reagent system trays from the processing module.
- 3 Insert a BOND Aspirating Probe Cleaning System into the reagent tray on the processing module.
- 4 In the clinical client, select the processing module's tab to display its **System status** screen.
- 5 Click the **Maintenance** tab, and then click the **Clean aspirating probe** button.
- 6 Click **Yes** to start the clean when prompted.  
The cleaning protocol begins, indicated by the cleaning icon in the processing module tab.
- 7 Wait until notified that the clean is finished.
- 8 Remove the BOND Aspirating Probe Cleaning System from the reagent tray.
- 9 Click **OK** in the **Cleaning complete** dialog to continue normal operation.

## 12.7 Wash Block and Mixing Station

The mixing station contains six wells for mixing reagents. It fits as an insert in the wash block.

Figure 12-11: Top view of wash block with wash area (1) and mixing station (2) in place

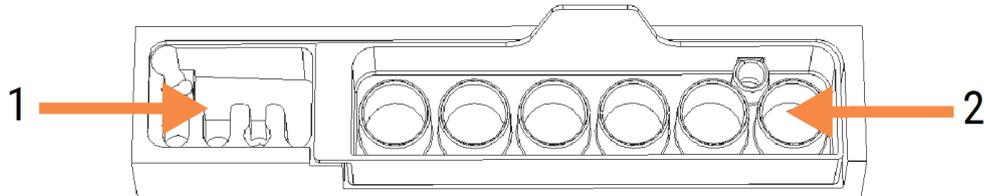

**WARNING:** Some of the reagents used in immunohistochemistry and in situ hybridization are hazardous. Ensure you have received adequate safety training before continuing.

Check the mixing station regularly for discoloration and general condition, and replace if necessary. Replace the station monthly as part of normal maintenance. Always ensure all runs are complete before removing.

To remove the mixing station, grasp the tab at the back of the mixing station and lift out.

### 12.7.1 Cleaning the Mixing Station

The mixing station can be reused until monthly replacement is due, provided it is not damaged or heavily discolored, and provided it is cleaned properly.

- 1 If cleaning is required, soak for a minimum of 30 minutes in a fresh solution of 0.5% W/V sodium hypochlorite in DI water.
- 2 Remove, and dip in fresh DI water 10 times.
- 3 Soak for a minimum of 10 minutes in reagent-grade alcohol.
- 4 Agitate for 30 seconds and remove.
- 5 Air dry.

### 12.7.2 Cleaning the Wash Block

Clean the wash block weekly using a lint-free cloth.



**CAUTION:** Do not use Q-tips or other cotton-tipped applicators to clean inside wash block holes – if the cotton tips come off they can block the holes.

## 12.8 Covers, Doors and Lid

Clean the covers, doors (where fitted) and lid of the processing module weekly with a duster or cloth.

Do not use any cleaning agents, if required use water to damp a lint-free cloth to dust the covers, doors and the lid to prevent accumulation of dirt.

If any of the covers, doors or the lid becomes deformed or damaged, contact customer support for a replacement.

## 12.9 ID Imager

The window of the ID imager on the main robot arm needs to be kept clean to ensure slides are properly identified. Every week, or if the imager frequently fails to properly image IDs, clean the window with a lint-free cloth moistened with 70% alcohol solution.

Figure 12-12: ID imager



## 12.10 Drip Trays

Clean drip trays monthly, or more frequently if there is spilled reagent or waste evident. Contact customer support if there is evidence of excessive spills or salt build-up on the trays.

- [12.10.1 BOND-III Bulk Container Drip Trays](#)
- [12.10.2 BOND-III Processing Module Drip Tray](#)
- [12.10.3 BOND-MAX Bulk Container Drip Tray](#)

## 12.10.1 BOND-III Bulk Container Drip Trays

BOND-III has two bulk container drip trays located beneath the bulk containers on the upper and lower levels of the processing module.

To clean the BOND-III bulk container drip trays use the following procedure:

- 1 Ensure that the processing module is not in operation.
- 2 Remove all bulk containers.
- 3 Remove the black covers that protect the weight sensors of each bulk container (see [Figure 12-13](#)). Wipe each cover with a cloth or gauze dampened with a 70% alcohol solution.

**Figure 12-13:** BOND-III bulk container drip trays showing the weight sensor covers



- 4 Wipe the drip trays with the 70% alcohol solution. Avoid contact with the exposed metal weight sensors.
- 5 Dry the drip trays with paper towel.
- 6 Wipe down all bulk containers and return to their correct positions.

## 12.10.2 BOND-III Processing Module Drip Tray

BOND-III has a third drip tray located beneath the processing module, as shown in [Figure 12-14](#) below.

**Figure 12-14:** The BOND-III Processing Module drip tray



Use the following procedure to access the processing module drip tray:

- 1 Locate the drip tray beneath the processing module (see [Figure 12-14](#)), and pull the tray outwards. Use two hands to support the weight of the tray and to prevent liquid from spilling.
- 2 Empty the tray contents and dispose of the waste in accordance with approved procedures at your facility.



The tray has a channel at the rear corner to aid with pouring and preventing spillage.

- 3 Wash the tray with a 70% alcohol solution, then return to its correct position.

## 12.10.3 BOND-MAX Bulk Container Drip Tray

BOND-MAX has a single drip tray located under the bulk containers in the bulk containers cavity.

Use the following procedure to access the bulk container drip tray:

- 1 Ensure that the processing module is not in operation and remove all bulk containers.
- 2 Remove the drip tray and wipe with a cloth or gauze dampened with a 70% alcohol solution.
- 3 Dry the drip tray with paper towel and return to its correct positions (curved edge at the front of the processing module).
- 4 Wipe down all bulk containers and return to their correct positions.

## 12.11 Slide Trays

Clean slide trays monthly by washing with warm soapy water and rinsing with running water. Always ensure slide trays are dry before use. Replace deformed or damaged trays.

## 12.12 Bulk Fluid Robot Probes (BOND-III only)

The probe on each bulk fluid robot requires monthly cleaning with 70% alcohol solution on a lint-free cloth or with an alcohol pad.

Check the probes for deterioration while cleaning and contact Leica Biosystems customer support if they need to be replaced.

### 12.12.1 Cleaning the Bulk Fluid Robot Probes


Clean the bulk fluid robot dispensing probes monthly, taking care not to bend the probes.



**WARNING:** The bulk fluid robots move along the slide staining assemblies to allow users access for cleaning. Only operators who have been warned of the potential hazards and have received adequate training should carry out this procedure.

- 1 Ensure that the processing module is idle with no runs loaded, scheduled or processing.
- 2 In the clinical client, select the processing module's tab to display its **System status** screen.
- 3 Click the **Maintenance** tab, and then click the **Clean bulk fluid robot probes** button.
- 4 Carefully read the instructions in the **Clean bulk fluid robot probes** dialog, lock all slide trays and click **Yes** to continue.

**Figure 12-15:** Wipe all three bulk fluid robot probes with 70% alcohol solution (probe is indicated)

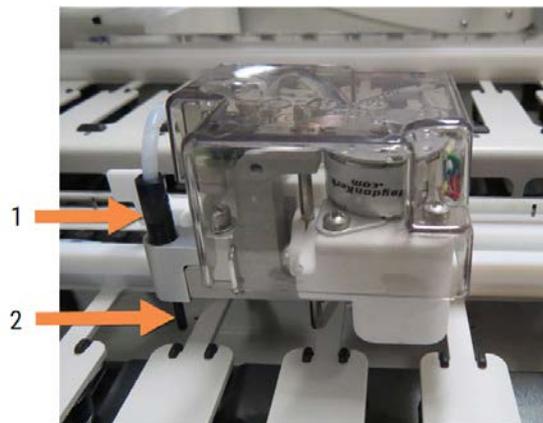

#### Legend

- 
- 1 Probe Connector
  - 2 Probe

- 5 When all three bulk fluid robots have moved to the front of the processing module, turn it off.

- 6 Gently clean the probes with 70% alcohol solution on a soft cloth, or with an alcohol pad.  
Be very careful not to knock the probes out of alignment.
- 7 In the dialog box, select the bulk fluid robot(s) you have cleaned successfully, and then click **Done**. Or, if you did not clean any, click the **None were cleaned** button.
- 8 Restart the processing module. During initialization, the bulk fluid robots will return to the home position at the back of the processing module.

## 12.13 Syringes

The BOND software notifies you to replace the syringe (BOND-MAX) or syringes (BOND-III) every six months or 7800 slides processed, whichever comes first (see [5.1.2 Hardware Status](#)).



Visually check the syringes, especially at the top of the syringe and under the plunger, for leaks once a week during initialization or while running Clean fluidics (see [12.5 Restart Processing Module](#)). Additionally, check the attached tubing and connectors.

When the notification appears, or if you find any leaks during the weekly inspection, contact Leica Biosystems customer support to arrange to have the syringe(s) replaced.



**WARNING:** Always wear protective clothing and gloves.

## 12.14 Power Supply Fuses

Legacy BOND-III and BOND-MAX Processing Modules have two mains fuses and two heater supply fuses. Alternate BOND-III and BOND-MAX Processing Modules have only two mains fuses. Fuse ratings differ according to the mains power supply. Fuses are located in the back cover (see [2.2.13 Back Cover](#)).

Legacy BOND-III uses the following fuses:

Fuse	Description	100–240 VAC Supply
F1	Heater Power Supply	3AG T8A 250V UL
F2	System Power Supply	3AG T8A 250V UL
F3	AC Mains (Neutral)	3AG T15A 250V UL
F4	AC Mains (Active)	3AG T15A 250V UL

Alternate BOND-III uses the following fuses:

Fuse	Description	100–240 VAC Supply
F3	AC Mains (Neutral)	3AG T15A 250V UL
F4	AC Mains (Active)	3AG T15A 250V UL

Legacy BOND-MAX Processing Modules use the following fuses:

Fuse	Description	100–240 VAC Supply
F1	AC Mains (Active)	3AG T15A 250V UL
F2	AC Mains (Neutral)	3AG T15A 250V UL
F3	24 V Heater Supply	3AG T8A 250V UL
F4	24 VDC Power Supply	3AG T8A 250V UL

Alternate BOND-MAX Processing Modules use the following fuses:

Fuse	Description	100–240 VAC Supply
F1	AC Mains (Active)	3AG T15A 250V UL
F2	AC Mains (Neutral)	3AG T15A 250V UL



**WARNING:** Do not bypass or short-circuit fuses.

Turn off the processing module and disconnect the power cord before changing fuses.

Replace fuses only with standard parts and if fuses blow repeatedly, contact customer support.

To replace the fuses, do the following:

- 1 Turn off the processing module.
- 2 Switch off the mains power supply and disconnect the mains power supply from the wall socket.
- 3 Unscrew the fuse cover.
- 4 Pull out the fuse cover and replace the fuse. Ensure you replace with a fuse of the correct specifications.
- 5 Push in the fuse cover and screw clockwise to lock the fuse in position. Do not over-tighten.

# 13 Cleaning and Maintenance (Miscellaneous)

## 13.1 Handheld Barcode Scanners

- [13.1.1 Cleaning the handheld barcode scanner](#)
- [13.1.2 Configuring the handheld barcode scanner](#)

### 13.1.1 Cleaning the handheld barcode scanner

Clean your handheld scanner weekly:

- Do not allow any abrasive material to touch the window
- Do not spray water or other cleaning liquids directly into the window

Clean the scanner by:

- First disconnecting the scanner from the controller or terminal.
- Removing dirt particles with a water-dampened, lint-free cloth.
- Cleaning the window with a lint-free cloth moistened with 70% alcohol solution.

If the handheld barcode scanner is not operating correctly, your service organization may request that it be re-initialized. You can also adjust the beeper volume on the scanner.

## 13.1.2 Configuring the handheld barcode scanner

- [13.1.2.1 Honeywell Barcode Scanner](#)
- [13.1.2.2 Zebra DS2208 Barcode Scanner](#)
- [13.1.2.3 Newland NLS-HR2000 Barcode Scanner](#)

### 13.1.2.1 Honeywell Barcode Scanner

#### Configuring the Honeywell Barcode Scanner

To re-initialize a Honeywell barcode scanner (USB), print a good-quality hard copy of this page and scan the barcodes in the order shown below:


**Scan 1: Remove Custom Defaults**



**Scan 2: Activate Defaults**



**Scan 3: Honeywell Scanner Configuration**

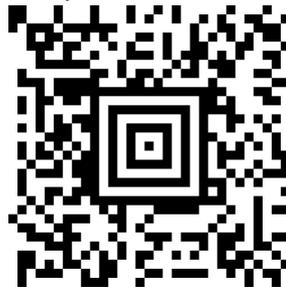

## Setting Beeper Volume

To set the beeper volume for a Honeywell barcode scanner, print a good-quality hard copy of this page and scan the barcode below that corresponds to the desired level.

Low volume



Medium volume



High volume



Beeper off



## Configuring Hands-Free Use

When the scanner is placed in its stand then it is normally in hands-free use, and you do not need to press the trigger when reading a barcode.

To set hands-free use ON or OFF for a Honeywell barcode scanner, print a good-quality hard copy of this page and scan the barcode below that corresponds to the desired functionality.

Hands-free use ON



Hands-free use OFF



## 13.1.2.2 Zebra DS2208 Barcode Scanner



### Configuring the Zebra Barcode Scanner

To re-initialize a Zebra barcode scanner (USB), print a good-quality hard copy of this page and scan each of the following barcodes in turn.


Scan 1: Set Defaults




Scan 2: Enable Code 128



Scan 3: Scan Options

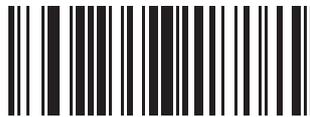


Scan 4: <DATA> <SUFFIX>

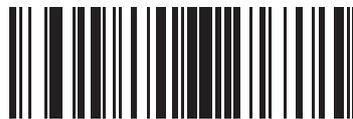

Scan 5: Enter



Scan 6: Override Caps Lock Key (Enable)

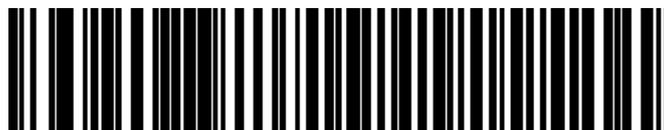

## Setting Beeper Volume

To set the beeper volume for a Zebra barcode scanner, print a good-quality hard copy of this page and scan the barcode below that corresponds to the desired level.

Low volume



Medium volume



High volume



## Configuring Hands-Free Use

When the scanner is placed in its stand then it is normally in hands-free use, and you do not need to press the trigger when reading a barcode.

To set hands-free use ON or OFF for a Zebra barcode scanner, print a good-quality hard copy of this page and scan the barcode below that corresponds to the desired functionality.

Hands-free use ON



Hands-free use OFF



### 13.1.2.3 Newland NLS-HR2000 Barcode Scanner



#### Configuring the Newland Handheld Barcode Scanner

To re-initialize a Newland barcode scanner (USB), print a good-quality hard copy of this page and scan the barcodes in turn:

**Scan 1: Enter Setup**



**Scan 2: Restore All Factory Defaults**



**Scan 3: Enable Aztec Code**



**Scan 4: Enable Micro QR**



**Scan 5: Exit Setup**



## Setting Beeper Volume

To set the beeper volume for a Newland barcode scanner, print a good-quality hard copy of this page and scan the barcode below that corresponds to the desired level.

**Scan 1: Enter Setup**



**Scan 2: Beep Volume**

Low volume 
Medium volume 
High volume 

**Scan 3: Exit Setup**



## Configuring Hands-Free Use

When the scanner is placed in its stand then it is normally in hands-free use, and you do not need to press the trigger when reading a barcode.

To set hands-free use ON or OFF for a Newland barcode scanner, print a good-quality hard copy of this page and scan the barcode below that corresponds to the desired functionality.

### Scan 1: Enter Setup



### Scan 2: Hands-Free Use



### Scan 3: Exit Setup



## Keyboard Layout

For AZERTY keyboards, scan the relevant bar code below.

**Scan 1: Enter Setup**



**Scan 2: AZERTY Keyboards**



**Scan 3: Exit Setup**



## 13.2 Slide Labeler

Manuals are provided with the slide labeler. Refer to these for instructions on cleaning and loading labels and printing ribbon. Clean monthly.

# 14 Using BOND Reagents

This chapter has general discussion of the science and clinical considerations for tissue staining on the BOND system. Full instructions for use are provided with each Leica Biosystems product. Refer to these instructions first for reagent specific information on specimen preparation, quality control, and assay interpretation. General guidance of these processes on the BOND system are described below.

- [14.1 Principle of the Procedure](#)
- [14.2 Specimen Preparation](#)
- [14.3 Quality Control](#)
- [14.4 Interpretation of Staining](#)
- [14.5 General Limitations](#)
- [14.6 References](#)

## 14.1 Principle of the Procedure

This section has general introductions to IHC and ISH. It also describes the BOND detection systems.

### Immunohistochemistry (IHC)

Immunohistochemical techniques have been used to detect specific antigens in cells or tissue for at least 50 years. The first reported method used fluorescent labels in 1941<sup>1</sup>. Subsequently, enzymes such as peroxidase, were introduced<sup>2</sup>. Today immunohistochemistry is used to facilitate cell recognition alongside routine H & E paraffin stains, and is an aid to the recognition of normal and abnormal cells. Immunohistochemical methods have become the “standard of care” in surgical pathology when classic methods alone fail to yield a definitive diagnosis<sup>3,4</sup>. However, there have been some reservations concerning reproducibility<sup>5</sup>, despite almost universal adoption.

Reagents on the automated BOND system demonstrate antigens in tissue sections by immunohistochemical techniques. In summary, a specific primary antibody binds to a section, then BOND detection system reagents visualize the complex.



A diagnostic “marker” is a reagent that is used to detect a specific antigen or DNA/RNA binding site in a tissue sample. The marker is the primary antibody in IHC, or the probe in ISH (see below).

## In Situ Hybridization (ISH)

Molecular biological techniques have largely advanced our understanding of disease. In situ hybridization combines both molecular biology and histology, allowing visualization of DNA or RNA in their cellular context. Since nucleic acid detection was first introduced in 1969<sup>6</sup>, improvements to in situ hybridization protocols have made it an increasingly valuable tool for clinical pathology as well as research.

In situ hybridization utilizes the complementary binding of nucleotide bases in DNA or RNA. A labeled nucleic acid probe binds specifically to its complementary sequence in fixed tissue or cell specimen. The probe is visualized through the application of an antibody against the label followed by BOND polymer detection reagents. The BOND automated system and reagents offer a reliable and efficient alternative to a cumbersome manual technique.

### 14.1.1 BOND Detection Systems

Leica Biosystems supplies a range of detection systems developed specifically for the BOND system. Foremost amongst these is the BOND Polymer Refine Detection™ system, which provides high intensity staining coupled with sharp definition without the use of streptavidin and biotin.

The BOND detection systems available are listed in the sections below.

- [14.1.1.1 BOND Polymer Refine Detection](#)
- [14.1.1.2 BOND Polymer Refine Red Detection](#)

#### 14.1.1.1 BOND Polymer Refine Detection



The BOND-PRIME Processing Module uses a different version of this detection system. It is supplied in a dual reagent system tray and the Hematoxylin reagent container is a separate ancillary item. For further information, refer to the separate BOND-PRIME user manual.

The BOND polymer DAB-based system, BOND Polymer Refine Detection, delivers high intensity staining coupled with sharp delineation of antibody binding to the target antigen or probe binding to the nucleic acid. The system does not use streptavidin and biotin, and therefore eliminates nonspecific staining as a result of endogenous biotin. Endogenous biotin is prevalent in some tissues such as gastrointestinal tract, kidney, liver, and breast carcinoma. BOND polymer detection systems have higher sensitivity than labeled streptavidin-biotin systems, resulting in lower antibody concentrations and faster turnaround times.

At each step the BOND system incubates the sections for a precise time, then washes the sections to remove unbound material. Protocol steps including incubation, washing, and interpretation of results are carried out as described within BOND Polymer Refine Detection instructions for use. Results are interpreted using an optical light microscope, and aid in the differential diagnosis of pathological processes, that may or may not be associated with a particular antigen.

If stronger intensity is desired the following options are available for all BOND polymer detection systems:

- Increase the incubation times for the primary antibody or probe and/or detection system components.
- Use a BOND DAB Enhancer step.
- For IHC only, increase the primary antibody concentration.



These three options are not available for the Bond Oracle™ HER2 IHC System.

The BOND Oracle HER2 IHC System is a complete system for determining the presence of the target protein and therefore the suitability of treatment with the targeted therapy. This assay is provided as a total, optimized system with the ready-to-use antibody, detection reagents, control reagents and control slides to provide complete quality assurance for the diagnostic result. The assay is based on IHC methodology. Full instructions for use are provided with the system. Use these instructions to set up runs. Due to the nature of HER2 IHC testing, it is of the utmost importance that these instructions are followed exactly so as not to invalidate the assay.

### 14.1.1.2 BOND Polymer Refine Red Detection



The BOND-PRIME Processing Module uses a different version of this detection system. It is supplied in a dual reagent system tray. For further information, refer to the separate BOND-PRIME user manual.

The BOND Polymer Refine Red Detection™ has the same advantages as the DAB-based polymer detection systems described above, but Fast Red chromogen is used for visualization instead of DAB. The system is suited for use on tissues such as skin where tissue pigments can be mistaken for DAB.

The BOND Polymer Refine Red Detection system is a highly sensitive Compact Polymer™ system conjugated to alkaline phosphatase that provides bright fuchsia red immunostaining, as well as hematoxylin counterstain (including bluing).



Fast Red chromogen is chemically unstable in normal laboratory conditions. Be sure to strictly follow user instructions for BOND Polymer Refine Red Detection to maintain chromogen efficacy. Always place control tissue on the same slide as patient tissue to allow rapid detection of any deterioration in the system.



Leica CV Ultra Mounting Media is recommended for use with BOND Polymer Refine Red Detection system. Other mountants may not preserve the intensity of staining initially obtained.

The steps for the BOND Polymer Refine Red Detection system are:

- 1 Application of the specific primary antibody.
- 2 Incubation with a post primary reagent.
- 3 Incubation with the polymer reagent, which comprises polymeric alkaline phosphatase (AP) tertiary antibody conjugates.
- 4 Visualization of the complex with substrate chromogen, Fast Red, via a red precipitate.
- 5 Hematoxylin counterstaining allows the detection of cell nuclei.

Incubation, washing, and interpretation of results are carried out as described for the BOND Polymer Detection (DAB).

## 14.2 Specimen Preparation

This section discusses the preparation of tissue for staining.

- [14.2.1 Materials Required](#)
- [14.2.2 Tissue Preparation](#)
- [14.2.3 Dewaxing and Baking](#)
- [14.2.4 Epitope Retrieval](#)

### 14.2.1 Materials Required

The following materials are required for immunohistochemical and in situ hybridization staining using the BOND system.

#### 14.2.1.1 Common Materials

- Fixative – recommended 10% Neutral buffered formalin
- Paraffin wax
- Tissue processor and embedding center
- Positive and negative tissue controls (see [14.3 Quality Control](#))
- Microtome
- Drying oven
- Mounting medium, resin-based or aqueous-based
- Charged microscope slides (e.g. Leica BOND Plus Slides)
- BOND Slide Labels and Printer Ribbon
- Coverslips
- BOND Universal Covertiles or BOND-PRIME ARC Covertiles
- BOND-PRIME Suction Cups

- BOND-PRIME Mixing Well Plate
- Appropriate BOND or BOND-PRIME reagent system
- BOND Enzyme Pretreatment Kit
- BOND Dewax Solution or BOND-PRIME Dewax Solution
- Wash solution (prepared from BOND Wash Solution 10X Concentrate) or BOND-PRIME Wash Solution Concentrate
- Deionized water
- Alcohol (reagent grade\*)



\* Reagent grade alcohol comprises: Ethanol, greater than or equal to 90% (w/w); Isopropanol, no more than 5% (w/w); Methanol, no more than 5% (w/w).



For BOND-PRIME Processing Module, refer to the separate BOND-PRIME user manual.

## 14.2.1.2 Materials for IHC

In addition to the materials listed above, the following are required for IHC tests:

- Negative control reagents specific to primary antibodies (see [14.3 Quality Control](#))
- BOND or BOND-PRIME Epitope Retrieval Solution 1
- BOND or BOND-PRIME Epitope Retrieval Solution 2
- BOND ready-to-use primary antibodies, or primary antibodies diluted in BOND Primary Antibody Diluent in BOND open containers, 7 mL or 30 mL
- Mounting medium, resin-based or aqueous-based
- Titration kit, optional (see [14.2.1.4 Titration Kit](#))

## 14.2.1.3 Materials for ISH

In addition to the common materials listed above, the following are required for ISH tests:

- ISH probes
- Anti-fluorescein antibody
- Positive and negative control probes specific to ISH (see [14.3 Quality Control](#))

## 14.2.1.4 Titration Kit

The BOND Titration Kit consists of 10 empty containers and 50 inserts (6 mL) and is used when optimizing the concentration of primary antibodies for the BOND system. Small volumes of each primary antibody concentration can be prepared and placed into the inserts. Each container may be used for a total of 40 mL of reagent.

## 14.2.2 Tissue Preparation

We recommend 15 to 20 times the volume of tissue of 10% neutral-buffered formalin to fix tissue for immunohistochemical and in situ hybridization staining using the BOND system. Fixation can be performed at room temperature (15–25 °C).

For HER2 testing, see American Society of Clinical Oncology/College of American Pathologists tissue preparation recommendations<sup>10</sup> or consult your local guidelines and regulations.

To facilitate tissue cutting and prevent damage to microtome blades, decalcify osseous tissues prior to tissue processing<sup>11,12</sup>.

The US Clinical Laboratory Improvement Act (CLIA) of 1988 requires in 42 CFR 493.1259(b) that “The laboratory must retain stained slides at least ten years from the date of examination and retain specimen blocks at least two years from the date of examination.”<sup>13</sup> Consult local regulations for requirements at your facility.

Cut and pick up 3–5 µm thick sections on charged glass slides (some specific tissue types may require different section thicknesses). To dry tissue place the well drained slides in a 60 °C (±5 °C) oven for 10–30 minutes, or overnight at 37 °C. Slides can also be baked on the BOND-III and BOND-MAX Processing Modules. Slides must be well air-dried before baking. Consult references 13, 14 and 15 for further details on specimen preparation.

Affix slide labels to specimen and control slides as described in [4 Quick Start](#). Dewax, rehydration, and epitope retrieval are fully automated on the BOND system.

## 14.2.3 Dewaxing and Baking

Paraffin-embedded tissue sections for immunohistochemistry must first have the paraffin wax removed and the section rehydrated. The wax is removed using BOND or BOND-PRIME Dewax Solution and the sections are rehydrated. The BOND system includes Dewax protocols that automate this process.

Prior to dewaxing, the BOND-III and BOND-MAX Processing Modules can also bake the tissue to improve its adhesion to the slide. The BOND system Bake and Dewax protocols automate both the baking and dewaxing processes.



Please note that tissue must be air-dried to remove any water before it is placed into a processing module for baking and dewaxing.

## 14.2.4 Epitope Retrieval

Formalin fixation of tissue causes cross-linking between the aldehyde and amino groups in the tissue and the formation of these bonds can result in variable loss of antigenicity due to the masking effect. Formalin forms methylene bridges which can change the overall three-dimensional shape of the epitope. Some epitopes are formalin-sensitive and show reduced immunoreactivity after formalin fixation whilst others are formalin-resistant.

Nucleic acids are surrounded by proteins, therefore permeabilization of tissue is needed to make target sequences accessible to the probe.

Epitope retrieval<sup>7,8</sup> can be achieved either by using heat induced epitope retrieval (HIER), enzyme pretreatment, or by a combination of both. HIER is the most extensively used method of epitope retrieval for IHC. The mechanism of HIER is not completely understood.

The hypothesis is that heating the section to a high temperature in an epitope retrieval solution hydrolyzes the cross-linkages formed in formalin fixation. This results in remodification of the epitope which can then be stained by immunohistochemistry. The important factors in HIER are temperature, time and pH of the retrieval solution. There are two different epitope retrieval solutions for use on the BOND system: a citrate-based buffer and an EDTA-based buffer.

Enzyme pretreatment uses proteolytic enzymes to break peptide bonds to expose the epitope/target nucleic acid sequence. The enzyme concentration and incubation time is proportional to the fixation time of the specimen and should be optimized accordingly. Enzyme pretreatment is only suitable for some epitopes but is used frequently in ISH protocols.

## 14.3 Quality Control

Differences in tissue processing and technical procedures in the user's laboratory may produce significant variability in results, necessitating regular performance of in-house controls in addition to the following procedures. Consult local guides and regulations, you might also find the "CLIA Compliance Handbook: The Essential Guide for the Clinical Laboratory Second Edition"<sup>22</sup> and the Proposed NCCLS guidelines for IHC<sup>14</sup> helpful.



Controls should be fresh autopsy/biopsy/surgical specimens fixed, processed and embedded as soon as possible in the same manner as the patient sample(s). Such a control monitors all steps of the analysis, from tissue preparation through to staining.



We strongly recommend placing appropriate control tissue on the same slides as patient tissue. See [6.2 Working with Controls](#) for further discussion.

See:

- [14.3.1 Assay Verification](#)
- [14.3.2 Tissue Controls](#)
- [14.3.3 Negative Reagent Control for IHC](#)
- [14.3.4 Reagent Controls for ISH](#)
- [14.3.5 The Benefits of Quality Control](#)

## 14.3.1 Assay Verification

Prior to initial use of an antibody, probe or staining system in a diagnostic procedure, verify the specificity of the antibody/probe by testing it on a series of in-house tissues with known expression representing known positive and negative tissues. Refer to the procedures outlined above and to the quality control recommendations of the CAP Certification Program 14 for Immunohistochemistry and/or the NCCLS IHC guidelines<sup>14</sup> or your local regulations and guidelines. Repeat these quality control procedures for each new antibody lot, or whenever there is a change in assay parameters. Quality control cannot be meaningfully performed on an individual reagent in isolation, since the matched reagents, along with a defined assay protocol, must be tested in unison before using a detection system for diagnostic purposes. Refer to each primary antibody package insert for tissues that are suitable for assay verification.

In addition to the above-mentioned assay verification procedures we recommend staining positive tissue controls monthly and comparing them to the same tissue control stained the previous month. Comparison of controls stained at monthly intervals serves to monitor the assay stability, sensitivity, specificity and reproducibility.

All quality control requirements should be performed in conformity with local, state and/or federal regulations or accreditation requirements.

## 14.3.2 Tissue Controls

### 14.3.2.1 Positive Tissue Control

- Indicates correctly prepared tissues and proper staining techniques.
- Include one positive tissue control for each set of test conditions in each staining run.
- Tissue with weak positive staining is more suitable than tissue with strong positive staining for optimal quality control and to detect minor levels of reagent degradation<sup>14</sup>.
- Using a multi-tissue control slide that contains tissues exhibiting strong, medium and weak antigen density/nucleic acid expression provides wide control coverage.
- If the positive tissue control fails to demonstrate positive staining, results with the test specimens should be considered invalid.
- We strongly recommend that you always run the BOND system with a control tissue on the same slide as the sample tissue to ensure optimum quality control.

### 14.3.2.2 Negative Tissue Control

- Examine after the positive tissue control to verify the specificity of the labeling of the target antigen by the primary antibody in IHC or target nucleic acid by the probe in ISH, and to provide an indication of specific background staining (false positive staining).
- The variety of different cell types present in most tissue sections frequently offers negative control sites, but the user should verify this.
- If specific staining occurs in the negative tissue control, results with the patient specimens should be considered invalid.

### 14.3.3 Negative Reagent Control for IHC

Use negative reagent control for IHC in place of the primary antibody with a section of each patient specimen to evaluate nonspecific staining and allow better interpretation of specific staining.

- Recommended ideal control reagent:
  - a For monoclonal antibodies use an antibody of the same isotype that is produced from tissue culture supernatant and in the same way as the primary antibody, but that exhibits no specific reactivity with human tissues.
 

Dilute this to the same immunoglobulin or protein concentration as the primary antibody using identical diluent (BOND Primary Antibody Diluent).

If fetal calf serum is retained in the neat antibody after processing, fetal calf serum at a protein concentration equivalent to the diluted primary antibody in the same diluent is also suitable for use.
  - b For polyclonal antibodies use an immunoglobulin fraction (or whole serum, if appropriate) of normal or nonimmune serum from the same animal source and the same protein concentration as the primary antibody, using identical diluent (BOND Primary Antibody Diluent).
- BOND Primary Antibody Diluent alone may be used as a less desirable alternative to the previously described negative reagent controls.
- The incubation period for the negative reagent control should correspond to that of the primary antibody.
- Use a separate negative reagent control slide for each retrieval method employed (including no retrieval) for a given primary antibody.
- When panels of several antibodies are used on serial sections, the negatively staining areas of one slide may serve as negative/nonspecific binding background controls for other antibodies.
- To differentiate endogenous enzyme activity or nonspecific binding of enzymes from specific immunoreactivity, stain additional patient tissues exclusively with substrate-chromogen or enzyme complexes and substrate-chromogen, respectively.
- The BOND system includes a default negative IHC control reagent, named “\*Negative”, that can be selected as the marker for any IHC protocol. It dispenses BOND Wash (see [10.5.2 Case and Slide Settings](#)).

### 14.3.4 Reagent Controls for ISH

#### 14.3.4.1 Positive Reagent Control

For in situ hybridization use the Positive Control Probe.

- Use in place of the probe with a section of each patient specimen to provide information on the preservation of nucleic acids in the tissue as well as accessibility of nucleic acids to the probe.
- The protocol for the Positive Probe Control should correspond to that of the test probe.
- If the Positive Control Probe fails to demonstrate positive staining, results with the test specimens should be considered invalid.

## 14.3.4.2 Negative Reagent Control

For in situ hybridization use the Negative Control Probe.

- The protocol for the Negative Control Probe should correspond to that of the test probe.
- Use in place of the probe with a section of each patient specimen to evaluate nonspecific staining and allow better interpretation of specific staining.
- The incubation period for the negative reagent control should correspond to that of the probe.
- Use a separate negative reagent control slide for each retrieval method employed (including no retrieval) for a given probe.
- To differentiate endogenous enzyme activity or nonspecific binding of enzymes from specific immunoreactivity, stain additional patient tissues exclusively with substrate-chromogen or enzyme complexes and substrate-chromogen, respectively.

## 14.3.5 The Benefits of Quality Control

The benefits of quality control are summarized in the table below.

<b>Tissue:</b> Fixed & processed like patient sample	<b>Specific Antibody/Probe</b> with detection system reagents	<b>Positive Reagent Control</b> plus same detection system reagents as used with specific antibody/probe	<b>Negative Reagent Control [ISH] or Non Specific Antibody or Buffer [IHC]</b> plus same detection system reagents as used with specific antibody/probe
<b>Positive Tissue Control:</b>  Tissue or cells containing target antigen/nucleic acid sequence to be detected (could be located in patient tissue).  The ideal control is weakly positive staining tissue to be most sensitive to antibody/nucleic acid degradation.	Controls all steps of the analysis.  Validates reagent and procedures used for staining.		Detection of nonspecific background staining
<b>Negative Tissue Control:</b>  Tissues or cells expected to be negative (could be located in patient tissue or positive control tissue)	Detection of unintended antibody cross-reactivity to cells/cellular components [IHC]  Detection of unintended probe cross- hybridization to other nucleic acid sequences or cells/cellular components [ISH]		Detection of nonspecific background staining
<b>Patient Tissue</b>	Detection of specific staining	Assessment of nucleic acid preservation/tissue fixation and/or retrieval [ISH]	Detection of nonspecific background staining

## 14.4 Interpretation of Staining

A qualified pathologist who is experienced in immunohistochemical and/or in situ hybridization procedures must evaluate controls and qualify the stained product before interpreting results.

The specificity and sensitivity of antigen detection are dependent on the specific primary antibody utilized. To ensure desired staining, optimize each specific antibody on the BOND system, varying the time of incubation and/or the specific antibody concentration. Failure to optimize the specific antibody may result in suboptimal antigen detection.

See:

- [14.4.1 Positive Tissue Control](#)
- [14.4.2 Negative Tissue Control](#)
- [14.4.3 Patient Tissue](#)

### 14.4.1 Positive Tissue Control

Examine the positive tissue control first to ascertain that all reagents are functioning properly.

When using DAB-based systems, the presence of a brown (3,3' diaminobenzidine tetrachloride, DAB) reaction product with the target cells indicates positive reactivity. When using RED Chromogen-based systems, the presence of a red reaction product with the target cells indicates positive reactivity. If the positive tissue controls fail to demonstrate positive staining, results with the test specimens should be considered invalid.

### 14.4.2 Negative Tissue Control

Examine the negative tissue control after the positive tissue control to verify the specificity of the labeling of the target antigen/nucleic acid by the primary antibody/probe.

The absence of specific staining in the negative tissue control confirms the lack of antibody/probe cross-reactivity to cells/cellular components.

If specific staining (false positive staining) occurs in the negative external tissue control, results should be considered invalid. Nonspecific staining, if present, usually has a diffuse appearance. Sporadic staining of connective tissue may also be observed in sections from excessively formalin-fixed tissues. Use intact cells for interpretation of staining results. Necrotic or degenerated cells often stain nonspecifically.

### 14.4.3 Patient Tissue

Examine patient specimens stained with the primary antibody/probe last.

Positive staining intensity should be assessed within the context of any nonspecific background staining of the negative reagent control. As with any immunohistochemical or in situ hybridization test, a negative result means that the antigen/nucleic acid was not detected, not that the antigen/nucleic acid was absent in the cells or tissue assayed.

If necessary, use a panel of antibodies to identify false negative reactions.

## 14.5 General Limitations

- Immunohistochemistry and in situ hybridization are multi-step diagnostic processes that require specialized training in the selection of the appropriate reagents; tissue selection, fixation, and processing; preparation of the slide; and interpretation of the staining results.
- Tissue staining is dependent on the handling and processing of the tissue prior to staining. Improper fixation, freezing, thawing, washing, drying, heating, sectioning or contamination with other tissues or fluids may produce artifacts, antibody trapping, or false negative results. Inconsistent results may be due to variations in fixation and embedding methods, or to inherent irregularities within the tissue <sup>18</sup>.
- Excessive or incomplete counterstaining may compromise proper interpretation of results.
- The clinical interpretation of any staining or its absence should be complemented by morphological studies using proper controls and should be evaluated within the context of the patient's clinical history and other diagnostic tests by a qualified pathologist.
- Tissues from persons infected with hepatitis B virus and containing hepatitis B surface antigen (HbsAg) may exhibit nonspecific staining with horseradish peroxidase <sup>19</sup>.
- Unexpected negative reactions in poorly differentiated neoplasms may be due to loss or marked decrease of expression of antigen or loss or mutation(s) in the gene(s) coding for the antigen. Unexpected positive staining in tumors may be from expression of an antigen not usually expressed in morphologically similar normal cells, or from persistence or acquisition of an antigen in a neoplasm that develops morphologic and immunohistochemical features associated with another cell lineage (divergent differentiation). Histopathologic classification of tumors is not an exact science and some literature reports of unexpected staining may be controversial.
- Reagents may demonstrate unexpected reactions in previously untested tissues. The possibility of unexpected reactions even in tested tissue groups cannot be completely eliminated due to biological variability of antigen expression/target nucleic acid in neoplasms, or other pathological tissues. Contact your local distributor or the regional office of Leica Biosystems to report any unexpected reaction.

### IHC

- Normal or nonimmune sera from the same animal source as secondary antisera used in blocking steps may cause false negative or false positive results due to autoantibodies or natural antibodies.
- False positive results in IHC may be seen due to nonimmunological binding of proteins or substrate reaction products. They may also be caused by pseudoperoxidase activity (erythrocytes), endogenous peroxidase activity (cytochrome C), or endogenous biotin (for example, liver, breast, brain, kidney) depending on the type of immunostain used <sup>16</sup>.
- False negative cases in IHC may result from various factors, including true antigen decrease, loss or structural change during tumor "dedifferentiation", or artefactual change during fixation or processing. As with any immunohistochemical test, a negative result means that the antigen was not detected, not that the antigen was absent in the tissues assayed.

## ISH

- False positive results in ISH may be seen due to cross-reactivity of the probe to other nucleic acid sequences as well as nonspecific binding of probe or detection reagents to tissue or tissue components<sup>18</sup>. Negative tissue and reagent controls should be included in testing to help identify false positive staining.
- DNA and RNA are subject to degradation by nuclease activity<sup>8,19</sup>. Therefore, it is important to test the Positive Control Probe with patient tissue in parallel with specific probe and patient tissue to detect nucleic acid degradation. The choice of fixative influences conservation of nucleic acids, tissue fixed in 10% neutral buffered formalin is recommended for this reason<sup>19</sup>. As with any in situ hybridization test, a negative result means that the nucleic acid was not detected, not that the nucleic acid was absent in the tissues assayed.

## 14.6 References

- 1 Coons AH et al. Immunological properties of an antibody containing a fluorescent group. *Proc Soc Exp Biol Med* 1941; 47:200-202.
- 2 Nakane PK and Pierce GB Jr. Enzyme labeled antibodies: Preparations and applications for the localizations of antigens. *J Histochem Cytochem* 1967; 14:929-931.
- 3 Elias JM, Gown AM, Nakamura RM, Wilbur DC, Herman GE, Jaffe ES, Battifora H, and Brigati J. Special report: Quality control in immunohistochemistry. *Am J Clin Path* 1989; 92:836.
- 4 Nadji M and Morales AR. *Immunoperoxidase techniques: a practical approach to tumor diagnosis*. ASCP Press, Chicago. 1986.
- 5 True LD ed. *Atlas of Diagnostic Immunohistopathology*. Lippincott, Philadelphia. 1990.
- 6 Gall JG, Pardue ML. Formation of RNA-DNA hybrid molecules in cytological preparation. *Proceedings of the National Academy of the Sciences of the United States of America*. 1969;63:378-383.
- 7 Shi S-R, Gu J, and Taylor CR. *Antigen Retrieval Techniques: Immunohistochemistry and Molecular Morphology*. Eaton Publishing, Natick. 2000.
- 8 Miller RT, Swanson PE, and Wick MR. Fixation and epitope retrieval in diagnostic immunohistochemistry: a concise review with practical considerations. *Appl Immunohistochem Mol Morphol*. 2000 Sep;8(3):228-35.
- 9 Bancroft JD and Stevens A. *Theory and Practice of Histological Techniques*. 4th Edition. Churchill Livingstone, New York. 1996.
- 10 Wolff et al. American Society of Clinical Oncology/College of American Pathologists Guideline Recommendations for Human Epidermal Growth Factor Receptor 2 Testing in Breast Cancer. *Arch Pathol Lab Med* 2007; 131:18-43.
- 11 Kiernan JA. *Histological and Histochemical Methods: Theory and Practice*. New York: Pergamon Press. 1981.
- 12 Sheehan DC. and Hrapchak BB. *Theory and Practice of Histotechnology*. St. Louis: C.V. Mosby Co. 1980.
- 13 Clinical Laboratory Improvement Amendments of 1988, Final Rule 57 FR 7163 February 28, 1992.
- 14 O'Leary TJ, Edmonds P, Floyd AD, Mesa-Tejada R, Robinowitz M, Takes PA, Taylor CR. Quality assurance for immunocytochemistry; Proposed guideline. MM4-P. National Committee for Clinical Laboratory Standards (NCCLS). Wayne, PA. 1997;1-46.
- 15 Battifora H. Diagnostic uses of antibodies to keratins: a review and immunohistochemical comparison of seven monoclonal and three polyclonal antibodies. *Progress in Surg Path* 6:1-15. eds. Fenoglio-Preiser C, Wolff CM, Rilke F. Field & Wood, Inc., Philadelphia.
- 16 College of American Pathologists (CAP) Certification Program for Immunohistochemistry. Northfield IL. <http://www.cap.org>
- 17 Wilkinson DG. The theory and practice of in situ hybridisation. In: Wilkinson DG. (ed.) *In Situ Hybridization A practical approach*. 2nd Edition. New York: Oxford University Press, 1998, pp.18-20.
- 18 Nadji M, Morales AR. Immunoperoxidase, part I: the techniques and pitfalls. *Lab Med* 1983; 14:767.
- 19 Omata M, Liew CT, Ashcavai M, and Peters RL. Nonimmunologic binding of horseradish peroxidase to hepatitis B surface antigen: a possible source of error in immunohistochemistry. *Am J Clin Path* 1980;73:626.
- 20 Wilkinson DG. *In situ hybridization: A practical approach*. 2nd Edition. Oxford University Press, Oxford. 1998.
- 21 Weiss LM, Chen Y. Effects of different fixatives on detection of nucleic acids from paraffin-embedded tissues by in situ hybridization using oligonucleotide probes. *The Journal of Histochemistry and Cytochemistry*. 1991;39(9):1237-1242.
- 22 Pontius CA, Murphy KA, Novis DA and Hansen AJ. *CLIA Compliance Handbook: The Essential Guide for the Clinical Laboratory*. 2nd Edition. Washington G-2 Reports, New York. 2003.

# 15 System Management (on BOND Controller)

This chapter has the following sections:

- 15.1 BOND System Manager
- 15.2 Hard Disk Redundancy

## 15.1 BOND System Manager

### 15.1.1 Overview

The BOND System Manager is a utility that allows you to easily view the current status of the primary software services used by the BOND system, allows you to stop and start individual services, such as the Print Spooler, or stop and start all services.



**WARNING:** Do not stop any of the services, as the BOND system will no longer operate correctly.

However, you may be asked by customer support to stop and then restart one or more services, as part of a system troubleshooting process.

To open the BOND System Manager, locate the BOND System Manager icon  in the Windows notification area and then click the icon.




The icon may be hidden from view; if so, click on the small up arrow to see it.

If a BOND System error occurs, a notification message will appear; you can click on the message to hide it.

To hide the BOND System Manager window, click the icon in the Windows notification area again.

## 15.1.2 BOND System Manager Window

Figure 15-1: The BOND System Manager window

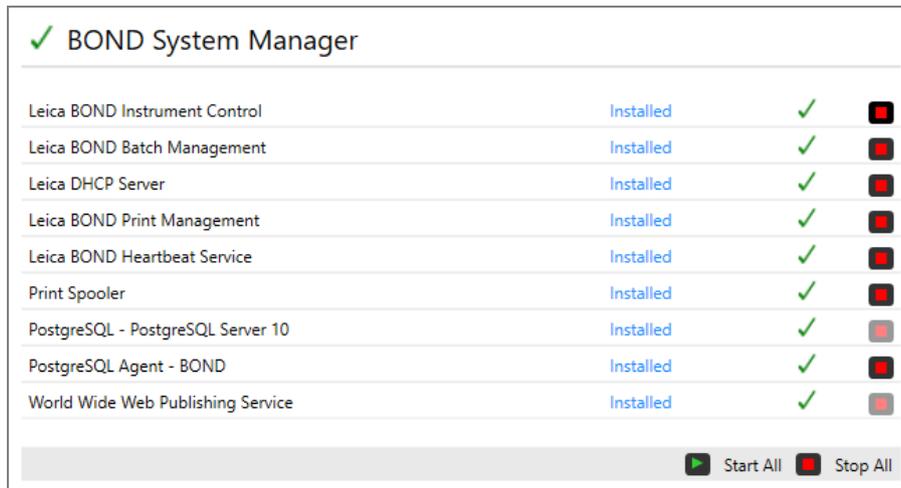

If there is a BOND System error, the BOND System Manager icon  updates to indicate the type of error that has occurred:

-  one or more services have stopped ( also appears at the top-left of the BOND System Manager screen)
-  unable to connect to the BOND system ( also appears at the top-left of the BOND System Manager screen)

In a BOND-ADVANCE installation this most likely means that:


- The controller has been turned off; or
  - The terminal network has been disconnected; or
  - The terminal network switch has been turned off.
-  BOND System Manager is unavailable ( also appears at the top-left of the BOND System Manager screen)

## 15.1.3 Stopping Services

To stop an individual service, click the red stop button to the far right of the service's name. Or, to stop all services, click the **Stop All** button below the list of services.

A pop-up dialog appears, asking you to confirm that you wish to stop services. Click **Yes** to continue, or **No** to cancel.

**Figure 15-2:** Confirmation required dialog

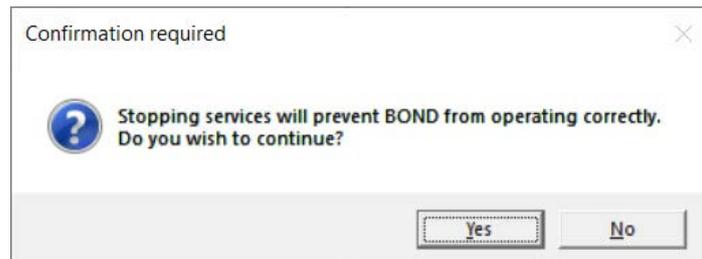

Some services cannot be stopped (the PostgreSQL - PostgreSQL Server and World Wide Web Publishing Service), because the BOND System Manager relies on them to function; their stop buttons are therefore disabled.

## 15.1.4 Starting Services




In most cases, when a service is stopped the BOND software will automatically restart that service within a few minutes.

If the BOND system is not operating as expected and you discover that one or more services are stopped, you can use the BOND System Manager to start the stopped service(s).

To start an individual service, click the green start button to the far right of the service's name. Or, to start all services, click the **Start All** button below the list of services.

**Figure 15-3:** BOND System Manager showing warning triangle (Print Spooler service stopped)

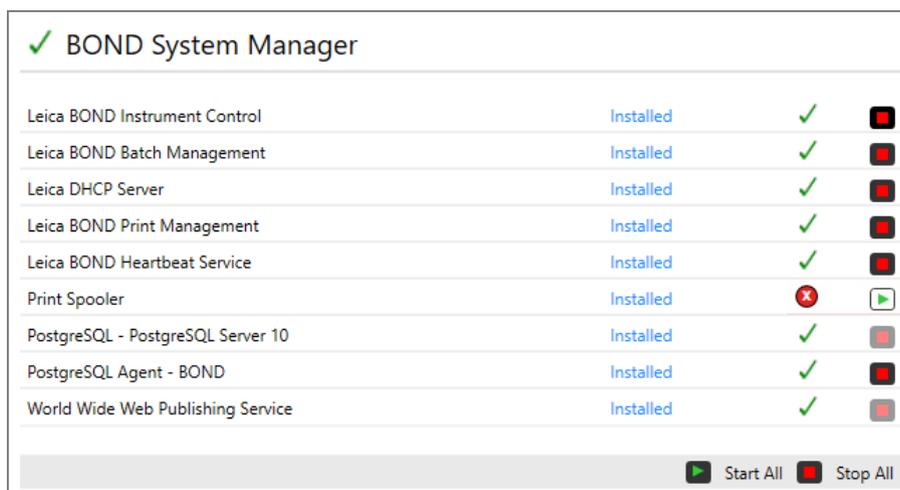

## 15.2 Hard Disk Redundancy

All BOND controllers and terminals include hard disk redundancy, to protect the BOND system in the event of a hard disk failure. This protection system continuously monitors the system's hard disks, and an icon in the Windows notification area shows the current status.

Icon	Indicates
	<b>Normal</b> - the hard disks are working properly.
	<b>Warning</b> - there is a problem with the system's hard disks. Contact customer support.
	<b>Error</b> - a hard disk failure has occurred. Contact customer support.
	<p><b>Busy</b> - this can appear when the hard disks are being verified, for example after an unexpected shutdown. The controller or terminal may run slowly during verification, which will usually take 2 to 3 hours to complete. The BOND system may be unusable during this period.</p> <p>After verification, the icon should return to its Normal status and normal hard disk operations will resume. However, if the icon indicates a Warning or Error status, contact customer support.</p>
	<b>Service not running</b> - the software service used to monitor the hard disk protection is not running. The icon initially shows this status when the controller or terminal is started. Contact customer support if the icon does not indicate Normal status after several minutes have elapsed.

# 16 BOND-ADVANCE Operations

## 16.1 Restarting the BOND-ADVANCE System



You should carry out this procedure only if:

- you have been instructed to do so by Leica Biosystems customer support, or
- you are preparing for a planned power outage.

Use the following method to restart the entire BOND system:

- 1 Ensure that all processing modules are idle (that is, no slide trays are locked).
- 2 Power off **all** processing modules.
- 3 Power off **all** terminals (click **Start** > **Shut down**).
- 4 Power off the secondary controller (if present) by briefly pressing the power button (see below for example).
- 5 Power off the primary controller by briefly pressing the power button (see [Figure 16-1](#)).



The power button could be located behind the controller's removable front cover, which may be locked. In this case, you must first obtain the key from the designated key holder.

Watch the dashboard screen while shutting down, as a second press of the power button may be required if the shutdown process stops at the Windows login screen. If this occurs, wait at least 90 seconds and then briefly press the power button again.



When you press the power button again, the controller will start to shut down. **Do not** hold for longer than 2 seconds as this may cause a "hard" reset and instantly turn off the controller. It may take up to 45 seconds for the controller to power off (power-button light turns off).

- 6 Wait for 2 minutes and then power on the primary controller.  
If a "Shutdown event tracker" window appears, close it by selecting **Cancel** or by pressing the <Esc> key.
- 7 Wait for 30 seconds and then power on the secondary controller (if present).
- 8 After the controllers are fully restarted, power on all terminals.

- 9 Power on all processing modules.
- 10 Log on to each terminal.

**Figure 16-1:** Power button location on controller front panel (shown with cover removed)



## 16.2 Switching to the Secondary Controller



These instructions apply only to BOND-ADVANCE systems that include a secondary (backup) controller. You should carry out this procedure only if:

- you have been instructed to do so by Leica Biosystems customer support, or
- the primary controller is not operational.


The secondary controller will then operate in standalone mode, and your system will no longer have a redundant backup capability. However, after you complete this procedure, the BOND system will continue processing as normal.



During the switchover process, data from the last 5 minutes' processing may be lost. Also, any LIS messages that were sent during the switchover process may be lost. Therefore, after the switchover has succeeded, check if any slides are missing. If this is the case, resend the slide data via the LIS or manually create the missing slides in BOND.

- 1 Close all instances of clinical and administration clients on all BOND-ADVANCE terminals.
- 2 Disconnect the Terminal network cable from the port labeled **T1** or **T2** on the primary controller, and then reconnect the cable to the same port on the secondary controller.

Figure 16-2: Controller Terminal Ports

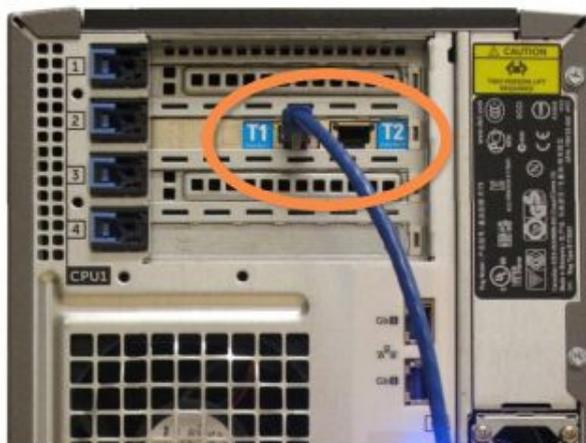


- 3 Disconnect the processing module's network cable from the port labeled **I1** or **I2** on the primary controller, and then reconnect the cable to the same port on the secondary controller.

Figure 16-3: Controller Processing Module Ports



- 4 Disconnect the Bridge network cable from port **B1** or **B2** on the primary controller.

Figure 16-4: Controller Bridge Ports

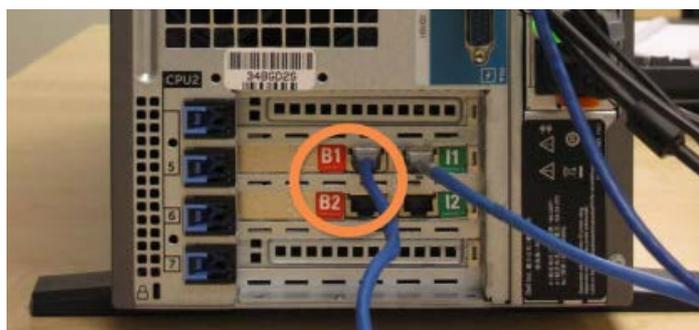

- 5 If there is an Ethernet cable (used for LIS connectivity) in port **Gb(1)** or **Gb(2)** on the primary controller, disconnect and then reconnect this cable to the same port on the secondary controller.

**Figure 16-5:** Ethernet ports used for LIS connectivity



The BOND-ADVANCE system detects that you have connected the network cables to the secondary controller, and displays a confirmation dialog on all terminals.

**Figure 16-6:** Dialog - secondary (backup) controller connected



The switchover is not reversible without on-site support from a Leica Biosystems representative.


- 6 To confirm that you want to continue with the switchover:
  - a Enter your Username and Password in the fields provided.
  - b Click **OK** to confirm.



If another user chooses to continue with the switchover before you do, the above dialog will disappear.

- 7 After confirming the switchover, power off the primary controller.
- 8 Wait until the system prompts that the conversion to standalone has succeeded (see [Figure 16-7](#)), then restart the clinical client and log on to the system as normal.

**Figure 16-7:** Dialog - conversion to standalone succeeded

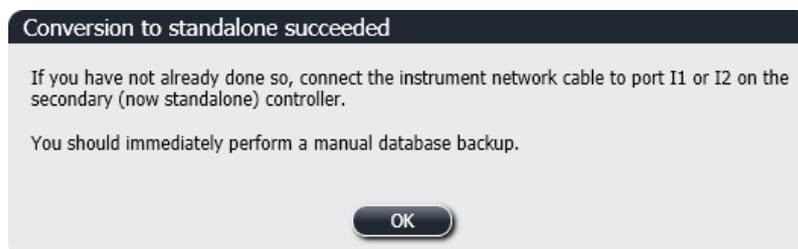

- 9 Immediately open the administration client and perform a manual database backup. See [10.5.1 Laboratory Settings](#).

After switchover to the secondary controller is complete, the status of all slides and processing modules should automatically update to reflect the latest system status. However, if any runs completed while the processing modules were disconnected from the controller, the run status will still appear as **In Progress**. In this case you must unlock the affected slide tray in order to update the status for the slide staining assembly.



Contact customer support to arrange service of your disconnected controller. It is necessary for a Leica Biosystems service representative to repair or replace the disconnected controller.

# 17 Slide Label Printer Replacement

## 17.1 Replace a Cognitive Cxi Printer on a Single Seat System

Use the following procedure to replace a Cognitive printer with a new Cognitive printer.

- 1 Turn off the power switch on the side of the old printer.
- 2 Disconnect the USB cable and the power supply cable from the rear of the old printer.
- 3 Connect the USB cable and the power supply cable to the new printer.
- 4 Turn on the power switch at the side of the new printer.  
The BOND Controller screen displays a message in the notification area (bottom right) of the desktop that the printer has been found.
- 5 Navigate to: **Windows Start > Devices and Printers** and find the newly added printer.
- 6 Right-click this printer and select **Properties**, then copy the printer's name.
- 7 Open the Administration client, **Hardware configuration** screen, **Slide labelers** tab as described in [10.6.3 Slide Labelers](#). Select the old printer you have replaced.
- 8 Paste (overwriting the existing name) into the **Printer name** field so that it becomes, for example, "Cognitive Cxi 2 inch 300 DPI TT (Copy 1)".
- 9 Click **Save**.
- 10 Print a test label to confirm the operation of the printer.

## 17.2 Replace a Cognitive Cxi Printer on BOND-ADVANCE System

It is necessary to set the Static IP address of the new printer to the same value as the old printer before connecting the new printer to the BOND-ADVANCE system.


The IP addresses for the printers start from 192.168.5.101. Only the last digit is different for each printer. For example, the printer IP address for printer 2 is 192.168.5.102.

The procedures below explain how to find out the Static IP address of the old printer and how to set that value in the new printer.

### Cognitive Printer Front Panel

Figure 17-1 shows the keypad and LCD display on the Cognitive Cxi printer.

Figure 17-1: Cognitive Printer LCD display and keypad

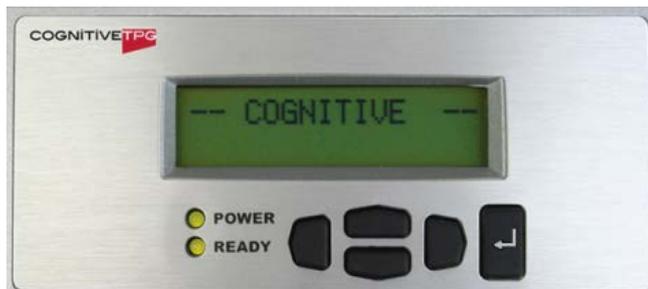

### Read IP Address of Old Printer

Perform the following procedure on the old printer to discover the IP Address to use with the new printer:



If you cannot use the display on the old printer for any reason, use the procedure [Find Printer IP Address \(on page 338\)](#) to find the IP address on the Controller.

- 1 Press .
 

The screen displays **Main Menu: Language Menu.**
- 2 Press  to display **Printer Setup** option.
- 3 Press  to display **Printer Setup: Comm. Menu.**
- 4 Press  to display **Comm. Menu: Timeout.**
- 5 Press  twice, to display **Ethernet.**
- 6 Press .
 

The screen displays **Ethernet - DHCP**

- 7 Press .  
The screen displays **DHCP Off**. (If it displays **DHCP On**, press  to change the value.)
- 8 Press .  
The screen displays the message: **Value has been set**.
- 9 Press  to display **Set Static IP**.
- 10 Press  to display the current setting.
- 11 Make a note of the Static IP Address.
- 12 Switch off the power to this printer and disconnect it from the power supply and from the network.

## Set Printer IP Address

Perform the procedure below to set the new printer to the correct Static IP Address.



**CAUTION:** Do not connect the new printer to the BOND network until you have performed the procedure below.

- 1 Connect the new printer to the power supply and turn on the power switch at the side of the printer.
- 2 Press .  
The screen displays **Main Menu: Language Menu**.
- 3 Press  to display **Printer Setup** option.
- 4 Press  to display **Printer Setup: Comm. Menu**.
- 5 Press  to display **Comm. Menu: Timeout**.
- 6 Press  twice, to display **Ethernet**.
- 7 Press .  
The screen displays **Ethernet - DHCP**.
- 8 Press .  
The screen displays **DHCP Off**. (If it displays **DHCP On**, press  to change the value.)
- 9 Press .  
The screen displays the message: **Value has been set**.
- 10 Press  to display **Set Static IP**.
- 11 Press  to display the current setting.
- 12 Enter the IP Address that you noted down from the old printer. Use the left and right buttons to move the cursor left or right, and use the up and down buttons to change the value.

13 Press .

The screen displays the message: **Value has been set.**

14 Press  several times to return to the main -- **COGNITIVE** -- screen.

15 Press the power switch on the side of the printer to the OFF position. Then switch it back to the ON position.

16 Connect the Ethernet cable to the new printer to connect it to the BOND network.

Figure 17-2: Ethernet connector




17 Open the Administration client and print a test label.

## Find Printer IP Address

If it is not possible to read the IP address on the old printer, use the following procedure to determine the IP Address for the new printer.

- 1 Log on to the BOND-ADVANCE Controller as BONDDashboard.
- 2 Press the Windows Logo key  + **M** to minimize the dashboard screen.
- 3 On the Windows taskbar, click the **Start** button and select **Devices and Printers**.
- 4 Right-click on the relevant Cognitive printer icon and select **Printer Properties** from the pop-up menu as shown in [Figure 17-3](#).


Figure 17-3: Select Printer Properties

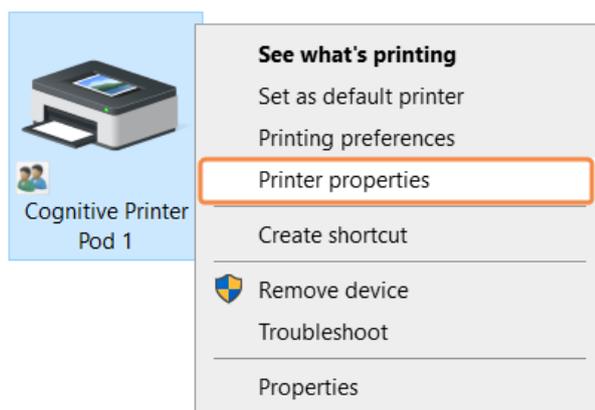

The system displays the **Properties** dialog box.

- 5 Select the **Ports** tab.

Figure 17-4: Printer Properties - Ports tab

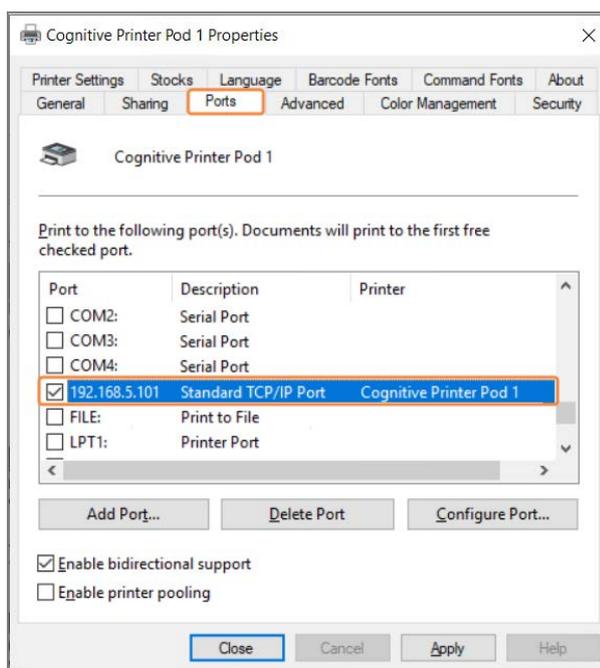

- 6 Make a note of the IP address in the **Port** column for the selected printer. (You may need to widen the **Port** column by dragging the column border.)
- 7 Click **Cancel** to close the dialog box.
- 8 Close the **Devices and Printers** window.
- 9 Press **Alt+Tab** to display the BOND Dashboard.
- 10 Use the IP Address from Step 6 to perform the procedure at [Set Printer IP Address \(on page 337\)](#).

## 17.3 Replace a Zebra Printer with a Cognitive Cxi Printer on a Single-seat System

Use the following procedure to replace a Zebra TLP 3842, GX430t, or ZD421 printer with a Cognitive Cxi printer.



If the Zebra printer was connected by a “parallel” cable, you can disconnect it from the BOND Controller. You require a USB cable to connect the Cognitive printer to the BOND Controller.

- 1 Turn off the power switch on the rear of the Zebra printer.
- 2 Disconnect the parallel or USB cable and the power supply cable from the rear of the printer.
- 3 Disconnect the Zebra printer power supply from the mains supply.
- 4 Connect the Cognitive printer power supply to the mains supply.
- 5 Connect the USB cable and the power supply cable to the Cognitive printer.
- 6 Turn on the power switch at the side of the printer.

The BOND Controller screen displays a message in the notification area (bottom right) of the desktop that the printer has been found.
- 7 On the Windows taskbar, click the **Start** button and select **Devices and Printers**.
- 8 Confirm that the printer appears as “Cognitive Cxi 2 inch 300 DPI TT”.
- 9 Log in to the BOND Administration client.
- 10 Open the Hardware screen, Slide labelers tab.
- 11 Click **Add printer** (bottom left of screen).
- 12 In the right panel on the screen, enter:
  - **Display name:** use the printer name: Cognitive Cxi 2 inch 300 DPI TT
  - **Printer name:** the same name again
  - **Host name:** leave this field blank.
  - **Printer type:** select the printer model: Cognitive Cxi
- 13 Click **Save**.
- 14 Right-click on the Zebra printer in the list.
- 15 Select **Delete** from the pop-up option.
- 16 The system displays the message: “Are you sure you want to delete the printer?”
- 17 Click **Yes**.

# 18 Specifications



This section does not apply to the BOND-PRIME Processing Module. Refer to the separate BOND-PRIME user manual.

- [18.1 System Specifications](#)
- [18.2 Physical Specifications](#)
- [18.3 Electrical Power and UPS Requirements](#)
- [18.4 Environmental Specifications](#)
- [18.5 Operating Specifications](#)
- [18.6 Microscope Slides](#)
- [18.7 Transport and Storage](#)

## 18.1 System Specifications

Network connection requirements	Ethernet IEEE802.3, 10/100/1000BASE-T
Maximum number of BOND-III and BOND-MAX processing modules	5 (multiple processing modules require an Ethernet switch)
Network cables	CAT5e or CAT6 shielded cables, with RJ-45 connectors
Ethernet switch requirements:	Ethernet IEEE802.3, 10/100/1000BASE-T
Single-seat	8-port Ethernet switch (supports up to 5 processing modules)
BOND-ADVANCE	8- or 16-port Ethernet switches (can be connected together to support up to 30 processing modules)
Device specifications	BOND controllers and terminals must be supplied by Leica Biosystems

## 18.2 Physical Specifications

	BOND-III	BOND-MAX
Dimensions	W – 790 mm (31.10 in) H – 1378 mm (54.25 in) D – 826 mm (32.4 in)	W – 760 mm (29.9 in) H – 703 mm (27.6 in) D – 800 mm (31.49 in)
Weight (dry)	238 kg (525 lb.)	120 kg (265 lb.)
Clearance requirements	600 mm (24 in) above 0 mm left 150 mm (6 in) right 0 mm at back, however users must be able to disconnect the mains power cable without moving the processing module.	
Maximum distance to external bulk waste container (BOND-MAX only)	~	1 meter (40 in)

## 18.3 Electrical Power and UPS Requirements

	BOND-III	BOND-MAX
Operating voltage (for processing modules with older-model power supplies, with one fan in back cover)	103.4 V to 127.2 V (for nominal voltage 110 V to 120 V) or 206.8 V to 254 V (for nominal voltage 220 V to 240 V)	
Operating voltage (for processing modules with newer-model power supplies, with two fans in back cover)	90 V to 264 V (for nominal voltage 100 V to 240 V)	
Mains frequency	50/60 Hz	50/60 Hz
Power consumption	1200 VA	1000 VA

## 18.4 Environmental Specifications

	BOND-III	BOND-MAX
Maximum operating temperature	35 °C (95 °F)	35 °C (95 °F)
Minimum operating temperature	5 °C (41 °F)	5 °C (41 °F)
Temperature required to meet staining performance requirements	18–26 °C (64–79 °F)	18–26 °C (64–79 °F)
Operating humidity (non-condensing)	30 to 80% RH	30 to 80% RH
Maximum operating altitude	0 to 1600 m (5250 ft.) above sea level	0 to 1600 m (5250 ft.) above sea level
Sound pressure level output (at 1 m)	< 85 dBA maximum < 65 dBA normal operation	< 85 dBA maximum < 65 dBA normal operation
Maximum heating energy output	1200 VA	1000 VA

## 18.5 Operating Specifications




	BOND-III	BOND-MAX
Slide capacity	30 at a time. Finished trays (10 slides) may be replaced continuously.	
Reagent container capacity	7 mL and 30 mL	7 mL and 30 mL
Reagent container dead volume	555 µL (7 mL) and 1618 µL (30 mL)	
Reagent container reserve volume	280 µL (7 mL) and 280 µL (30 mL)	
Titration container capacity	6 mL	6 mL
Titration container dead volume	300 µL	300 µL
Titration container reserve volume	280 µL	280 µL
Number of reagent containers	36	36
Bulk reagent container capacity	2 L or 5 L	1 L or 2 L
Hazardous waste container capacity	5 L	2 L
Standard waste container capacity	2 x 5 L	~
External bulk waste container capacity	~	9 L
Chemical compatibility	All BOND reagents 70% alcohol solution (for cleaning purposes)	

	BOND-III	BOND-MAX
Temperature indication	Defaults (these can be changed by service representatives): Warm: 35 °C, Hot: 80 °C	
Maximum permitted pressure for gas and liquid connections	1.0 bar	2.5 bar
Service life	7 years	7 years
BOND Cybersecurity certificate expiry	10 years	10 years

## 18.6 Microscope Slides

Dimensions	Width: 24.64–26.0 mm (0.97–1.02 in) Length: 74.9–76.0 mm (2.95–2.99 in) Thickness: 0.8–1.3 mm (0.03–0.05 in)
Label area	Width: 24.64–26.0 mm (0.97–1.02 in) Length: 16.9–21.0 mm (0.67–0.83 in)
Material	Glass, ISO 8037/1
Usable area	Refer to the following diagrams. The dispense volume refers to the settings you can choose when setting up slides using the BOND software (see <a href="#">6.3 Working with Cases</a> ).

**Figure 18-1:** The usable areas of slides for the BOND Processing Modules

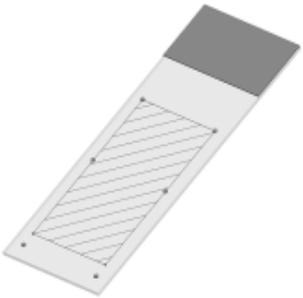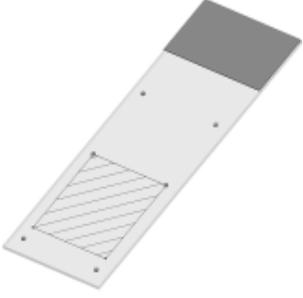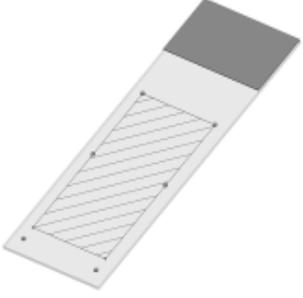	100 µL	150 µL
BOND-III		
BOND-MAX		

## 18.7 Transport and Storage

Storage temperature	-10 to +35 °C (14 to +95 °F)
Storage humidity (non-condensing)	10 to 85% RH
Transport temperature	-20 to +50 °C (-4 to +122 °F)
Transport humidity (non-condensing)	10 to 85% RH
Shipping methods	Road, rail, air, and sea freight compatible.

Please note the above information is for packaged processing modules only.

Refer to [18.4 Environmental Specifications](#) for unpacked processing modules.

# Index

## A

---

About BOND, dialog.....	87
access level, see user roles.....	78, 228
adding	
case.....	140
panel.....	149
reagent.....	201
slide.....	146
administration client.....	227
administrator, user role	
description.....	78
setting.....	228
alarms.....	84
architecture of BOND system.....	72
aspirating probe	
cleaning.....	293
description.....	56
assay verification.....	318
audit trail.....	241
automatic slide identification.....	122

## B

---

back cover, description.....	61
back up database.....	244
baking.....	316
barcode scanner, handheld	
cleaning.....	302
configuring.....	303
description.....	64
register detection system.....	209
BOND-ADVANCE, description.....	73

BOND Aspirating Probe Cleaning System.....	293
BOND controller.....	72
BOND Polymer Refine Detection System.....	312
BOND system.....	36
BOND System Manager.....	326
Bulk container lighting system.....	52
bulk containers.....	50
cleaning & maintenance.....	279
disabling.....	247
status.....	116
bulk fluid probes	
cleaning.....	299
bulk fluid robots, description.....	57

## C

---

case & slide default settings.....	243
case ID	
LIS, duplicate.....	231
vs. case number.....	139
cases	
adding.....	140
copying.....	142
default settings.....	243
deleting.....	142
duplication.....	141
editing.....	142
entering details, Quick start.....	96
expiration.....	141
identification.....	139
impromptu creation.....	156
LIS.....	265
resurrection.....	141
cautions.....	9
CE marking.....	11

CISPR 11 (EN 55011).....	12	reagent.....	203
classification of equipment.....	12	slide.....	149
clean fluidics, maintenance procedure.....	293	detection systems	
cleaning.....	275	BOND Polymer Refine.....	312
cleaning schedule.....	276	BOND Polymer Refine Red.....	313
compatibility		BOND, overview.....	312
bulk reagents with ancillary reagents.....	202	description.....	69
slides.....	160	inventory report.....	212
configure BOND system.....	227	registration.....	208
contact Leica Biosystems.....	3	dewaxing.....	154, 316
controller, see BOND controller.....	72	dip test.....	205
controls		disable bulk containers.....	247
negative reagent for IHC.....	319	dispense type.....	190
reagent for ISH.....	319	dispense volume.....	150
tissue.....	318	doctors list.....	144
working with.....	137	drip trays.....	296
copyright.....	1	bulk container.....	297
covers		processing module tray.....	298
cleaning.....	296	duplicate case ID	
Covertiles.....	67	BOND cases.....	141
cleaning & maintenance.....	286	LIS cases.....	231
<b>D</b>		duplicate reagent steps (in protocols).....	176
daily case option.....	143	<b>E</b>	
dashboard.....	82	electrical hazards.....	9
data fields, LIS slide.....	231	empty, mark reagent package as.....	208
database.....	88	epitope retrieval.....	154
backup.....	244	expired case.....	141
database update.....	239	export reports.....	85
dead volume.....	56	export slide data.....	224
delayed start.....	130	<b>F</b>	
deleting		facility, set.....	242
case.....	142	FCC.....	11
pod.....	249		

finishing a run.....	104
first steps.....	31
front cover.....	47
function bar.....	79
fuses.....	300

## G

glass slides	
specifications.....	344
glossary of symbols.....	13

## H

handheld barcode scanner	
cleaning.....	302
configuring.....	303
description.....	64
register detection system.....	209
hardware configuration.....	245
hardware status.....	109
hazard	
chemical.....	7
electrical.....	9
installation and transportation.....	9
mechanical.....	8
operational.....	10
hazardous waste.....	202
hazards	
electrical.....	9
installation.....	9
instrument operation.....	6
operational.....	10
reagent.....	10
heater errors.....	110
heaters.....	46

Help.....	86
accessing.....	30

## I

ID imager.....	45
cleaning & maintenance.....	296
ID scanner, handheld	
registering reagents.....	210
identification, product.....	1
identifying slides	
automatic.....	122
manual on-board.....	123
manually.....	149
IEC 60417.....	15
IHC, principle of.....	311
important information for all users.....	1
impromptu slide and case creation.....	156
incompatible slides.....	122
installation and transportation hazards.....	9
installation hazards.....	9
instructions for in vitro diagnostic equipment for professional use.....	11
instrument operation hazards.....	6
intended use statement.....	11
inventory screen, reagents.....	203
ISH, principle of.....	312
ISO 15223-1.....	13
ISO 7000.....	14
ISO 7010.....	18

## L

label	
and LIS.....	272
configuration.....	232

information types.....	236	maintenance schedule.....	276
overview.....	152	Maintenance screen.....	132
printing.....	152	maintenance, preventative.....	275
Quick start.....	99	manual slide identification.....	149
label ID.....	154	manufacturer.....	1
labeler, slide.....	65	materials required.....	314
laboratory configuration.....	241	mechanical hazards.....	8
layout, label.....	232	minimum stock setting.....	207
legal notices.....	1	mixing station.....	56
license, LIS-ip.....	231	cleaning.....	295
lid.....	44	multi-seat installation.....	72-73
cleaning.....	296	Multiplex staining.....	164
lifetime, case.....	141		
LIS integration package.....	263	<b>N</b>	
case & slide data.....	270	notifications.....	84
cases.....	265		
configuration in BOND.....	230	<b>O</b>	
connection & initialization.....	268	open containers.....	69
errors.....	268	refill.....	208
get LIS data.....	267	operational hazards.....	10
license.....	231	operator, user role	
LIS properties.....	267	description.....	78
priority slides.....	267	setting.....	228
public marker names.....	266	<b>P</b>	
slide labels.....	272	panel	
slides.....	266	adding.....	149
status panel.....	265	create.....	214
terminology.....	264	editing.....	215
LIS slide data fields.....	231	screen.....	214
LLS (liquid level sensing).....	205	parallel multiplex staining.....	164
loading slides.....	99	password, BOND.....	229
log, service.....	88	PDF, reports.....	85
<b>M</b>			
maintenance.....	275		
Maintenance report.....	133		

pod		running overview.....	32
description.....	72-73	setup screen.....	163
management.....	248	staining.....	191
power supply fuses.....	300	status screen.....	131
power switch.....	60	viewing.....	169
preventative maintenance.....	275	public marker names.....	266
print reports.....	85		
print slide labels.....	152	<b>Q</b>	
printer		quality control.....	317
slide labeler.....	65	benefits of.....	321
priority slides, LIS.....	267	Quick start.....	93
probe dispenses.....	166		
processed case lifetime.....	141	<b>R</b>	
processing module		reagent.....	194
cleaning & maintenance.....	275	adding/editing.....	201
configuration.....	245	deleting.....	203
description.....	38	determining volume.....	205
initialization.....	44	empty package.....	208
restart.....	292	fixing problems.....	114
specifications.....	342	identification.....	197
states of.....	109	inventory report.....	212
tabs.....	108	inventory screen.....	203
transport & storage.....	345	loading.....	100
processing module operation.....	6	management.....	194
product identification.....	1	manual identification.....	211
protocol.....	163	panels screen.....	214
editing.....	172, 239	refill open container.....	208
editing for multiplex stain.....	167	registration.....	208
finishing a run.....	104	setup screen.....	199
importing.....	186	substitution.....	198
list.....	168, 230	usage report.....	213
list of predefined protocols.....	191	reagent hazards.....	10
preparation.....	192	reagent segment	
prestaining.....	192	description.....	172
reagent segment, description.....	172	editing.....	174
reports.....	190	reagent status.....	111
running.....	103		

reagent steps (in protocol)	
duplicating.....	176
reagent trays	
description.....	68
red, detection system.....	313
red, highlight in Reagent inventory screen.....	207
refill open container.....	208
registering reagents and detection systems.....	208
regulatory notices.....	11
regulatory symbols.....	13
Replace a Cognitive Cxi Printer.....	335-336
Replace a Zebra Printer.....	340
reports.....	85
brief slide history.....	226
case.....	222
export slides.....	224
protocol.....	190
reagent usage.....	213
run details.....	220
run events.....	220
slide processing summary.....	224
slide setup.....	155
system.....	87
restore database.....	244
resurrect	
BOND case.....	141
LIS case.....	231
retrieval.....	316
revision record.....	4
robot	
bulk fluid.....	57
bulk fluid guide rail.....	57
main robot and ID imager.....	45
main robot cleaning & maintenance.....	296
roles, user.....	78
setting.....	228
running a protocol, brief overview.....	32
<b>S</b>	
safety symbols.....	18
scanner, handheld	
cleaning.....	302
configuring.....	303
description.....	64
register detection system.....	209
schedule	
cleaning & maintenance.....	276
segment, reagent	
editing.....	174
segment, reagent, in protocol, description.....	172
sequential multiplex staining.....	164
service log.....	88
setting up	
reagents.....	100
slides.....	95
shutting down the software.....	75
single-seat installation.....	72
slide	
adding.....	146
area of use.....	150
automatic identification.....	122
compatibility.....	160
copying.....	148
default settings.....	243
deleting.....	149
dewaxing slides.....	154
editing.....	149
entering details, Quick start.....	97
export data.....	224
identification, manual.....	149
identification, manual on-board.....	123
impromptu creation.....	156
incompatible.....	122

loading.....	99	staining methods.....	164
setup.....	144	staining mode.....	146, 164
setup reports.....	155	starting a run.....	129
setup screen.....	136	delayed start.....	130
setup, overview.....	135	status screens.....	106
setup, Quick start.....	95	bulk containers.....	116
status after imaging.....	119	hardware status.....	109
slide history.....	216	LIS.....	265
defining a time period.....	218	protocol.....	131
screen.....	216	reagent status.....	111
slide ID.....	154	slide status.....	119
slide labeler.....	65	system.....	107
cleaning and maintenance.....	300	stopping a run.....	129
slide labels, see label.....	152	substituting reagents.....	198
slide processing summary.....	224	supervisor, user role	
slide staining assembly.....	46	description.....	78
cleaning & maintenance.....	287	setting.....	228
heaters.....	46, 110	symbols	
manually unlocking.....	290	safety.....	18
states of.....	108	symbols and markings.....	16
temperature indication.....	111	symbols glossary.....	13
slide trays.....	68	syringe.....	59
slides, glass, types and dimensions.....	66	cleaning & maintenance.....	300
software		system	
overview.....	71	architecture.....	72
shutting down.....	75	description.....	36
starting up.....	75	report.....	87
updates.....	88	specifications.....	341
specifications		status screen.....	107
electrical.....	342	system startup	
environmental.....	343	checks.....	94
glass slides.....	344	<b>T</b>	
operating.....	343	tables, sorting.....	81
processing module.....	342	tabs, processing module, on System status screen.....	108
system.....	341	temperature, indication of.....	111
staining			
interpretation of.....	322		

---

template, label.....	232
terminals.....	72
tissue preparation.....	316
titration containers.....	69
titration kit.....	315
top plate, replacing.....	289
trademarks.....	1
transport.....	345

## U

---

update database data.....	239
updating the software.....	88
UPI.....	197
user roles.....	78
setting.....	228
username.....	229
users, create and edit.....	228

## W

---

warnings.....	6, 84
wash block.....	56
cleaning.....	295
waste container	
cleaning & maintenance.....	285
description.....	70
status.....	116
work cell.....	73
work flow	
daily case option.....	143
impromptu slide and case creation.....	156